



### **NOSE ASSEMBLY DATA SHEET**

From Cordant Technologies

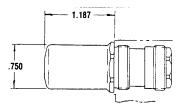

.750 in. = 19mm 1.187 in. = 30mm

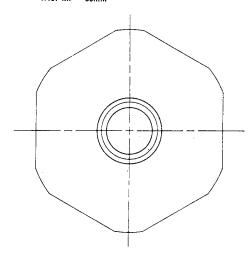


Huck International, Inc. Installation System Division 1 Corporate Drive - Kingston, NY 12401

©Huck International, Inc. 1995 ©Registered Trademark of Huck International, Inc., Irvine, CA TMTrademark of Huck International, Inc., Irvine, CA

# NOTES:

115887 ANVIL INSERT-

DEFLECTOR KIT 118744 AVAILABLE FOR THIS NOSE ASSEMBLY.

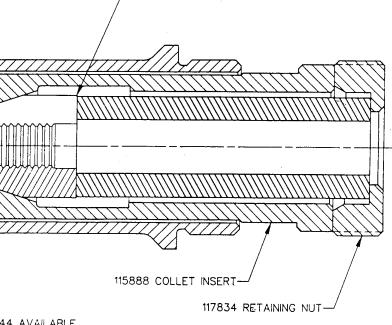

-118767 UNITIZED CHUCK JAW

U.S. Patent No. 4,347,728

## 99-1509

NOSE ASSEMBLY

TYPE: Non Self-Releasing FOR: HUCKBOLT (GP) -06

**TOOL:** 209 ; A209

ISSUED: 11-89

**REVISED:** 

ACTUAL SIZE

#### **Nose Assembly Maintenance**

1. Prepare tool per manual.

#### **WARNING**

Before maintenance or adjustments: POWERIG Hydraulic Unit must be disconnected from electrical or air supply. If not disconnected, severe personal injury and/or damage may result.

Disconnect POWERIG Hydraulic Unit's power source. Connect tool's hoses and controls to unit. Reconnect power source. Depress trigger for 30 seconds piston stops completely forward. Disconnect controls and RETURN hose - - tool piston must remain completely forward.

CAUTION: In severe conditions, VIBRATITE can be used on all threads to prevent loosening and damage. Carefully follow container's directions.

#### 2. Disaasembly/assembly as applicable:

Remove 209 shield and deflector use 5/64 hex key (#632 bttn. hd.) for shield; 3/32 hex key (#832 bttn. hd.) for deflector. Use 5\16 hex key or 5/8 socket wrench to remove rear retaining nut

disassemble components of nose assembly for inspection and maintenance.

#### Anvil:

Pressedin anvil is pressed out with drift and arbor press - - press new anvil in squarely to prevent cracking. Screw anvil into tool - - tighten wrenchtight.

#### Collet:

Slide assembled collet through 209 and into anvil. Use either 5/16 hex key or 5/8 socket wrench to install retaining nut - tighten wrenchtight.

#### Tool:

Reinstall 209 deflector and shield use 5/64 and 3/32 hex keys.

#### **WARNING**

Operating tool and/or installing fasteners without tool's shield and guard in place may cause serious personal injury.

#### 3. Checking nose assembly:

See WARNING - - connect controls and RETURN hose. Reconnect hydraulic unit to power source. Install fasteners in test plate of correct thickness with proper sized holes - - inspect installed fasteners

#### Notes:

- 1. *To increase jaw life*: Disassemble nose assembly periodically; clean and inspect components—use a pick to clean jaw grooves. **Caution:** Wash parts in **mineral spirits or isopropyl alcohol** only. Dry Oring and urethane jaw assemblies **immediately** after cleaning as prolonged contact with solvent causes swelling—dry other parts.
- 2. Spare parts - as applicable: Driving anvils; anvil inserts; jaws; springs; retaining rings.
- 3. Service items - as applicable: Adjustable wrench, 503044; NYLON brush, 105805 (05 & 06); NYLON brush, 105806 (08); 5/64 hex key, 502444; 3/32 hex key, 502293; 5/16 hex key, 502446; VIBRATITE, 505125.