

# 1. Feature

- A 10/100BASE-TX/ 100BASE-FX converter with a SMI port for management
- Built in a 10/100BASE-TX transceiver
- Built in a PHY for 100BASE-FX
- Built in a 2-port switch
  - Pass all packets without address and CRC check (optional)
  - Supports modified cut-through frame forwarding for low latency
  - Supports pure converter mode data forwarding for extreme low latency
  - Supports flow control for full and half duplex operation
  - Bandwidth control
  - Forward 1600 bytes packet for management
  - Optional forward fragments
- Built in 128Kb RAM for data buffer
- Supports 3.3v I/O tolerance SMI (MDC, MDIO) and MII registers for management
  - Configure local and remote IP113M through local SMI
  - Monitor local and remote IP113M through local SMI
  - Configure/ monitor TP port support (auto-negotiation or force 10M/100M, full/half)
  - Configure/ monitor flow control, bandwidth
  - Supports loop back test (In-band or out-band, auto or program)
  - The maintenance frame is compatible to TS-1000 standard (the Telecommunication Technology Committee, TTC)
- Supports Statistic Counters
- Supports auto MDI-MDIX function
- Supports link fault pass through function
- Supports far end fault function
- LED display for link/activity, full/half, 10/100
- Built in a watchdog timer to monitor internal switch error
- Supports EEPROM Configuration
- 0.25-um CMOS technology
- Single 2.5v power supply48-pin LQFP package

# 2. General Description

IP113M can be a 10/100BASE-TX to 100BASE-FX converter or a 100BASE-FX to 100BASE-FX repeater with an SMI port for management. It consists of a 2-port switch controller, a fast Ethernet transceiver and a PHY for 100BASE-FX. The transceivers in IP113M are designed in DSP approach with advance 0.25um technology; this results in high noise immunity and robust performance.


Besides store and forward mode, IP113M supports modified cut through mode and pure converter mode for low latency data forwarding. IP113M can forward packets up to 1600 bytes to meet requirement of extra long packets.

IP113M supports remote management function. Besides remote monitor and loop back test function defined in TS-1000, IP113M supports remote access functions. Local IP113M can access the MII register of remote IP113M by programming local IP113M's MII registers via SMI. IP113M implements the management function using the maintenance frame defined in TS-1000.


IP113M supports IEEE802.3x, collision base backpressure, and various LED functions, etc. These functions can be configured to fit the different requirements by feeding operation parameters via EEPROM interface or pull up/down resistors on specified pins.



# 3. Block Diagram

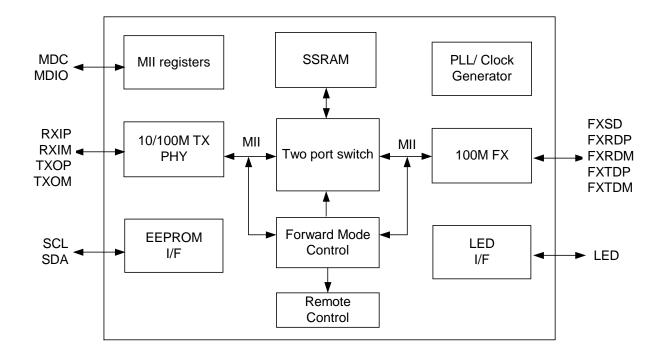


# 4. Application Diagram

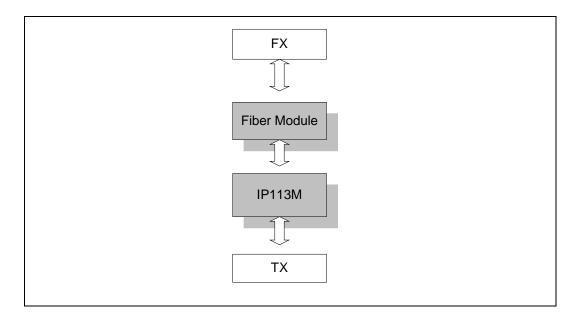




# 5. Applications


# 5.1. Managed converter (up to 31 pieces of IP113M in a chassis)

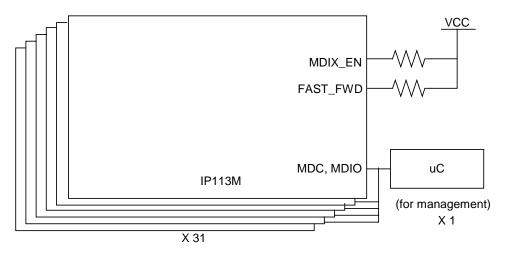

### 5.2. Un-managed converter

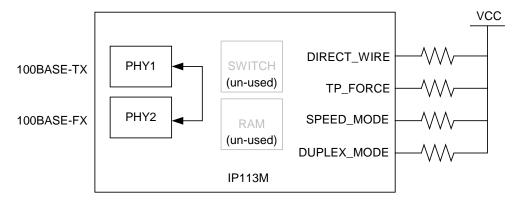


#### 5.3. Fiber Repeater

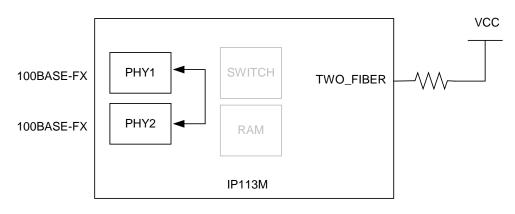



# 6. PIN Diagram

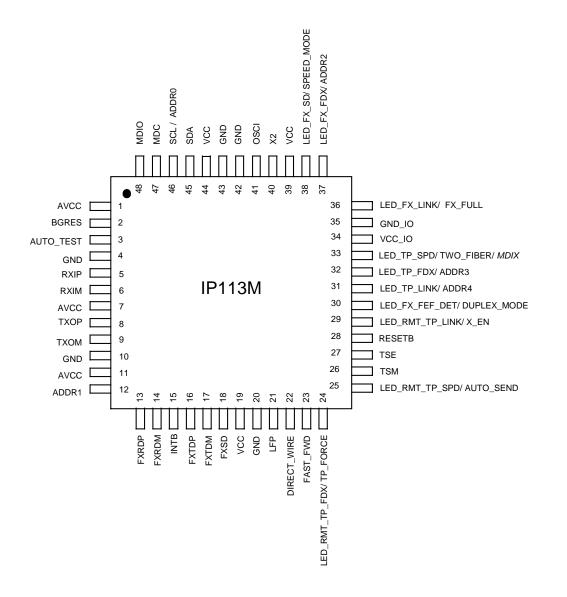



# 7. PIN Description

Туре	Description
I	Input pin
0	Output pin
IPL	Input pin with internal pull low
IPH	Input pin with internal pull high

Pin no.	Label	Туре	Description
Transceive	er (		
5, 6	RXIP, RXIM	Ι	TP receive
8, 9	TXOP, TXOM	0	TP transmit
2	BGRES	0	<b>Band gap resistor</b> It is connected to GND through a 6.19k (1%) resistor in application circuit.
18	FXSD	Ι	<b>100Base-FX signal detect</b> Fiber signal detect. It is an input signal from fiber MAU. Fiber signal detect is active if the voltage of FXSD is higher than 1.2v.
13, 14	FXRDP, FXRDM	I	Fiber receiver data pair
16, 17	FXTDP, FXTDM	0	Fiber transmit data pair



# 7. PIN Description (continued)

Pin no.	Label	Туре	Description
LED pins	•		
31	LED_TP_LINK	0	<b>TP port link LED</b> On: link ok, Off: link fail, Flash: link ok & activity (Flash: on for 20ms and off for 80ms)
33	LED_TP_SPD	0	TP port speed LED On: 100M, Off: 10M
32	LED_TP_FDX	0	<b>TP port full duplex LED</b> On: full, Off: half, Flash: half & collision happens (Flash: on for 20ms and off for 80ms)
36	LED_FX_LINK	0	<b>Fiber port link LED</b> On: link ok, Off: link fail, Flash: link ok & activity (Flash: on for 20ms and off for 80ms)
37	LED_FX_FDX	0	<b>Fiber port full duplex LED</b> On: full, Off: half, Flash: half & collision happens (Flash: on for 20ms and off for 80ms)
38	LED_FX_SD	0	Fiber port signal detect On: fiber signal detected, Off: fiber unplugged
30	LED_FX_FEF_DET	0	<b>Far end fault pattern received</b> It's on: for 80ms and off for 20ms if a far end fault pattern received. Off: there is no far end fault pattern received.
29	LED_RMT_TP_LINK	0	LED for link status of TP port of remote IP113M When AUTO_TEST is logic low, On: link ok, Off: link fail When AUTO_TEST is pulled high, it is always flash in a period of 100ms (On: 80ms, Off: 20ms)
25	LED_RMP_TP_SPD	0	LED for speed of TP port of remote IP113M When AUTO_TEST is logic low, On: 100M, Off: 10M When AUTO_TEST is pulled high, On: loop back test complete, Off: during loop back test
24	LED_RMT_TP_FDX	0	LED for full duplex of TP port of remote IP113M When AUTO_TEST is logic low, On: full, Off: half When AUTO_TEST is pulled high, On: loop back test ok, Off: loop back test fail

Note: The output of LED pin is logic low when the LED is on.



Pin no.	Label	Туре	Description
LED pins u	used as initial setting	mode c	during reset
29	X_EN	IPH	IEEE 802.3X enable on TP port and fiber port 1: enable (default), 0: disable
24	TP_FORCE	IPL	<ul> <li>Local TP port auto negotiation enable</li> <li>1: TP port supports auto-negotiation with limited capability defined in SPEED_MODE and DUPLEX_MODE.</li> <li>0: TP port supports auto-negotiation with 10M/100M, full/ half capability (default)</li> <li>The default value may be updated by programming EEPROM register 3.5 or MII register 20.13, too.</li> </ul>
38	SPEED_MODE	IPH	Local TP port speed 1: TP port has the 100Mb speed ability 0: TP port has the 10Mb speed ability only It is valid only if TP_FORCE is enabled.
30	DUPLEX_MODE	IPH	Local TP port duplex 1: TP port has the Full duplex ability 0: TP port has the Half duplex ability only It is valid only if TP_FORCE is enabled.
25	AUTO_SEND	IPL	Auto send the status to the remote IP113M 1: enable 0: disable (default)
36	FX_FULL	IPH	Set the duplex of fiber port 1: full duplex (default) 0: half duplex
3	AUTO_TEST	IPL	Auto loop back test 1: enable When IP113M detects a low-to-high transition on this pin, it will perform loop back test for once. 0: disable (default)



Pin no.	Label	Туре	Description
LED pins u	sed as initial setting	mode o	luring reset
33	TWO_FIBER	IPL	<ul> <li>Two fiber ports</li> <li>1: IP113M supports two-fiber ports mode. Both port 1 and port 2 are fiber ports. RXIP and RXIM are used as FXRDP and FXRDM for the second fiber port. TXOP and TXOM are used as FXTDP and FXTDM for the second fiber port.</li> <li>A special requirement for the fiber MAU of port1 in this application is that the output of FXRDP and FXRDM should be kept silent when fiber is unplugged.</li> <li>For some fiber MAUs, there are amplified noisy signals on FXRDP and FXRDM when fiber is unplugged. These amplified noisy signals, which include coupled idle patterns from FXTDP and FXTDM will cause the LEDs of port1 malfunction</li> <li>Generally, a 3.3-V small form factor type fiber MAUs (e.g. Agilent HFBR-5903) can meet this special requirement, but 5-V duplex-SC and -ST type fiber MAUs cannot. Port2 is not limited by this special requirement.</li> <li>0: IP113M supports one fiber port and one TP port. Port 1 is a TP port and port 2 is a fiber port.</li> </ul>



Pin no.	Label	Туре	Description								
MC operati	ion mode	•									
21	LFP	IPL	Link fault pass through (LFP) 1: enable Link status of one port is forwarded to the other port. 0: disable (default)								
22	DIRECT_WIRE	IPL	Store and fo								
23	FAST_FWD	IPL	frame compl	etely.	d a frame at the end of receiving a						
				ins to forward	d a frame after the first 64 bytes data be forced at 100M at this mode.						
				mes are not	buffered in IP113M to achieve the min e forced at 100M at this mode.						
			Auto-change IP113M will different in T	change forwa	ard mode itself if it detects the speed is						
			directly. In th	ne other mod pause frame	BM forwards IEEE802.3x pause frame les, IP113M doesn't forward e directly, it sends out pause frame s full.						
			DIRECT_ WIRE	FAST_FW D	Function						
			0	0	Store and forward switch mode (default)						
			0	1	Modified cut-through switch mode						
			1	0	Converter mode						
			1	1	Converter mode with auto-change-forward function						



Pin no.	Label	Туре	Description							
SMI interface										
47, 48	MDC, MDIO	I, IO	<b>SMI interface</b> The external MAC device uses the interface to program IP113M. MDIO is an open drain.							
31, 32, 37, 12, 46	ADDR[4:0]	IPL	<b>PHY address</b> The external MAC device uses the address to identify each IP113M in a chassis.							

Pin no.	Label	Туре	Description				
EEPROM interface							
45, 46	SDA, SCL	IPH, O	EEPROM interface				

Pin no.	Label	Туре	Description
Misc.			
28	RESETB	Ι	Reset It is low active.
41, 40	OSCI, X2	I, O	<b>Crystal pins</b> OSCI and X2 are connected to a 25Mhz crystal. If a 25MHz oscillator is used, OSCI is connected to the oscillator's output and X2 should be left open.
26, 27	TSM, TSE	I	Scan pins
15	INTB	0	<ul> <li>Interrupt</li> <li>0: an interrupt happens. Its output is low.</li> <li>1: no interrupt. Its output is high impedance and it needs an external pull up resistor.</li> </ul>



# 8. Functional Description

### Data forwarding

IP113M supports three types of data forwarding mode, store & forward mode, modified cut-through mode and pure converter mode. It forwards frame in spite of its address and CRC error. IP113M begins to forward the received data when it receives the frame completely. The latency depends on the packet length.

### Modified cut-through mode

IP113M begins to forward the received data when it receives the first 64 bytes of the frame. The latency is about 512 bits. The maximum packet length is up to1600 bytes at this mode. Please see pin description of FAST\_FWD for configuration information.

### Pure converter mode

IP113M achieves the minimum latency in this mode. It forwards the received data immediately when it begins to receive a frame. Both transceivers are interconnected via internal MIIs and the internal switch engine and data buffer are not used. TP port should be forced at 100M in this application. The packet length is not limited at this mode. Please see pin description of DIRECT\_WIRE for configuration information.

# **Fragment forwarding**

IP113M forwards CRC error packets but it will filter fragments when it works in modified cut-through mode. IP113M forwards fragments if user turns on bit 3 of MII register 20.

# TP port force mode

The TP port of IP113M can work at auto mode or force mode. The following table shows all of the combination of its TP port.

TP_FORCE	SPEED_MODE	DUPLEX_MODE	IP113M's capability
0	1	1	100/10M, Full/Half with auto-negotiation
0	1	0	100/10M, Half with auto-negotiation
0	0	1	10M, Full/Half with auto-negotiation
0	0	0	10M, Half with auto-negotiation
1	1	1	100M, Full with auto-negotiation
1	1	0	100M, Half with auto-negotiation
1	0	1	10M, Full with auto-negotiation
1	0	0	10M, Half with auto-negotiation



#### Remote management

IP113M supports remote monitor and configuration function. IP113M implement the function by exchanging maintenance frames on fiber ports between a pair of IP113Ms. The maintenance frames are not forwarded to TP ports. The frame format follows the TS-1000 standard.

#### Maintenance frame format at MII

TXD0	F0	F4	C0	C4	C8	C12	S0	S4	S8	S12	M0	M4	M8	M12	M16	M20	M24	M28	M32	M36	M40	M44	E0	E4
TXD1	F1	F5	C1	C5	C9	C13	S1	S5	S9	S13	M1	M5	M9	M13	M17	M21	M25	M29	M33	M37	M41	M45	E1	E5
TXD2	F2	F6	C2	C6	C10	C14	S2	S6	S10	S14	M2	M6	M10	M14	M18	M22	M26	M30	M34	M38	M42	M46	E2	E6
TXD3	F3	F7	C3	C7	C11	C15	S3	S7	S11	S15													E3	E7

TXEN

#### Bit definition of maintenance frame

Bit	Item	Description	Note
F7 – F0	Preamble	01010101	Fixed
C0	Discriminator for the maintenance signal	0	Fixed
C1	Direction	0: terminal MC → central MC 1: central MC → terminal MC (MC: media converter)	
C3 – C2	Command	00: Reserved 10: Indication 01: Request 11: Acknowledge	
C7 – C4	Version	0000	Fixed
C15 – C8	Control signal	00         00         00         01         : Loop test starts           00         00         00         00         : Loop test ends           00         00         00         10         : Status notice           addr[4:0]         RW         11         : IP113M R/W reg.	
S0	Condition of power	0: normal, 1: power off	
S1	Situation of receiving optical power	0: normal, 1: abnormal	
S2	Terminal/ network side link	0: link up, 1: link down If S11="1", S2="X"	
S3	MC (media converter) fails	0: normal, 1: abnormal	
S4	Informing way for optical receiving power off	0: maintenance frame 1: Far end fault indication	
S5	Status indication for loop test	0: normal mode, 1: under loop test	




### Bit definition of maintenance frame (continued)

Bit	ltem	Description	Note
S6	Information for notice of terminal link status (Available for option B or not)	<ul> <li>0: terminal IP113M does not support option B.</li> <li>1: terminal IP113M supports option B, which can inform speed, duplex, and auto-negotiation in terminal IP113M.</li> <li>If S11 = "1", S6="X'</li> </ul>	
S8 – S7	Terminal link speed	00: 10 Mbps 01: 100 Mbps 10: 1000 Mbps 11: others It is valid, if S6 = "1". If S2 or S11 = "1", S7, S8 = {X, X}	
S9	Duplex for the terminal side	1: full duplex, 0: half duplex It is valid, if S6 = "1". If S6 ="0", S9="0". If {S7, S8} = {1,1}, S9="X" If S2 or S11 = "1", S9="X"	
S10	Auto-negotiation capability for the terminal side	1: available, 0: un-available It is valid, if S6 = "1". If S6 ="0", S10="0". If {S7, S8} = {1,1}, S10="X" If S11 = "1", S10="X"	
S11	Number of interface in Terminal/ network side	0: one UTP 1: more than one UTP	
S15 – S12	Reserved		
M23 – M0	Vender code	Vender code for TTC standard 24 bits	
M47 – M24	Model number	Specified by vender	
E7 – E0	FCS	CRC – 8 FCS calculation area: C0 - M47	




#### Remote monitor

Users can instruct central IP113M to issue a status request frame to get status defined in TS-1000 by programming MII register 24. The terminal IP113M receives the status request frame and sends out its current status as a response frame onto the fiber port when it is available. The central IP113M receives the status frame and stores the status of terminal IP113M to its MII register 23. An acknowledge maintenance frame is store to MII register 26~30. The status of terminal IP113M is shown on LED of central IP113M.




#### **Remote control read**

Besides reading the status defined in TS-1000, users can instruct central IP113M to issue a remote control read frame to read the MII register of terminal IP113M by programming MII register 24. The bit 24[11:7] is filled with the address of register and bit 24[6:4] is filled with "011". The terminal IP113M receives the frame and sends out the content of the MII register to central IP113M when it is available. The central IP113M receives the frame and stores the data to MII register 27. An acknowledge maintenance frame is stored to MII register 26~30. The status of terminal IP113M is shown on LED of central IP113M.



#### Remote control write

Users can instruct central IP113M to issue a configure frame to write the MII register of terminal IP113M by programming MII register 24 and 25. The bit 24[11:7] is filled with the address of register and bit14[6:4] is filled with "111". MII register 25 defines the data. The terminal IP113M receives the configure frame, configures itself according to the content of the frame and sends out its current status as a response frame onto the fiber port when it is available. The status of terminal IP113M is shown on LED of central IP113M.

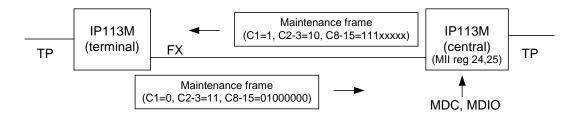




# Loop back test

IP113M supports two kind of loop back test function, in-band loop back test and out-band loop back test.

### Out-band loop back test

Users can instruct central IP113M to issue a maintenance frame onto the fiber port by programming MII register 24 to request a loop back test. Central IP113M does not generate test frames and users need an external packet source from PC.


1. Disconnect switch port and instruct the terminal IP113M to perform loop back and disable terminal T2 timer by programming central IP113M through SMI



#### 2. Terminal IP113M runs at loop back mode



3. PC forces test frames to central IP113M and terminal IP113M loops back the frames.




### 4. PC reports the loop back test result after sending all test frames.





5. Reconnect switch and instruct the central IP113M to end loop back test and enable T2 timer.






### Loop back test (continued)


### In-band loop back test

Besides performing the loop back test with an external packet source, IP113M supports an easy alternative. IP113M sends out private maintenance frame to do loop back test. All users have to do is to program MII registers through SMI.


1. Disabe receive function of central TP port and instruct the terminal IP113M to perform loop back and disable T2 timer by programming central IP113M through SMI




2. Terminal IP113M runs at loop back mode and acknowledges with maintenance frame

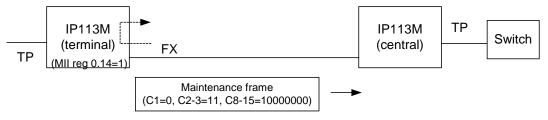

3. Central IP113M forces test frames to terminal IP113M and terminal IP113M loops back the test frames. Central IP113M checks the received test frame.



4. Central IP113M ends loop back test enables receive function of TP port and enable LP T2 timer

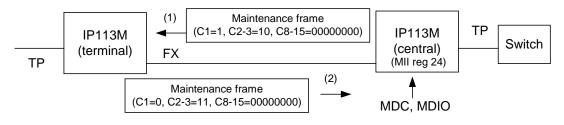



#### Loop back test (continued)

### Programming procedure for In-band loop back test

Step	Description	C1	C3~C2	C15~C8	Note
1	Set local IP113M TP receive disable				Set Reg. 20.14 off
2a	Set loopback T2 timer disable: maintenance frame	1	01	11 11 10 01	TS-1000: T2 timer disable
2	Set remote IP113M to be loop back mode enable: maintenance frame	1	01	00 00 00 01	TS-1000: loop back set
3	Remote IP113M sends back loop back acknowledge	0	11	00 00 00 01	
4	Send loop back test maintenance frame via SMI	1	01	11 01 10 11	Fill the S[15:0]
5	Remote link send back acknowledge	0	11	11 01 10 11	Send back S[15:0]
6	Local IP113M stores the loop back maintenance to Reg. 26~30 and checks CRC bit is in Reg. 26.12				
7	Repeat step 4~6 continuously				
8	Set remote IP113M to be loop back mode disable: maintenance frame	1	01	00 00 00 00	TC-1000: loop back end
9	Remote IP113M sends back loop back acknowledge	0	11	00 00 00 00	
10	Set local IP113M TP receive enable				Set Reg. 20.14 on

#### Auto in-band loop back test

Step	Description
1	Set pin AUTO_TEST to "1" (The following step is executed automatically by IP113M)
1.1	Central IP113M sends loop back start request to remote IP113M and goes to CST2 state.
1.2	Remote IP113M sends loop back start acknowledge to Central IP113M and enters loop back test mode.
1.3	Central IP113M goes to CST1 state and begins sending 15 frames in 64 bytes.
1.4	Remote IP113M loops back the received frames at the TP port's PMD sub-layer.
1.5	Central IP113M checks the loop back frames and reports the result.
2	The LED pin LED_RMT_TP_LINK is Flash (on 80ms / off 20ms) during the auto loop back test period (AUTO_TEST is "1").
3	The LED pin LED_RMT_TP_SPD indicates the loop back test complete (on) (when AUTO_TEST is "1"). The LED pin LED_RMT_TP_FDX indicates the loop back test ok (on) (when AUTO_TEST is "1")
4	If another auto loop back test is needed, set AUTO_TEST to "0" and then "1". That is, AUTO_TEST is triggered whenever there is a low-to-high transition on this pin.




### Remote monitor without SMI programming

# Auto sends (Status change notice)

IP113M sends out status frame without receiving status request frame if pin AUTO\_SEND is pulled high. It sends out the first status frame onto the fiber port when the link status of fiber port is ok. It sends out status frames when the status on TP port is changed. IP113M supports two types of frame. For a TS-1000 maintenance frame, C[9:8] is 2'b10 and S[15:0] is defined as that in TS-1000 standard. For an ICplus maintenance frame, C[9:8] is 2'b11 and S[15:0] is the content of MII register 22. It carries ICplus private defined information. User can select the frame type by programming MII register 20.10. Central IP113M uses the mechanism to get the status of the remote IP113M even if there is no SMI programming.


# Option A

Central IP113M sends indication frames to terminal IP113M if its status is changed.




# Option B

Terminal IP113M sends indication frames to central IP113M if its status is changed.



CRC polynomial for maintenance frame: X8 + X2 + X + 1




CRC calculation



### Link fault pass through

When the function is enabled, link status on TX port is propagated to the FX port and vice versa. If link fails on TX port of local IP113M, the FX port sends non-idle pattern to notice the remote FX port. The remote FX port forces its TX port link failure after receiving the non-idle pattern. Eventually, the link fault status of local TX port of a converter is propagated to the TX port of the remote converter by the mechanism. The link status of the remote TX port becomes off. Link LED is off for IP113M and its link partner. The operation is illustrated in the following figures.

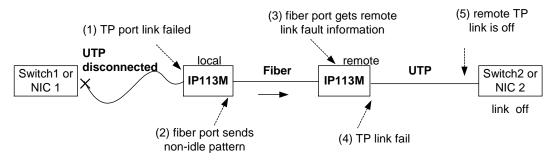


The procedure of link fault pass through

Normal case

remote						local
Switch1	UTP	IP113M	Fiber	IP113M	UTP	Switch2
LE		_LINK1 LE	l :D_FX_LINK1 LED_FX_	LINK2 LE	] :D_TP_LINK2	LED SW2

Link LED on SW1	LED_TP_LINK1	LED_FX_LINK1	LED_FX_LINK2	LED_TP_LINK2	Link LED on SW2
ON	ON	ON	ON	ON	ON

#### **Remote TP port disconnected**



Link LED on SW1	LED_TP_LINK1	LED_FX_LINK1	LED_FX_LINK2	LED_TP_LINK2	Link LED on SW2
Off	Off	Off	Off	Off	Off



# FX port disconnected

	remote Switch1	UTP	P113M	er IP113M	UTP	local Switch2
LED SW1 LED_TP_LINK1 LED_FX_LINK1 LED_FX_LINK2 LED_TP_LINK						ED N2
	Link LED on SW1	LED_TP_LINK1	LED_FX_LINK1	LED_FX_LINK2	LED_TP_LINK2	Link LED on SW2
ſ	Off	Off	Off	Off	Off	Off

### LED diagnostic functions for fault indication

LED_TP_LINK	LED_FX_LINK	LED_FX_SD	LED_FX_FEF_DET	Status
On	On	On	Off	Link ok
Flash	Flash	On	Off	Link ok & activity
Off	Off	On	Off	Remote TP link off
Off	Off	Off	Off	Fiber RX off, Fiber TX/ RX off
Off	Off	On	Flash	Fiber TX off

Note

Flash: flash, period 100 ms

Link fault pass through is enabled.




#### EEPROM - store the initial value

IP113M supports two ways to load initial value of MII registers. The procedure is illustrated as below.


1. IP113M reads the default setting of MII register from pins



2. IP113M updates the default setting of MII by reading EEPROM. If there exists an EEPROM.



3. After reading EEPROM, IP113M is virtually isolated from the EEPROM. Micro-controller can program both MII register and EEPROM.




4. IP113M reloads the content of EEPROM to recover the value in MII registers programmed by Micro-controller after power on reset.





# Auto MDI\_MDIX

IP113M supports auto MDI-MDIX. It is always enabled. The following is its application circuit for auto MDI-MDIX.

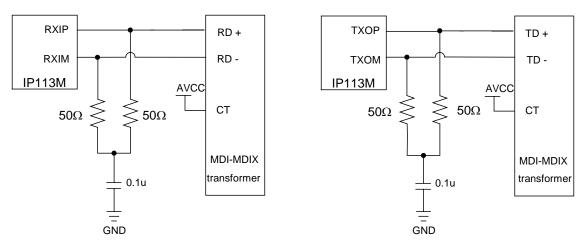


IP113M's application circuit (auto MDI-MDIX on)




#### Serial management interface

User can access IP113M's MII registers through serial management interface MDC and MDIO. A specific pattern on MDIO is used to access a MII register. Its format is shown in the following table. When the SMI is idle, MDIO is in high impedance. To initialize the MDIO interface, the management entity sends a sequence of 32 contiguous "1" and "start" on MDIO.



Frame format	<idle><start><op code=""><ip113m's address=""><registers address=""><turnaround> <data><idle></idle></data></turnaround></registers></ip113m's></op></start></idle>
Read Operation	$ \begin{array}{l} <  d e><01><10> \\ < d e> \end{array} $
Write Operation	$ \begin{array}{l} <  d e><01><01><10> \\ < d e> \end{array} $

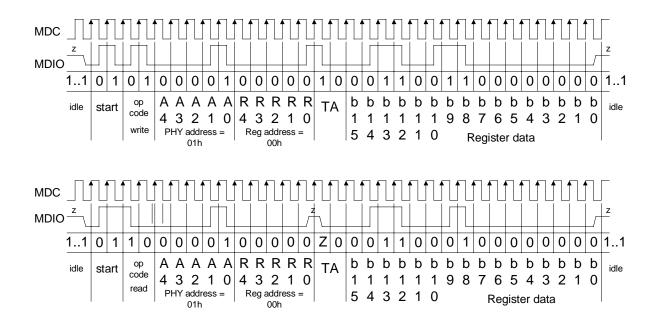



# **MII registers**

Address	Control	Register Name
0	Control Register	NWAY
1	Status Register	NWAY
2	PHY identifier Register 1	NWAY
3	PHY identifier Register 2	NWAY
4	AN Advertisement Register	NWAY
5	AN Link Partner Base Page Ability Register	NWAY
6	AN Expansion Register	NWAY
7	(Reserved)	
8	(Reserved)	
9	(Reserved)	
10	(Reserved)	
11	(Reserved)	
12	(Reserved)	
13	(Reserved)	
14	(Reserved)	
15	(Reserved)	
16	Special Control Register	NWAY
17	Interrupt Register	NWAY
18	Extended Status Register	NWAY
19	Statistic Counter Register	SWITCH
20	Switch Configuration Register 1	SWITCH
21	Switch Configuration Register 2	SWITCH
22	Local Switch Extended Register	SWITCH
23	Link Partner Switch Extended Status Register	SWITCH
24	Remote Control Transmit Register 1	RMC
25	Remote Control Transmit Register 2	RMC
26	Remote Control Receive Register 1	RMC
27	Remote Control Receive Register 2	RMC
28	Remote Control Receive Register 3	RMC
29	Remote Control Receive Register 4	RMC
30	Remote Control Receive Register 5	RMC
31	Switch Configuration Register 3	SWITCH



The basic MII registers

Туре	Description	Туре	Description
R/W	Read/Write	RC	Read and Clear
SC	Self-Clearing	LL	Latching Low
RO	Read Only	LH	Latching High

MII	NAME	R/W	DESCRIPTION	DEFAULT
		I	MII control register (address 00h)	
0.15	Reset	R/W SC	1 = PHY reset 0 = normal operation This bit is self-clearing, IP113M will return a value of 1 before reset process is completed, and will not accept any write transaction of MII Management within reset process. Make any change to Auto-Negotiation or speed mode will cause IP113M reset again.	0
0.14	Loopback	R/W	1 = Loopback mode 0 = normal operation When this bit set, IP113M will be isolated from the network media, and the assertion of TXEN at the MII will not transmit data on the network. All MII transmit data path will return to MII receive data path in response to the assertion of TXEN. MII COL signal will remain de-asserted at all times, unless bit 0.7 (Collision Test) is set.	0
0.13	Speed Selection	RW	1 = 100Mbps 0 = 10Mbps It is valid only if bit 0.12 is set to be 0.	1
0.12	Auto-Negotiation Enable	RW	1 = Auto-Negotiation Enable 0 = Auto-Negotiation Disable MII register 16.11 auto-MDI/MDIX should be disabled if auto-negotiation is disabled.	1
0.11	Power Down	R/W	1 = power down 0 = normal operation Setting this bit to 1 will cause IP113M into power down mode, but still respond to management transactions.	0
0.10	Isolate	R/W	<ul> <li>1 = electrically isolate PHY from MII</li> <li>0 = normal operation</li> <li>When this bit is setting to 1, IP113M will be isolated from RMII, and not respond to the TXD[3:0] and TXEN and keep CRS, RXDV and RXD[3:0] in high impedance, but will respond to management transactions.</li> <li>If PHY address of IP113M is setting to 0 at power-on reset, this bit will be set to 1, otherwise will be set to 0.</li> </ul>	0





MII	NAME	R/W	DESCRIPTION	DEFAULT
		I	MII control register (address 00h)	
0.9	Restart Auto- Negotiation	RW	1 = re-starting Auto-Negotiation 0 = Auto-Negotiation re-start complete Setting this bit to logic high will cause IP113M to restart an Auto-Negotiation cycle, but depend on the value of bit 0.12 (Auto-Negotiation Enable). If bit 0.12 is cleared then this bit has no effect, and change to Read Only. When an Auto-Negotiation cycle is being processed, write 0 into this bit has no effect. This bit is self-clearing after Auto-Negotiation process is completed.	0
0.8	Duplex mode	R/W	1 = full duplex 0 = half duplex It is valid only if bit 0.12 is set to be 0.	0
0.7	Collision test enable	R/W	1 = enable the collision test 0 = disable the collision test If setting this bit to logic 1, when MII TXEN signal is asserted, IP113M will assert the MII COL signal within 512BT (Bit Time, depend on 10Mbps or 100Mbps). When MII TXEN is de-asserted, then TP110 will assert MII COL signal within 4BT. Clearing this bit to logic 0 for normal operation	0
0[6:0]	Reserved	R/W		



MII	NAME	R/W	DESCRIPTION	DEFAULT
			MII status register (address 01h)	
1.15	100Base-T4 capable	RO	1 = 100Base-T4 capable 0 = not 100Base-T4 capable IP113M does not support 100Base-T4. This bit is fixed to be 0.	0
1.14	100Base-X full duplex Capable	RO	1 = 100Base-X full duplex capable 0 = not 100Base-X full duplex capable The default of this bit will change depend on the external setting of IP113M. If external pin setting without 100Base-X full duplex support, then this bit will change default to logic 0.	1
1.13	100Base-X half duplex Capable	RO	1 = 100Base-X half duplex capable 0 = not 100Base-X half duplex capable The default of this bit will change depend on the external setting of IP113M. If external pin setting without 100Base-X half duplex support, then this bit will change default to logic 0	1
1.12	10Base-T full duplex Capable	RO	1 = 10Base-T full duplex capable 0 = not 10Base-T full duplex capable The default of this bit will change depend on the external setting of IP113M. If external pin setting without 100Base-T full duplex support, then this bit will change default to logic 0	1
1.11	10Base-T half duplex Capable	RO	1 = 10Base-T half duplex capable 0 = not 10Base-T half duplex capable The default of this bit will change depend on the external setting of IP113M. If external pin setting without 100Base-X full duplex support, then this bit will change default to logic 0	1
1[10:7]	Reserved	RO	Ignore on read	-
1.6	MF preamble Suppression	RO	<ul><li>1 = preamble may be suppressed</li><li>0 = preamble always required</li></ul>	1
1.5	Auto-Negotiation Complete	RO	1 = Auto-Negotiation complete 0 = Auto-Negotiation in progress When read as logic 1, indicates that the Auto-Negotiation process has been completed, and the contents of register 4, 5, 6 and 7 are valid. When read as logic 0, indicates that the Auto-Negotiation process has not been completed, and the contents of register 4, 5, 6 and 7 are meaningless. If Auto-Negotiation is disabled (bit 0.12 set to logic 0), then this bit will always read as logic 0.	0





MII	NAME	R/W	DESCRIPTION	DEFAULT
			MII status register (address 01h)	
1.4	Remote fault	RO LH	1 = remote fault detected 0 = not remote fault detected When read as logic 1, indicates that IP113M has detected a remote fault condition. This bit is set until remote fault condition gone and before reading the contents of the register. This bit is cleared after IP113M reset.	0
1.3	Auto-Negotiation Ability	RO	1 = Auto-Negotiation capable 0 = not Auto-Negotiation capable When read as logic 1, indicates that IP113M has the ability to perform Auto-Negotiation. The value of this bit will depend on the external mode setting of IP113M operation mode.	1
1.2	Link Status	RO LL	1 = Link Pass 0 = Link Fail When read as logic 1, indicates that IP113M has determined a valid link has been established. When read as logic 0, indicates the link is not valid. This bit is cleared until a valid link has been established and before reading the contents of this registers.	0
1.1	Jabber Detect	RO LH	1 = jabber condition detected 0 = no jabber condition detected When read as logic 1, indicates that IP113M has detected a jabber condition. This bit is always 0 for 100Mbps operation and is cleared after IP113M reset. This bit is set until jabber condition is cleared and reading the contents of the register.	0
1.0	Extended capability	RO	<ul> <li>1 = Extended register capabilities</li> <li>0 = No extended register capabilities</li> <li>IP113M has extended register capabilities.</li> </ul>	1



MII	NAME	R/W	DESCRIPTION	DEFAULT	
PHY Identifier (address 02h)					
2[15:0]	PHY identifier	RO	IP113M OUI (Organizationally Unique Identifier) ID, the msb is 3 <sup>rd</sup> bit of IP113M OUI ID, and the Isb is 18 <sup>th</sup> bit of IP113M OUI ID. IP113M OUI is 0090C3.	0243h	

MII	NAME	R/W	DESCRIPTION	DEFAULT				
	PHY Identifier (address 03h)							
3[15:10]	PHY identifier	RO	IP113M OUI ID, the msb is 19 <sup>th</sup> bit of IP113M OUI ID, and Isb is 24 <sup>th</sup> bit of IP113M OUI ID.	3h				
3[9:4]	Manufacture's Model Number	RO	TP110 model number	6h				
3[3:0]	Revision Number	RO	IP113M revision number	0				



MII	NAME	R/W	DESCRIPTION	DEFAULT
	Au	to-Negot	iation Advertisement register (address 04h)	
4.15	Next Page	RW	<ul> <li>1 = Next Page ability is supported</li> <li>0 = Next Page ability is not supported</li> <li>IP113M does not support next page, this bit is fixed to be</li> <li>0.</li> </ul>	0
4.14	Reserved	RW	Reserved by IEEE, write as 0, ignore on read	0
4.13	Remote Fault	R/W	1 = Advertises that this device has detected a remote fault $0 = $ No remote fault detected	0
4[12:11]	Reserved	RO	Reserved for future IEEE use, write as 0, ignore on read	0
4.10	Pause	RW	<ul><li>1 = Advertises that this device has implemented pause function</li><li>0 = No pause function supported</li></ul>	0
4.9	100BASE-T4	RW	1 = 100BASE-T4 is supported 0 = 100BASE-T4 is not supported	0
4.8	100BASE-TX full duplex	R/W	1 = 100BASE-TX full duplex is supported 0 = 100BASE-TX full duplex is not supported	0
4.7	100BASE-TX	R/W	1 = 100BASE-TX is supported 0 = 100BASE-TX is not supported	0
4.6	10BASE-T full duplex	R/W	1 = 10BASE-T full duplex is supported 0 = 10BASE-T full duplex is not supported	0
4.5	10BASE-T	R/W	1 = 10BASE-T is supported 0 = 10BASE-T is not supported	0
4[4:0]	Selector Field	R/W	Use to identify the type of message being sent by Auto-Negotiation.	00001



MII	NAME	R/W	DESCRIPTION	DEFAULT
	Li	ink partn	er ability register (address 05h) Base Page	
5.15	Next Page	RO	<ul><li>1 = Next Page ability is supported by link partner</li><li>0 = Next Page ability is not supported by link partner</li></ul>	0
5.14	Acknowledge	RO	1 = Link partner has received the ability data word 0 = Not acknowledge	0
5.13	Remote Fault	RO	1 = Link partner indicates a remote fault 0 = No remote fault indicate by link partner If this bit is set to logic 1, then bit 1.4 (Remote fault) will set to logic 1.	0
5[12:10]	Reserved	RO	Reserved by IEEE for future use, write as 0, read as 0.	0
5.9	100BASE-T4	RO	1 = Link partner support 100BASE-T4 0 = Link partner is not support 100BASE-T4	0
5.8	100BASE-TX full duplex	RO	1 = Link partner support 100BASE-TX full duplex 0 = Link partner is not support 100BASE-TX full duplex	0
5.7	100BASE-TX	RO	1 = Link partner support 100BASE-TX 0 = Link partner is not support 100BASE-TX	0
5.6	10BASE-T full duplex	RO	1 = Link partner support 10BASE-T full duplex 0 = Link partner is not support 10BASE-T full duplex	0
5.5	10BASE-T	RO	1 = Link partner support 10BASE-T 0 = Link partner is not support 10BASE-T	0
5[4:0]	Selector Field	RO	Protocol selector of the link partner	00000



MII	NAME	R/W	DESCRIPTION	DEFAULT				
	Auto-Negotiation Expansion register (address 06h)							
6[15:5]	Reserved	RO	Reserved by IEEE, writes as 0, ignore on read.	0				
6.4	Parallel Detection Fault	RO LH	<ul> <li>1 = A fault has been detected via Parallel Detection function</li> <li>0 = A fault has not detected via Parallel Detection function</li> </ul>	0				
6.3	Link Partner Next Page Able	RO	1 = Link Partner is Next Page able 0 = Link Partner is not Next Page able	0				
6.2	Next Page Able	RO	1 = Local Device is Next Page able 0 = Local Device is not Next Page able	0				
6.1	Page Received	RO LH	1 = A New Page has been received 0 = A New Page has not been received	0				
6.0	Link Partner Auto-Negotiation Able	RO	<ul><li>1 = Link Partner is Auto-Negotiation able</li><li>0 = Link Partner is not Auto-Negotiation able</li></ul>	0				



# Extended MII registers and EEPROM registers (continued)

MII	ROM	NAME	R/W	DESCRIPTION	DEFAULT		
	EEPROM enable register 0 (EEPROM register 00D)						
	0[7:0]		RO	<b>EEPROM enable register 0</b> This register should be filled with 55. IP113M will examine the specified pattern to confirm if there is a valid EEPROM.	55		

MII	ROM	NAME	R/W	DESCRIPTION	DEFAULT			
	EEPROM enable register 1 (EEPROM register 01D)							
	1[7:0]		RO	<b>EEPROM enable register 1</b> This register should be filled with AA. IP113M will examine the specified pattern to confirm if there is a valid EEPROM. The initial setting is updated with the content of EEPROM only if the specified pattern 55AA is found.	AA			



MII	ROM	NAME	R/W	DESCRIPTION	DEFAULT			
	Reserved register							
7		Reserved						
8		Reserved						
9		Reserved						
10		Reserved						
11		Reserved						
12		Reserved						
13		Reserved						
14		Reserved						
15		Reserved						

### Extended MII registers and EEPROM registers (continued)



# Extended MII registers and EEPROM registers (continued)

МІІ	ROM	NAME	R/W	DESCRIPTION	DEFAULT
		•	Special	control register (16D)	•
16.0		mr_analog_off	R/W	ANALOG on/off (It is valid only if register 16.15=0.) 1: analog off, 0: analog on (default)	0
16.1		mr_lpds_mode	R/W	Low power mode disable (It is valid only if 16.15=0.) 1: disable, 0:enable (default)	0
16.2		mr_repeater_mode	R/W	REPEAT mode enable 1: enable, 0:disable (default)	0
16.3		mr_bypass_scram ble	R/W	Bypass PCS scrambler (It is valid only if 16.15=1.) 1: bypass scrambler, 0: not bypass (default)	0
16.4		mr_bypass_100x _coder	R/W	Bypass PCS 4B/5B coder (It is valid only if 16.15=1.) 1: bypass 4B/5B, 0: not bypass (default)	0
16.5		mr_bypass_dsp _rst	R/W	Bypass DSP re-start function in PCS 1: bypass DSP re-start, 0: not bypass (default)	0
16.6		mr_tx_nlp_en	R/W	10Mb transmit NLP enable 1: enable (default), 0:disable	1
16.7		mr_analog_pwsv _disable	R/W	Analog power save mode disable 1: disable, 0: enable (default)	0
16.8		mr_fef_disable	R/W	Far-End-Fault function disable 1: disable, 0: enable (default)	0
16.9		mr_jabber_enable	R/W	Jabber function enable 1: enable, 0:disable (default)	0
16.10		mr_heart_beat _enable	R/W	Heart Beat function enable 1: enable, 0:disable (default)	0
16.11		mr_auto_cross _disable	R/W	Auto Crossover function disable 1: disable, 0: enable (default) It should be disabled if MII register 0.12 auto-negotiation is disabled.	0
16.12		mr_speed_up_dsp	R/W	Speed Up DSP (It is valid only if 16.15=1.) 1: enable, 0:disable (default)	0
16.13		mr_speed_up	R/W	Speed Up Digital Simulation (It is valid only if 16.15=1.) 1: enable, 0:disable (default)	0
16.14		Reserved	R/W		0
16.15		mr_debug_mode	R/W	DEBUG mode enable 1: enable, 0:disable (default)	0



MII	ROM	NAME	R/W	DESCRIPTION	DEFAULT			
	Interrupt register (17D)							
17.0		intr_link	RO RC	Link status change It is logic "1" when link status changes on TP port and it will active interrupt pin. It is self-clear after reading the register. 1: Interrupt occur 0: nothing happen	0			
17.1		intr_duplex	RO RC	Duplex mode change 1: Interrupt occur 0: nothing happen	0			
17.2		intr_speed	RO RC	Speed mode change 1: Interrupt occur 0: nothing happen	0			
17.3		intr_mf_rx_indicate	RO RC	Maintenance frame receive indication 1: Interrupt occur 0: nothing happen	0			
17.4		intr_cnt_overflow	RO RC	Statistic counter overflow 1: Interrupt occur 0: nothing happen	0			
17.5		intr_status	RO RC	Interrupt status 1: Interrupt occur 0: nothing happen It is logic "OR" of 17.0~17.4.	0			
17.6		Intr_pwabn	RO/R C	Interrupt status 1: remote link partner power abnormal 0: nothing happen	0			
17.7		Intr_pwabn_en	RW	Remote LP power abnormal interrupt enable.	0			
17.8		intr_link_mask	RW	Mask TP port link change Interrupt 1: mask, 0: not mask (default)	1			
17.9		intr_duplex_mask	RW	Mask TP port duplex mode change Interrupt 1: mask interrupt (default), 0: not mask	1			
17.10		intr_speed_mask	RW	Mask TP port speed mode change Interrupt 1: mask interrupt (default), 0: not mask	1			
17.11		intr_mf_rx_indc _mask	RW	Mask maintenance frame receive indication Interrupt 1: mask interrupt (default), 0: not mask	1			
17.12		intr_cnt_ov_mask	RW	Mask Statistic counter overflow Interrupt 1: mask interrupt (default), 0: not mask	1			
17.13		intr_all_mask	RW	Mask all Interrupt 1: mask interrupt (default), 0: not mask	1			
17[15:14]		Reserved	RW		0			



MII	ROM	NAME	R/W	DESCRIPTION	DEFAULT			
	PHY extended status register (18D)							
18[3:0]		an_arbit_state[3:0]	RO	NWAY state machine	0			
18[6:4]		Reserved[2:0]	RO		0			
18.7		jabber	RO	Jabber status 1: jabber, 0: no jabber (default)	0			
18.8		polarity	RO	Polarity status 1: polarity error, 0: polarity ok (default)	0			
18.9		mdix_en	RO	MDI/MDIX status 0: MDI, 1:MDIX	0			
18.10		link_real	RO	TP port link Status 1: link ok, 0; link fail (default)	0			
18.11		resolved	RO	Resolve complete 1: Nway or force mode complete, 0: not complete (default)	0			
18.12		Reserved	RO		0			
18.13		mr_duplex_mode	RO	TP port duplex mode (It is valid only if 18.11=1.) 1: full (default), 0: half	1			
18.14		mr_speed_selection	RO	TP port operation speed (It is valid only if 18.11=1.) 1: 100M (default), 0: 10M	1			
18.15		Reserved	RO		0			



MII	ROM	NAME	R/W		DESCRIPTION	DEFAULT	
		Statis	tic count	er registe	ers (MII register 19D)		
19[11:0]		mg_statistic_cnt [11:0]	RO	Statistic	Counter [11:0]	0	
				Cnt_inde	Content of statistic counter[11:0]		
				3'b000	TP port (port1) received packet count		
				3'b001	TP port (port1) received CRC error count		
				3'b010	TP port (port1) drop packet count		
				3'b011	TP port (port1) collision event count		
				3'b100	FX port (port2) received packet count		
				3'b101	FX port (port2) received CRC error count		
				3'b110	FX port (port2) drop packet count		
				3'b111	FX port (port2) collision event count		
19[14:12]		cnt_index[2:0]	RW	The cur	rent counter index	0	
19.15		cnt_loop_en	RW	1: Each 19) will i content is "7".	The counter index loop enable 1: Each time reading of this register (MII register 19) will increase cnt_index[2:0] by one. The content will be loop back to "0" after reading if it		



MII	ROM	NAME	R/W	DESCRIPTION	DEFAULT	
Switch configuration register 1 (MII register 20D, EEPROM register 02~03D)						
20.0	2.0	mg_auto_crossover _en	R/W	Select TP to be MDIX or MDI. It is valid only if MII register16.11 is disabled. 0: MDI 1: MDIX	0	
20.1	2.1	mg_converter_mode	R/W	Pure converter mode enable (DIRECT_WIRE)	Pin (0)	
20.2	2.2	mg_cut_through_en	R/W	Modify cut-through mode enable (FAST_FWD)	Pin (0)	
20.3	2.3	mg_pass_fragment _en	R/W	Pass fragment packet (>7B and <64B)	0	
20.4	2.4	mg_col16_drop_en	R/W	Collision 16 times drop enable	0	
20.5	2.5	mg_col_backoff _en	R/W	Collision back-off enable 1: back after collision 0: not back off after collision	1	
20.6	2.6	mg_bkpress_col _crs	R/W	Half duplex backpressure mode selection This bit must be 0 (collision base backpressure) for normal operation.	0	
20.7	2.7	p01_mg_backpress _en	R/W	TP port backpressure control enable for half duplex	1	
20.8	3.0	mg_rem_ctrl_en	R/W	Remote control enable (TX/RX. ability for maintenance frame)	1	
20.9	3.1	mg_auto_tx_mf_en	R/W	Auto send status frame to remote partner enable (AUTO_SEND)	Pin (0)	
20.10	3.2	mg_auto_tx_ttc _content	R/W	The content of auto send status frame 1: TTC (TS-1000) The frame format is defined in TS-1000. 0: ICPLUS The frame format is similar to the one defined in TS-1000 except the bit definition of S[15:0]. S[15:0] is the content of MII register 22[15:0]. Local IP113M uses the frame to indicate its status to the remote IP113M. The remote IP113M receives the frame and stores the information to the MII register 23.	1	
20.11	3.3	mg_sd_off_way	R/W	Informing way for optical receiving SD off 1: far end fault pattern 0: maintenance frame	1	
20.12	3.4	mg_em_bist_en	R/W	SSRAM BIST enable (R/W by EEPROM only)	1	
20.13	3.5	mg_nway_limit_en	R/W	This pin overwrites the setting on pin 26 TP_FORCE.	Pin (0)	
20.14	3.6	mg_receive_en	R/W	TP receive enable	1	
20.15	3.7	p02_link_on	RO	Fiber port link status (descramble_locked)	0	



МІІ	ROM	NAME	R/W	DESCRIPTION	DEFAULT	
Switch configuration register 2 (MII register 21D, EEPROM register 04~05D)						
21[7:0]	4[7:0]	p01_mg_port _page_no	R/W	TP port allocated memory pages The default is 120 pages with 64 bytes per page.	120d	
21[15:8]	5[7:0]	p02_mg_port _page_no	R/W	FX port allocated memory pages The default is 120 pages with 64 bytes per page.	120d	



MII	ROM	NAME	R/W	DESCRIPTION	DEFAULT			
	Local MC extended register (MII register 22D, EEPROM register 06~07D)							
22.0	6.0	mg_loopback_en	R/W	Loop-back for remote test enable (same as MII register 0.14)	0			
22.1	6.1	mg_status_rpt _en	RO	TP port status available	0			
22.2	6.2	p01_mg_auto _neg_en	R/W	TP port auto-negotiation enable (same as MII register 0.12)	1			
22.3	6.3	p01_mg_speed _mode	R/W	TP port speed selection (same as MII register 0.13) 1: 100M, 0:10M	Pin (1)			
22.4	6.4	p01_mg_duplex _mode	R/W	TP port duplex mode selection (same as MII register 0.8) 1: full duplex, 0:half duplex	Pin (1)			
22.5	6.5	p01_mg_flow _ctrl_en	R/W	TP port flow control selection (same as MII register 4.10) 1: on, 0:off	Pin (1)			
22.6	6.6	p01_mg_link _status	RO	TP port link status off 1: link off, 0: link ok	0			
22.7	6.7	p02_mg_flow _ctrl_en	R/W	Fiber port flow control/backpressure enable	Pin (1)			
22.8	7.0	p02_mg_duplex _mode	R/W	Fiber port duplex mode (FX_FULL)	1			
22.9	7.1	p02_mg_link _status	RO	Fiber port signal detect (power)	0			
22.10	7.2	p02_mg_fef _detect	RO	Fiber port Far-End-Fault detect	0			
22[12: 11]	7[4:3]	p01_mg_throttle _confg	R/W	TP port input Rate Control 2'b00: full speed 2'b01: 1/4 speed 2'b10: 2/4 speed 2'b11: 3/4 speed	00			
22[14: 13]	7[6:5]	p01_mg_throttle _confg	R/W	TP port output Rate Control 2'b00: full speed 2'b01: 1/4 speed 2'b10: 2/4 speed 2'b11: 3/4 speed	00			
22.15	7.7	mg_link_pass_en	R/W	Link Fault Pass through enable (LFP)	Pin (0)			



#### Extended MII registers and EEPROM registers (continued)

MII	ROM	NAME	R/W	DESCRIPTION	DEFAULT
		Link partner M	IC exten	ded status register (MII register 23D)	
23.0		lp_loopback_en	RO	Loop-back for remote test enable	
23.1	-	lp_status_rpt_en	RO	Option B support	
23.2	-	lp_tp_autoneg_en	RO	TP port auto-negotiation enable	
23.3	-	lp_tp_speed_mode	RO	TP port speed selection	
23.4	-	lp_tp_duplex_mode	RO	TP port duplex mode selection	
23.5		lp_tp_flow_ctrl_en	RO	TP port flow control selection <b>*</b> Note	
23.6		lp_tp_link_off	RO	TP port link off 1: link off, 0:link on	
23.7	-	lp_fb_flow_ctrl_en	RO	Fiber port flow control/backpressure enable $*$	
23.8		lp_fb_duplex_mode	RO	Fiber port duplex mode *	
23.9		lp_fb_link_status	RO	Fiber port signal detect (power) off <b>*</b> 1: off, 0: on	
23.10		lp_fb_fef_detect	RO	Fiber port Far-End-Fault detect *	0
23.11		lp_power_abnormal	RO	MC power abnormal	0
23.12		lp_mc_failed	RO	MC failed	0
23.13		lp_sd_off_way	RO	Link Partner informing way of SD off 1: far end fault pattern 0: maintenance frame	0
23.14		lp_multi_tp_port	RO	MC support multi-port UTP	0
23.15		mg_link_pass_en	RO	Link Fault Pass through enable *	0

**\*** Note: Only available when MII 20.10 = 0.



MII	ROM	NAME	R/W	DESCRIPTION	DEFAULT
		Remote co	ntrol Tra	nsmit register 1 (MII register 24D)	
24.0		mg_rem_tx_code	R/W	Remote control frame send trigger	0
24.1		mg_rem_tx_code	R/W	Transmitted maintenance direction discriminator C1 Frame direction 0: upstream 1: downstream	0
24[3:2]		mg_rem_tx_code	R/W	Transmitted maintenance frame command discriminator C3~C2 01: request 11: acknowledge 10: Indication 00: reserved	00
24[11:4]		mg_rem_tx_code	R/W	Transmitted maintenance frame control signals C15~C8 bit11 (C15) bit4 (C8) 0 0 0 0 0 0 0 01: Loop test start 0 0 0 0 0 0 0 00: Loop test finished 0 0 0 0 0 0 0 10: Status indication A4 A3 A2 A1 A0 RW 11: IP113M R/W registers RW: 0: read, 1: write A[4:0]: register address	8'b0
24[15:12]		Reserved			

MII	ROM	NAME	R/W	DESCRIPTION	DEFAULT
		Remote co	ntrol Tra	nsmit register 2 (MII register 25D)	
25[15:0]		mg_rem_wt_data	R/W	Remote control write data If a remote write command is issued, that is, MII register 24[11:4] is programmed as xxxxx111. The content in this register will be embedded into S[15:0] and is sent to the remote site. The partner IP113M receives the frame (register write) and update the addressed MII register with the value defined in this register	16'b0



Extended MII registers and EEPROM regis	ters (continued)
---	------------------

MII	ROM	NAME	R/W	DESCRIPTION	DEFAULT
		Remote co	ontrol Re	ceive register 1 (MII register 26D)	
26.0		mg_rem_rx_code	RO RC	Receive a acknowledge or not defined maintenance frame C0 1: IP113M receives a maintenance frame. 0: no maintenance frame received. User can poll this bit to make sure a there is a maintenance frame is received. It is a read and auto-clear bit.	0
26.1		mg_rem_rx_code	RO	Received maintenance direction discriminator C1	0
26[3:2]		mg_rem_rx_code	RO	Received maintenance frame command discriminator C3~C2	00
26[11:4]		mg_rem_rx_code	RO	Received maintenance frame control signals C15~C8	8'b0
26[12]		mg_rem_rx_code	RO RC	Received maintenance frame CRC error 1: received maintenance frame CRC error. 0: received maintenance frame CRC ok. It is a read and auto-clear bit.	
26[15:13]		Reserved			

МІІ	ROM	NAME	R/W	DESCRIPTION	DEFAULT		
Remote control Receive register 2 (MII register 27D)							
27[15:0] mg_rem_rd_data RO Remote control read data S0~S15.							

МІІ	MII ROM NAME R/W DESCRIPTION							
Remote control Receive register 3 (MII register 28D)								
28[15:0]	28[15:0] mg_rem_rd_data RO Vender message M0~M15							

MII	MII ROM NAME R/W DESCRIPTION							
	Remote control Receive register 4 (MII register 29D)							
29[15:0]		mg_rem_rd_data	RO	Vender message M16~M29	16'b0			

MII	MII ROM NAME R/W DESCRIPTION							
Remote control Receive register 5 (MII register 30D)								
30[15:0] mg_rem_rd_data RO Vender message M30~M55 16'								



MII	ROM	NAME	R/W	DESCRIPTION	DEFAULT
		Switch c	onfigura	tion register 3 (MII register 31D)	
31.0		software_reset	R/W SC	Switch software reset It is a self-clear bit.	0
31.1		mg_power_indicate _disable	R/W	IP113M power abnormal indication disable	0
31[3:2]		link_list_fail	RO	Link list failure indication bit[2] : TP port link list abnormal bit[3] : Fiber port link list abnormal	00
31[5:4]		BIST_status	RO	BIST Status of embedded SSRAM bit[4] : memory is under testing bit[5] : memory test result is good when testing over	01
31[6]		mg_auto_loopback _test	R/W	Auto loopback test enable 1: enable, 0:disable	0
31[7]		mg_t2_timer _disable	R/W	Loopback test T2 timer disable (TS-1000) 1: The MC will not send loopback end indication MF when T2 timer expired 0: The MC will send loopback end MF when T2 timer expired	0
31[8]		mg_auto_loopback _complete	RO	Auto loopback test complete 1: completed, 0: still testing	0
31[9]		mg_auto_loopback _ok		Auto loopback test OK 1: good, 0: not good	0
31[15:10]		Reserved			



### 9. Signal Requirements

#### 9.1. Absolute Maximum Rating

Stresses above those listed under Absolute Maximum Ratings may cause permanent damage to the device. Functional performance and device reliability are not guaranteed under these conditions. All voltages are specified with respect to GND.

Supply Voltage	-0.3V to 2.645V
Input Voltage	-0.3V to 5.0V
Output Voltage	-0.3V to 5.0V
Storage Temperature	-55°C to 150°C
Ambient Operating Temperature (Ta)	0°C to 70°C

#### 9.2. DC Characteristic

#### **Operating Conditions**

Parameter	Sym.	Min.	Тур.	Max.	Unit	Conditions
Supply Voltage	VCC	2.375	2.5	2.645	V	
Operation Junction Temperature	Tj		TBD		°C	
Power Consumption			0.475		W	VCC=2.5v

#### Input Clock

Parameter	Sym.	Min.	Тур.	Max.	Unit	Conditions
Frequency			25		MHz	
Frequency Tolerance		-50		+50	PPM	

#### I/O Electrical Characteristics


Parameter	Sym.	Min.	Тур.	Max.	Unit	Conditions
Input Low Voltage	VIL			0.8	V	
Input High Voltage	VIH	2.0			V	
Output Low Voltage	VOL			0.4	V	IOH=4mA
Output High Voltage	VOH	2.4			V	IOL=4mA

### **10. Order Information**

Part No.	PIN	Notice
IP113M	48 PIN LQFP	-



### 11. Package Detail

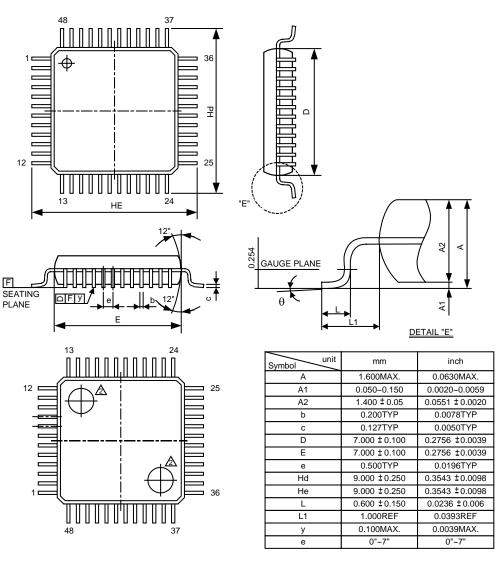

Notes:

1. DIMENSION D & E DO NOT INCLUDE MOLD FLASH OR PROTRUSION.

2. DIMENSION b DOES NOT INCLUDE DAMBAR PROTRUSION / INTRUSION.

3. MAX. END FLASH IS 0.15MM.

4. MAX. DAMBAR PROTRUSION IS 0.13MM. GENERAL APPEARANCE SPEC SHOULD BE BASED ON FINAL VISUAL INSPECTION SPEC.

#### IC Plus Corp. Headquarter

10F, No.47, Lane 2, Kwang-Fu Road, Sec. 2, Hsin-Chu City, Taiwan 300, R.O.C. TEL: 886-3-575-0275 FAX: 886-3-575-0475 Website: www.icplus.com.tw

### Sales Office

4F, No. 106, Hsin-Tai-Wu Road, Sec.1, Hsi-Chih, Taipei Hsien, Taiwan 221, R.O.C. TEL: 886-2-2696-1669 FAX: 886-2-2696-2220