

M29F160BT M29F160BB

16 Mbit (2Mb x8 or 1Mb x16, Boot Block) Single Supply Flash Memory

PRELIMINARY DATA

- SINGLE 5V±10% SUPPLY VOLTAGE for PROGRAM. ERASE and READ OPERATIONS
- ACCESS TIME: 55ns
- PROGRAMMING TIME
 - 8µs per Byte/Word typical
- 35 MEMORY BLOCKS
 - 1 Boot Block (Top or Bottom Location)
 - 2 Parameter and 32 Main Blocks
- PROGRAM/ERASE CONTROLLER
 - Embedded Byte/Word Program algorithm
 - Embedded Multi-Block/Chip Erase algorithm
 - Status Register Polling and Toggle Bits
 - Ready/Busy Output Pin
- ERASE SUSPEND and RESUME MODES
 - Read and Program another Block during Erase Suspend
- UNLOCK BYPASS PROGRAM COMMAND
 - Faster Production/Batch Programming
- TEMPORARY BLOCK UNPROTECTION MODE
- LOW POWER CONSUMPTION
 - Standby and Automatic Standby
- 100,000 PROGRAM/ERASE CYCLES per BLOCK
- 20 YEARS DATA RETENTION
 - Defectivity below 1 ppm/year
- ELECTRONIC SIGNATURE
 - Manufacturer Code: 0020h
 - M29F160BT Device Code: 22CCh
 - M29F160BB Device Code: 224Bh


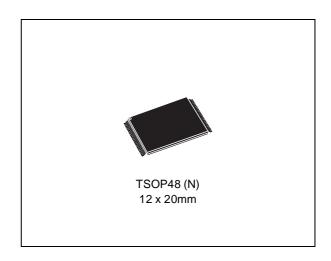


Figure 1. Logic Diagram

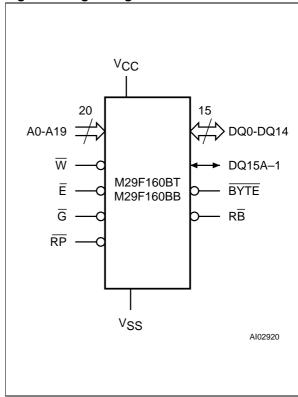

July 1999 1/20

Figure 2. TSOP Connections

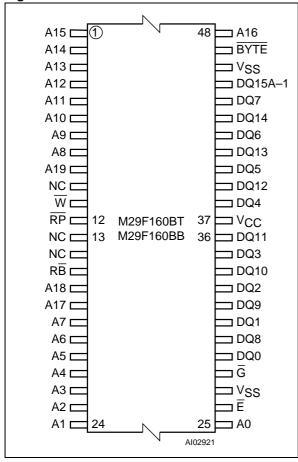


Table 1. Signal Names

A0-A19	Address Inputs
DQ0-DQ7	Data Inputs/Outputs
DQ8-DQ14	Data Inputs/Outputs
DQ15A-1	Data Input/Output or Address Input
Ē	Chip Enable
G	Output Enable
W	Write Enable
RP	Reset/Block Temporary Unprotect
R₿	Ready/Busy Output
BYTE	Byte/Word Organization Select
V _{CC}	Supply Voltage
V _{SS}	Ground
NC	Not Connected Internally

SUMMARY DESCRIPTION

The M29F160B is a 16Mbit (2Mb x8 or 1Mb x16) non-volatile memory that can be read, erased and reprogrammed. These operations can be performed using a single 5V supply. On power-up the memory defaults to its Read mode where it can be read in the same way as a ROM or EPROM.

The memory is divided into blocks that can be erased independently so it is possible to preserve valid data while old data is erased. Each block can be protected independently to prevent accidental Program or Erase commands from modifying the memory. Program and Erase commands are written to the Command Interface of the memory. An on-chip Program/Erase Controller simplifies the process of programming or erasing the memory by taking care of all of the special operations that are required to update the memory contents. The end of a program or erase operation can be detected and any error conditions identified. The command set required to control the memory is consistent with JEDEC standards.

The blocks in the memory are asymmetrically arranged, see Tables 3A and 3B, Block Addresses. The first or last 64 Kbytes have been divided into four additional blocks. The 16 Kbyte Boot Block can be used for small initialization code to start the microprocessor, the two 8 Kbyte Parameter Blocks can be used for parameter storage and the remaining 32K is a small Main Block where the application may be stored.

Chip Enable, Output Enable and Write Enable signals control the bus operation of the memory. They allow simple connection to most microprocessors, often without additional logic.

The memory is offered in a TSOP48 (12 x 20mm) package. Access times of 55ns, 70ns and 90ns are available. The memory is supplied with all the bits erased (set to '1').

SIGNAL DESCRIPTIONS

See Figure 1, Logic Diagram, and Table 1, Signal Names, for a brief overview of the signals connected to this device.

Address Inputs (A0-A19). The Address Inputs select the cells in the memory array to access during Bus Read operations. During Bus Write operations they control the commands sent to the Command Interface of the internal state machine.

Data Inputs/Outputs (DQ0-DQ7). The Data Inputs/Outputs output the data stored at the selected address during a Bus Read operation. During Bus Write operations they represent the commands sent to the Command Interface of the internal state machine.

Data Inputs/Outputs (DQ8-DQ14). The Data Inputs/Outputs output the data stored at the selected address during a Bus Read operation when

Symbol	Parameter	Value	Unit
	Ambient Operating Temperature (Temperature Range Option 1)	0 to 70	°C
T _A	Ambient Operating Temperature (Temperature Range Option 6)	-40 to 85	°C
	Ambient Operating Temperature (Temperature Range Option 3)	-40 to 125	°C
T _{BIAS}	Temperature Under Bias	-50 to 125	°C
T _{STG}	Storage Temperature	-65 to 150	°C
V _{IO} (2)	Input or Output Voltage	-0.6 to 6	V
V _{CC}	Supply Voltage	-0.6 to 6	V
V _{ID}	Identification Voltage	-0.6 to 13.5	V

Note: 1. Except for the rating "Operating Temperature Range", stresses above those listed in the Table "Absolute Maximum Ratings" may cause permanent damage to the device. These are stress ratings only and operation of the device at these or any other conditions above those indicated in the Operating sections of this specification is not implied. Exposure to Absolute Maximum Rating conditions for extended periods may affect device reliability. Refer also to the STMicroelectronics SURE Program and other relevant quality documents.

2. Minimum Voltage may undershoot to -2V during transition and for less than 20ns during transitions.

BYTE is High, V_{IH}. When BYTE is Low, V_{IL}, these pins are not used and are high impedance. During Bus Write operations the Command Register does not use these bits. When reading the Status Register these bits should be ignored.

Data Input/Output or Address Input (DQ15A-1).

When $\overline{\text{BYTE}}$ is High, V_{IH}, this pin behaves as a Data Input/Output pin (as DQ8-DQ14). When $\overline{\text{BYTE}}$ is Low, V_{IL}, this pin behaves as an address pin; DQ15A-1 Low will select the LSB of the Word on the other addresses, DQ15A-1 High will select the MSB. Throughout the text consider references to the Data Input/Output to include this pin when $\overline{\text{BYTE}}$ is High and references to the Address Inputs to include this pin when $\overline{\text{BYTE}}$ is Low except when stated explicitly otherwise.

Chip Enable (\overline{E}). The Chip Enable, \overline{E} , activates the memory, allowing Bus Read and Bus Write operations to be performed. When Chip Enable is High, V_{IH}, all other pins are ignored.

Output Enable (\overline{G}). The Output Enable, \overline{G} , controls the Bus Read operation of the memory.

Write Enable (\overline{W}). The Write Enable, \overline{W} , controls the Bus Write operation of the memory's Command Interface.

Reset/Block Temporary Unprotect (RP). The Reset/Block Temporary Unprotect pin can be used to apply a Hardware Reset to the memory or to temporarily unprotect all blocks that have been protected.

A Hardware Reset is achieved by holding Reset/Block Temporary Unprotect Low, V_{IL}, for at least t_{PLPX}. After Reset/Block Temporary Unprotect goes High, V_{IH}, the memory will be ready for Bus

Read and Bus Write operations after t_{PHEL} or t_{RHEL} , whichever occurs last. See the Ready/Busy Output section, Table 14 and Figure 10, Reset/ Temporary Unprotect AC Characteristics for more details.

Holding \overline{RP} at V_{ID} will temporarily unprotect the protected blocks in the memory. Program and Erase operations on all blocks will be possible. The transition from V_{IH} to V_{ID} must be slower than t_{PHPHH} .

Ready/Busy Output (RB). The Ready/Busy pin is an open-drain output that can be used to identify when the memory array can be read. Ready/Busy is high-impedance during Read mode, Auto Select mode and Erase Suspend mode.

After a Hardware Reset, Bus Read and Bus Write operations cannot begin until Ready/Busy becomes high-impedance. See Table 14 and Figure 10, Reset/Temporary Unprotect AC Characteristics.

During Program or Erase operations Ready/Busy is Low, V_{OL}. Ready/Busy will remain Low during Read/Reset commands or Hardware Resets until the memory is ready to enter Read mode.

The use of an open-drain output allows the Ready/ Busy pins from several memories to be connected to a single pull-up resistor. A Low will then indicate that one, or more, of the memories is busy.

Byte/Word Organization Select (BYTE). The Byte/Word Organization Select pin is used to switch between the 8-bit and 16-bit Bus modes of the memory. When Byte/Word Organization Select is Low, V_{IL}, the memory is in 8-bit mode, when it is High, V_{IH}, the memory is in 16-bit mode.

Table 3A. M29F160BT Block Addresses

Table 3A. M29F160BT Block Addresses								
Size (Kbytes)	Address Range (x8)	Address Range (x16)						
16	1FC000h-1FFFFFh	FE000h-FFFFFh						
8	1FA000h-1FBFFFh	FD000h-FDFFFh						
8	1F8000h-1F9FFFh	FC000h-FCFFFh						
32	1F0000h-1F7FFFh	F8000h-FBFFFh						
64	1E0000h-1EFFFFh	F0000h-F7FFFh						
64	1D0000h-1DFFFFh	E8000h-EFFFFh						
64	1C0000h-1CFFFFh	E0000h-E7FFFh						
64	1B0000h-1BFFFFh	D8000h-DFFFFh						
64	1A0000h-1AFFFFh	D0000h-D7FFFh						
64	190000h-19FFFFh	C8000h-CFFFFh						
64	180000h-18FFFFh	C0000h-C7FFFh						
64	170000h-17FFFFh	B8000h-BFFFFh						
64	160000h-16FFFFh	B0000h-B7FFFh						
64	150000h-15FFFFh	A8000h-AFFFFh						
64	140000h-14FFFFh	A0000h-A7FFFh						
64	130000h-13FFFFh	98000h-9FFFFh						
64	120000h-12FFFFh	90000h-97FFFh						
64	110000h-11FFFFh	88000h-8FFFFh						
64	100000h-10FFFFh	80000h-87FFFh						
64	0F0000h-0FFFFh	78000h-7FFFFh						
64	0E0000h-0EFFFFh	70000h-77FFFh						
64	0D0000h-0DFFFFh	68000h-6FFFFh						
64	0C0000h-0CFFFh	60000h-67FFFh						
64	0B0000h-0BFFFFh	58000h-5FFFFh						
64	0A0000h-0AFFFFh	50000h-57FFFh						
64	090000h-09FFFFh	48000h-4FFFFh						
64	080000h-08FFFFh	40000h-47FFFh						
64	070000h-07FFFh	38000h-3FFFFh						
64	060000h-06FFFFh	30000h-37FFFh						
64	050000h-05FFFFh	28000h-2FFFFh						
64	040000h-04FFFFh	20000h-27FFFh						

64

64

64

64

030000h-03FFFFh

020000h-02FFFFh

010000h-01FFFh

000000h-00FFFh

Table 3B. M29F160BB Block Addresses

Size (Kbytes) Address Range (x8) Address Range (x16) 64 1F0000h-1FFFFFh F8000h-FFFFFh 64 1E0000h-1EFFFFh F8000h-FFFFFh 64 1D0000h-1DFFFFh E8000h-EFFFFh 64 1C0000h-1CFFFFh E0000h-E7FFFh 64 1B0000h-1BFFFFh D8000h-DFFFFh 64 190000h-19FFFFh C8000h-CFFFFh 64 190000h-18FFFFh C8000h-CFFFFh 64 180000h-18FFFFh C0000h-CFFFFh 64 170000h-17FFFFh B8000h-BFFFFh 64 160000h-18FFFFh B8000h-BFFFFh 64 150000h-15FFFFh A8000h-AFFFFh 64 140000h-14FFFFh A8000h-AFFFFh 64 130000h-12FFFFh 98000h-9FFFFh 64 110000h-12FFFFh 98000h-9FFFFh 64 10000h-12FFFFh 88000h-8FFFFh 64 10000h-0FFFFFh 78000h-7FFFFh 64 0F0000h-0FFFFFh 78000h-7FFFFh 64 0F0000h-0FFFFFh 68000h-6FFFFh 64 0B0000h-0FFFFFh	Table 3B. M29F160BB Block Addresses								
64 1E0000h-1EFFFh F0000h-F7FFFh 64 1D0000h-1DFFFh E8000h-EFFFFh 64 1C0000h-1CFFFFh E0000h-E7FFFh 64 1B0000h-1BFFFFh D8000h-DFFFFh 64 190000h-19FFFFh C8000h-CFFFFh 64 190000h-18FFFFh C8000h-CFFFFh 64 180000h-18FFFFh C0000h-C7FFFh 64 170000h-17FFFFh B8000h-BFFFFh 64 150000h-16FFFFh B8000h-BFFFFh 64 150000h-15FFFFh A8000h-AFFFFh 64 140000h-14FFFFh A0000h-AFFFFh 64 130000h-13FFFFh 98000h-9FFFFh 64 120000h-12FFFFh 90000h-9FFFFh 64 110000h-1FFFFh 88000h-8FFFFh 64 10000h-0FFFFFh 78000h-7FFFFh 64 0F0000h-0FFFFh 70000h-7FFFFh 64 0F0000h-0FFFFh 68000h-6FFFFh 64 0B0000h-0FFFFh 68000h-5FFFFh 64 0B0000h-0FFFFh 58000h-5FFFFh 64 0B0000h-0FFFFh 38000h-3FFFFh		•	_						
64 1D0000h-1DFFFFh E8000h-EFFFFh 64 1C0000h-1CFFFFh E0000h-E7FFFh 64 1B0000h-1BFFFFh D8000h-DFFFFh 64 140000h-18FFFFh D0000h-D7FFFh 64 190000h-19FFFFh C8000h-CFFFFh 64 180000h-18FFFFh C0000h-C7FFFh 64 170000h-17FFFFh B8000h-BFFFFh 64 150000h-15FFFFh B8000h-B7FFFh 64 150000h-15FFFFh A8000h-A7FFFh 64 130000h-13FFFFh A8000h-A7FFFh 64 130000h-12FFFFh 98000h-97FFFh 64 110000h-12FFFFh 90000h-97FFFh 64 100000h-0FFFFh 8000h-87FFFh 64 0F0000h-0FFFFh 78000h-7FFFFh 64 0F0000h-0FFFFh 78000h-7FFFFh 64 0F0000h-0FFFFh 68000h-6FFFFh 64 0F0000h-0FFFFh 68000h-6FFFFh 64 0B0000h-0FFFFh 58000h-5FFFFh 64 0B0000h-0FFFFh 58000h-5FFFFh 64 0B0000h-0FFFFh 38000h-3FFFFh	64	1F0000h-1FFFFFh	F8000h-FFFFFh						
64 1C0000h-1CFFFFh E0000h-E7FFFh 64 1B0000h-1BFFFFh D8000h-DFFFFh 64 1A0000h-1AFFFFh D0000h-D7FFFh 64 190000h-19FFFFh C8000h-CFFFFh 64 180000h-18FFFFh C0000h-C7FFFh 64 170000h-17FFFFh B8000h-BFFFFh 64 160000h-16FFFFh B0000h-B7FFFh 64 150000h-15FFFFh A8000h-AFFFFh 64 130000h-13FFFFh A0000h-A7FFFh 64 120000h-12FFFFh 98000h-9FFFFh 64 120000h-12FFFFh 90000h-9FFFFh 64 100000h-1FFFFh 88000h-8FFFFh 64 100000h-0FFFFh 78000h-7FFFFh 64 0F0000h-0FFFFh 78000h-7FFFFh 64 0D0000h-0FFFFh 68000h-6FFFFh 64 0D0000h-0FFFFh 68000h-6FFFFh 64 0B0000h-0FFFFh 58000h-5FFFFh 64 0B0000h-0FFFFh 58000h-5FFFFh 64 0B0000h-0FFFFh 48000h-4FFFFh 64 0B0000h-0FFFFh 38000h-3FFFFh	64	1E0000h-1EFFFFh	F0000h-F7FFFh						
64 180000h-18FFFh D8000h-DFFFh 64 1A0000h-1AFFFFh D0000h-D7FFFh 64 190000h-19FFFFh C8000h-CFFFFh 64 180000h-18FFFFh C0000h-C7FFFh 64 170000h-17FFFFh B8000h-BFFFFh 64 160000h-16FFFFh B0000h-BFFFFh 64 150000h-15FFFFh A8000h-AFFFFh 64 140000h-14FFFFh A0000h-AFFFFh 64 130000h-13FFFFh 98000h-9FFFFh 64 120000h-12FFFFh 90000h-9FFFFh 64 110000h-17FFFFh 88000h-8FFFFh 64 100000h-0FFFFh 78000h-7FFFFh 64 0F0000h-0FFFFh 70000h-7FFFFh 64 0E0000h-0EFFFFh 68000h-6FFFFh 64 0B0000h-0FFFFh 68000h-5FFFFh 64 0B0000h-0FFFFh 58000h-5FFFFh 64 0B0000h-0FFFFh 58000h-5FFFFh 64 0B0000h-0FFFFh 48000h-4FFFFh 64 0B0000h-0FFFFh 38000h-3FFFFh 64 0B0000h-0FFFFh 38000h-3FFFFh	64	1D0000h-1DFFFFh	E8000h-EFFFFh						
64 1A0000h-1AFFFFh D0000h-D7FFFh 64 190000h-19FFFFh C8000h-CFFFFh 64 18000h-18FFFFh C0000h-C7FFFh 64 170000h-17FFFFh B8000h-BFFFFh 64 160000h-16FFFFh B0000h-B7FFFh 64 150000h-15FFFFh A8000h-AFFFFh 64 140000h-14FFFFh A0000h-A7FFFh 64 130000h-13FFFFh 98000h-9FFFFh 64 120000h-12FFFFh 90000h-9FFFFh 64 110000h-11FFFFh 88000h-8FFFFh 64 100000h-0FFFFFh 8000h-8FFFFh 64 0F0000h-0FFFFFh 78000h-7FFFFh 64 0E0000h-0FFFFFh 68000h-6FFFFh 64 0B0000h-0FFFFFh 68000h-6FFFFh 64 0B0000h-0FFFFFh 58000h-5FFFFh 64 0B0000h-0FFFFFh 58000h-5FFFFh 64 0B0000h-0FFFFFh 38000h-3FFFFh 64 0B0000h-0FFFFFh 38000h-3FFFFh 64 0B0000h-0FFFFFh 38000h-3FFFFh 64 0B0000h-0FFFFFh 28000h-2FFFFh </td <td>64</td> <td>1C0000h-1CFFFFh</td> <td>E0000h-E7FFFh</td>	64	1C0000h-1CFFFFh	E0000h-E7FFFh						
64 190000h-19FFFh C8000h-CFFFFh 64 180000h-18FFFFh C0000h-C7FFFh 64 170000h-17FFFFh B8000h-BFFFFh 64 160000h-16FFFFh B0000h-BFFFFh 64 150000h-15FFFFh A8000h-AFFFFh 64 140000h-14FFFFh A0000h-A7FFFh 64 130000h-13FFFFh 98000h-9FFFFh 64 120000h-12FFFFh 90000h-9FFFFh 64 110000h-11FFFFh 88000h-8FFFFh 64 100000h-0FFFFh 80000h-8FFFFh 64 0F0000h-0FFFFh 78000h-7FFFFh 64 0F0000h-0FFFFh 68000h-6FFFFh 64 0D0000h-0FFFFh 68000h-6FFFFh 64 0B0000h-0FFFFh 58000h-5FFFFh 64 0B0000h-0FFFFh 58000h-5FFFFh 64 0B0000h-0FFFFh 48000h-4FFFFh 64 0B0000h-0FFFFh 38000h-3FFFFh 64 0B0000h-0FFFFh 38000h-3FFFFh 64 0B0000h-0FFFFh 28000h-2FFFFh 64 0B0000h-0FFFFh 28000h-2FFFFh </td <td>64</td> <td>1B0000h-1BFFFFh</td> <td>D8000h-DFFFFh</td>	64	1B0000h-1BFFFFh	D8000h-DFFFFh						
64 180000h-18FFFFh C0000h-C7FFFh 64 170000h-17FFFFh B8000h-BFFFFh 64 160000h-16FFFFh B0000h-B7FFFh 64 150000h-15FFFFh A8000h-AFFFFh 64 140000h-14FFFFh A0000h-A7FFFh 64 130000h-13FFFFh 98000h-9FFFFh 64 120000h-12FFFFh 90000h-9FFFFh 64 110000h-11FFFFh 88000h-8FFFFh 64 100000h-0FFFFFh 80000h-8FFFFh 64 0F0000h-0FFFFFh 78000h-7FFFFh 64 0E0000h-0FFFFFh 68000h-6FFFFh 64 0D0000h-0FFFFFh 68000h-6FFFFh 64 0B0000h-0FFFFh 58000h-5FFFFh 64 0B0000h-0FFFFh 58000h-5FFFFh 64 0B0000h-0FFFFh 48000h-4FFFFh 64 0B0000h-0FFFFh 38000h-3FFFFh 64 0B0000h-0FFFFh 38000h-3FFFFh 64 0FFFFFh 38000h-3FFFFh 64 0FFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFF	64	1A0000h-1AFFFFh	D0000h-D7FFFh						
64 170000h-17FFFFh B8000h-BFFFFh 64 160000h-16FFFFh B0000h-B7FFFh 64 150000h-15FFFFh A8000h-AFFFFh 64 140000h-14FFFFh A0000h-A7FFFh 64 130000h-13FFFFh 98000h-9FFFFh 64 120000h-12FFFFh 90000h-97FFFh 64 110000h-11FFFFh 88000h-8FFFFh 64 100000h-0FFFFh 78000h-7FFFFh 64 0F0000h-0FFFFh 78000h-7FFFFh 64 0F0000h-0FFFFh 68000h-6FFFFh 64 0D0000h-0FFFFh 68000h-6FFFFh 64 0B0000h-0FFFFh 58000h-5FFFFh 64 0B0000h-0FFFFh 58000h-5FFFFh 64 0B0000h-0FFFFh 48000h-4FFFFh 64 090000h-0FFFFh 38000h-3FFFFh 64 080000h-0FFFFh 38000h-3FFFFh 64 060000h-0FFFFh 28000h-2FFFFh 64 050000h-0FFFFh 28000h-2FFFFh 64 040000h-0FFFFh 18000h-1FFFFh 64 040000h-0FFFFh 08000h-0FFFFh <td>64</td> <td>190000h-19FFFFh</td> <td>C8000h-CFFFFh</td>	64	190000h-19FFFFh	C8000h-CFFFFh						
64 160000h-16FFFFh B0000h-B7FFFh 64 150000h-15FFFFh A8000h-AFFFFh 64 140000h-14FFFFh A0000h-A7FFFh 64 130000h-13FFFFh 98000h-9FFFFh 64 120000h-12FFFFh 90000h-9FFFFh 64 110000h-11FFFFh 88000h-8FFFFh 64 100000h-10FFFFh 80000h-87FFFh 64 0F0000h-0FFFFh 78000h-7FFFFh 64 0E0000h-0EFFFFh 70000h-7FFFFh 64 0D0000h-0EFFFFh 68000h-6FFFFh 64 0D0000h-0FFFFh 68000h-6FFFFh 64 0B0000h-0BFFFFh 58000h-5FFFFh 64 0B0000h-0FFFFh 58000h-5FFFFh 64 090000h-0FFFFh 48000h-4FFFFh 64 090000h-0FFFFh 38000h-3FFFFh 64 050000h-0FFFFh 38000h-3FFFFh 64 050000h-0FFFFh 28000h-2FFFFh 64 040000h-0FFFFh 28000h-2FFFFh 64 030000h-0FFFFh 18000h-1FFFFh 64 030000h-0FFFFh 08000h-0FFFFh	64	180000h-18FFFFh	C0000h-C7FFFh						
64 150000h-15FFFFh A8000h-AFFFFh 64 140000h-14FFFFh A0000h-AFFFFh 64 130000h-13FFFFh 98000h-9FFFFh 64 120000h-12FFFFh 90000h-9FFFFh 64 110000h-11FFFFh 88000h-8FFFFh 64 100000h-10FFFFh 80000h-8FFFFh 64 0F0000h-0FFFFh 78000h-7FFFFh 64 0E0000h-0EFFFFh 70000h-7FFFFh 64 0D0000h-0EFFFFh 68000h-6FFFFh 64 0D0000h-0EFFFFh 68000h-6FFFFh 64 0B0000h-0EFFFFh 58000h-5FFFFh 64 0B0000h-0FFFFh 58000h-5FFFFh 64 0B0000h-0FFFFh 48000h-4FFFFh 64 090000h-0FFFFh 38000h-3FFFFh 64 070000h-0FFFFh 38000h-3FFFFh 64 050000h-0FFFFh 28000h-2FFFFh 64 050000h-0FFFFh 28000h-2FFFFh 64 040000h-0FFFFh 10000h-1FFFFh 64 030000h-0FFFFh 08000h-0FFFFh 64 02000h-0FFFFh 04000h-0FFFFh <	64	170000h-17FFFFh	B8000h-BFFFFh						
64 140000h-14FFFh A0000h-A7FFFh 64 130000h-13FFFh 98000h-9FFFFh 64 120000h-12FFFh 90000h-97FFFh 64 110000h-11FFFFh 88000h-8FFFFh 64 100000h-10FFFFh 80000h-87FFFh 64 0F0000h-0FFFFh 78000h-7FFFFh 64 0E0000h-0EFFFFh 70000h-7FFFFh 64 0D0000h-0EFFFFh 68000h-6FFFFh 64 0C0000h-0FFFFh 68000h-6FFFFh 64 0B0000h-0FFFFh 58000h-5FFFFh 64 0B0000h-0FFFFh 58000h-5FFFFh 64 0A0000h-0FFFFh 48000h-4FFFFh 64 0B0000h-0FFFFh 38000h-3FFFFh 64 0FFFFH	64	160000h-16FFFFh	B0000h-B7FFFh						
64 130000h-13FFFh 98000h-9FFFh 64 120000h-12FFFh 90000h-97FFFh 64 110000h-11FFFFh 88000h-8FFFFh 64 100000h-10FFFFh 80000h-87FFFh 64 0F0000h-0FFFFh 78000h-7FFFFh 64 0E0000h-0EFFFFh 70000h-77FFFh 64 0D0000h-0EFFFFh 68000h-6FFFFh 64 0C0000h-0FFFFh 68000h-6FFFFh 64 0B0000h-0FFFFh 58000h-5FFFFh 64 0B0000h-0FFFFh 58000h-5FFFFh 64 0A0000h-0FFFFh 48000h-4FFFFh 64 090000h-0FFFFh 48000h-4FFFFh 64 070000h-0FFFFh 38000h-3FFFFh 64 060000h-0FFFFh 30000h-3FFFFh 64 050000h-0FFFFh 28000h-2FFFFh 64 040000h-0FFFFh 18000h-1FFFFh 64 020000h-0FFFFh 08000h-0FFFFh 64 030000h-0FFFFh 08000h-0FFFFh 64 030000h-0FFFFh 08000h-0FFFFh 64 010000h-0FFFFh 08000h-0FFFFh	64	150000h-15FFFFh	A8000h-AFFFFh						
64 120000h-12FFFh 90000h-97FFFh 64 110000h-11FFFFh 88000h-8FFFFh 64 100000h-10FFFFh 80000h-87FFFh 64 0F0000h-0FFFFh 78000h-7FFFFh 64 0E0000h-0EFFFFh 70000h-7FFFFh 64 0D0000h-0DFFFFh 68000h-6FFFFh 64 0B0000h-0FFFFh 68000h-6FFFFh 64 0B0000h-0FFFFh 58000h-5FFFFh 64 0B0000h-0AFFFFh 50000h-57FFFh 64 090000h-09FFFFh 48000h-4FFFFh 64 080000h-08FFFFh 38000h-3FFFFh 64 060000h-05FFFFh 38000h-3FFFFh 64 050000h-05FFFFh 28000h-2FFFFh 64 040000h-03FFFFh 18000h-1FFFFh 64 030000h-03FFFFh 18000h-1FFFFh 64 010000h-01FFFFh 08000h-0FFFFh 32 008000h-00FFFFh 04000h-07FFFh 8 006000h-00FFFFh 03000h-03FFFh 8 004000h-005FFFh 02000h-02FFFh	64	140000h-14FFFFh	A0000h-A7FFFh						
64 110000h-11FFFFh 88000h-8FFFFh 64 100000h-10FFFFh 80000h-87FFFh 64 0F0000h-0FFFFh 78000h-7FFFFh 64 0E0000h-0EFFFFh 70000h-77FFFh 64 0D0000h-0DFFFFh 68000h-6FFFFh 64 0C0000h-0CFFFFh 60000h-67FFFh 64 0B0000h-0BFFFFh 58000h-5FFFFh 64 0A0000h-0AFFFFh 50000h-57FFFh 64 090000h-09FFFFh 48000h-4FFFFh 64 080000h-08FFFFh 40000h-47FFFh 64 070000h-07FFFFh 38000h-3FFFFh 64 060000h-06FFFFh 28000h-2FFFFh 64 040000h-04FFFFh 20000h-27FFFh 64 030000h-03FFFFh 18000h-1FFFFh 64 020000h-02FFFFh 08000h-0FFFFh 64 010000h-01FFFFh 08000h-0FFFFh 64 010000h-01FFFFh 03000h-07FFFh 8 006000h-007FFFh 03000h-03FFFh 8 004000h-005FFFh 02000h-02FFFh	64	130000h-13FFFFh	98000h-9FFFFh						
64 100000h-10FFFFh 80000h-87FFFh 64 0F0000h-0FFFFh 78000h-7FFFFh 64 0E0000h-0EFFFFh 70000h-77FFFh 64 0D0000h-0DFFFFh 68000h-6FFFFh 64 0C0000h-0CFFFFh 60000h-67FFFh 64 0B0000h-0BFFFFh 58000h-5FFFFh 64 0A0000h-0AFFFFh 50000h-57FFFh 64 090000h-09FFFFh 48000h-4FFFFh 64 080000h-09FFFFh 40000h-47FFFh 64 070000h-07FFFFh 38000h-3FFFFh 64 050000h-05FFFFh 28000h-3FFFFh 64 050000h-04FFFFh 20000h-2FFFFh 64 030000h-03FFFFh 18000h-1FFFFh 64 020000h-02FFFFh 08000h-1FFFFh 64 010000h-01FFFFh 08000h-0FFFFh 32 008000h-00FFFFh 04000h-07FFFh 8 006000h-007FFFh 03000h-03FFFh 8 004000h-005FFFh 02000h-02FFFh	64	120000h-12FFFFh	90000h-97FFFh						
64 0F0000h-0FFFFh 78000h-7FFFFh 64 0E0000h-0EFFFh 70000h-77FFFh 64 0D0000h-0DFFFFh 68000h-6FFFFh 64 0C0000h-0CFFFFh 60000h-67FFFh 64 0B0000h-0BFFFh 58000h-5FFFFh 64 0A0000h-0AFFFFh 50000h-57FFFh 64 090000h-09FFFh 48000h-4FFFFh 64 080000h-08FFFFh 40000h-47FFFh 64 070000h-07FFFFh 38000h-3FFFFh 64 060000h-06FFFFh 30000h-37FFFh 64 050000h-05FFFFh 28000h-2FFFFh 64 040000h-04FFFFh 20000h-27FFFh 64 030000h-03FFFFh 18000h-17FFFh 64 010000h-01FFFFh 08000h-0FFFFh 64 010000h-01FFFFh 04000h-07FFFh 8 006000h-007FFFh 03000h-03FFFh 8 004000h-005FFFh 02000h-02FFFh	64	110000h-11FFFFh	88000h-8FFFFh						
64 0E0000h-0EFFFh 70000h-77FFFh 64 0D0000h-0DFFFFh 68000h-6FFFh 64 0C0000h-0CFFFFh 60000h-67FFFh 64 0B0000h-0BFFFFh 58000h-5FFFFh 64 0A0000h-0AFFFFh 50000h-57FFFh 64 090000h-09FFFFh 48000h-4FFFFh 64 080000h-08FFFFh 40000h-47FFFh 64 070000h-07FFFFh 38000h-3FFFFh 64 060000h-06FFFFh 30000h-3FFFFh 64 050000h-05FFFFh 28000h-2FFFFh 64 040000h-04FFFFh 20000h-2FFFFh 64 030000h-03FFFFh 18000h-1FFFFh 64 020000h-02FFFFh 08000h-0FFFFh 64 010000h-01FFFFh 08000h-0FFFFh 8 006000h-007FFFh 04000h-03FFFh 8 006000h-005FFFh 02000h-02FFFh 8 004000h-005FFFh 02000h-02FFFh	64	100000h-10FFFFh	80000h-87FFFh						
64 0D0000h-0DFFFFh 68000h-6FFFFh 64 0C0000h-0CFFFFh 60000h-67FFFh 64 0B0000h-0BFFFFh 58000h-5FFFFh 64 0A0000h-0AFFFFh 50000h-57FFFh 64 090000h-09FFFh 48000h-4FFFFh 64 080000h-08FFFFh 40000h-47FFFh 64 070000h-07FFFh 38000h-3FFFFh 64 060000h-06FFFFh 28000h-3FFFFh 64 050000h-05FFFFh 28000h-2FFFFh 64 04000h-04FFFFh 20000h-27FFFh 64 030000h-03FFFFh 18000h-1FFFFh 64 020000h-02FFFFh 08000h-0FFFFh 64 010000h-01FFFFh 08000h-0FFFFh 32 008000h-00FFFFh 04000h-07FFFh 8 006000h-007FFFh 03000h-03FFFh 8 004000h-005FFFh 02000h-02FFFh	64	0F0000h-0FFFFh	78000h-7FFFFh						
64 0C0000h-0CFFFFh 60000h-67FFFh 64 0B0000h-0BFFFFh 58000h-5FFFFh 64 0A0000h-0AFFFFh 50000h-57FFFh 64 090000h-09FFFFh 48000h-4FFFFh 64 080000h-08FFFFh 40000h-47FFFh 64 070000h-07FFFFh 38000h-3FFFFh 64 060000h-06FFFFh 28000h-2FFFFh 64 050000h-05FFFFh 28000h-2FFFFh 64 040000h-03FFFFh 18000h-1FFFFh 64 020000h-03FFFFh 10000h-17FFFh 64 010000h-01FFFFh 08000h-0FFFFh 32 008000h-00FFFFh 04000h-07FFFh 8 006000h-007FFFh 03000h-03FFFh 8 004000h-005FFFh 02000h-02FFFh	64	0E0000h-0EFFFFh	70000h-77FFFh						
64 0B0000h-0BFFFh 58000h-5FFFh 64 0A0000h-0AFFFFh 50000h-57FFFh 64 090000h-09FFFh 48000h-4FFFh 64 080000h-08FFFh 40000h-47FFFh 64 070000h-07FFFh 38000h-3FFFh 64 060000h-06FFFh 30000h-37FFFh 64 050000h-05FFFh 28000h-2FFFFh 64 040000h-04FFFh 20000h-27FFFh 64 030000h-03FFFFh 18000h-1FFFFh 64 020000h-02FFFFh 08000h-17FFFh 64 010000h-01FFFFh 08000h-0FFFFh 32 008000h-00FFFFh 04000h-07FFFh 8 006000h-007FFFh 03000h-03FFFh 8 004000h-005FFFh 02000h-02FFFh	64	0D0000h-0DFFFFh	68000h-6FFFFh						
64 0A0000h-0AFFFh 50000h-57FFFh 64 090000h-09FFFh 48000h-4FFFFh 64 080000h-08FFFFh 40000h-47FFFh 64 070000h-07FFFh 38000h-3FFFFh 64 060000h-06FFFFh 30000h-37FFFh 64 050000h-05FFFFh 28000h-2FFFFh 64 040000h-04FFFFh 20000h-27FFFh 64 030000h-03FFFFh 18000h-1FFFFh 64 020000h-02FFFFh 08000h-0FFFFh 64 010000h-01FFFFh 08000h-0FFFFh 32 008000h-00FFFFh 04000h-07FFFh 8 006000h-007FFFh 03000h-03FFFh 8 004000h-005FFFh 02000h-02FFFh	64	0C0000h-0CFFFh	60000h-67FFFh						
64 090000h-09FFFh 48000h-4FFFFh 64 080000h-08FFFh 40000h-47FFFh 64 070000h-07FFFh 38000h-3FFFFh 64 060000h-06FFFFh 30000h-37FFFh 64 050000h-05FFFFh 28000h-2FFFFh 64 040000h-04FFFFh 20000h-27FFFh 64 030000h-03FFFFh 18000h-1FFFFh 64 020000h-02FFFFh 08000h-17FFFh 64 010000h-01FFFFh 08000h-0FFFFh 32 008000h-00FFFFh 04000h-07FFFh 8 006000h-007FFFh 03000h-03FFFh 8 004000h-005FFFh 02000h-02FFFh	64	0B0000h-0BFFFFh	58000h-5FFFFh						
64 080000h-08FFFFh 40000h-47FFFh 64 070000h-07FFFFh 38000h-3FFFFh 64 060000h-06FFFFh 30000h-37FFFh 64 050000h-05FFFFh 28000h-2FFFFh 64 040000h-04FFFFh 20000h-27FFFh 64 030000h-03FFFFh 18000h-1FFFFh 64 020000h-02FFFFh 10000h-17FFFh 64 010000h-01FFFFh 08000h-0FFFFh 32 008000h-00FFFFh 04000h-07FFFh 8 006000h-007FFFh 03000h-03FFFh 8 004000h-005FFFh 02000h-02FFFh	64	0A0000h-0AFFFFh	50000h-57FFFh						
64 070000h-07FFFh 38000h-3FFFh 64 060000h-06FFFh 30000h-37FFFh 64 050000h-05FFFh 28000h-2FFFFh 64 040000h-04FFFh 20000h-27FFFh 64 030000h-03FFFh 18000h-1FFFFh 64 020000h-02FFFFh 10000h-17FFFh 64 010000h-01FFFh 08000h-0FFFFh 32 008000h-00FFFFh 04000h-07FFFh 8 006000h-007FFFh 03000h-03FFFh 8 004000h-005FFFh 02000h-02FFFh	64	090000h-09FFFFh	48000h-4FFFFh						
64 060000h-06FFFFh 30000h-37FFFh 64 050000h-05FFFFh 28000h-2FFFFh 64 040000h-04FFFFh 20000h-27FFFh 64 030000h-03FFFFh 18000h-1FFFFh 64 020000h-02FFFFh 10000h-17FFFh 64 010000h-01FFFFh 08000h-0FFFFh 32 008000h-00FFFFh 04000h-07FFFh 8 006000h-007FFFh 03000h-03FFFh 8 004000h-005FFFh 02000h-02FFFh	64	080000h-08FFFFh	40000h-47FFFh						
64 050000h-05FFFFh 28000h-2FFFFh 64 040000h-04FFFFh 20000h-27FFFh 64 030000h-03FFFFh 18000h-1FFFFh 64 020000h-02FFFFh 10000h-17FFFh 64 010000h-01FFFFh 08000h-0FFFFh 32 008000h-00FFFFh 04000h-07FFFh 8 006000h-007FFFh 03000h-03FFFh 8 004000h-005FFFh 02000h-02FFFh	64	070000h-07FFFh	38000h-3FFFFh						
64 040000h-04FFFFh 20000h-27FFFh 64 030000h-03FFFFh 18000h-1FFFFh 64 020000h-02FFFFh 10000h-17FFFh 64 010000h-01FFFFh 08000h-0FFFFh 32 008000h-00FFFFh 04000h-07FFFh 8 006000h-007FFFh 03000h-03FFFh 8 004000h-005FFFh 02000h-02FFFh	64	060000h-06FFFFh	30000h-37FFFh						
64 030000h-03FFFh 18000h-1FFFFh 64 020000h-02FFFh 10000h-17FFFh 64 010000h-01FFFh 08000h-0FFFFh 32 008000h-00FFFFh 04000h-07FFFh 8 006000h-007FFFh 03000h-03FFFh 8 004000h-005FFFh 02000h-02FFFh	64	050000h-05FFFFh	28000h-2FFFFh						
64 020000h-02FFFFh 10000h-17FFFh 64 010000h-01FFFFh 08000h-0FFFFh 32 008000h-00FFFFh 04000h-07FFFh 8 006000h-007FFFh 03000h-03FFFh 8 004000h-005FFFh 02000h-02FFFh	64	040000h-04FFFFh	20000h-27FFFh						
64 010000h-01FFFFh 08000h-0FFFFh 32 008000h-00FFFFh 04000h-07FFFh 8 006000h-007FFFh 03000h-03FFFh 8 004000h-005FFFh 02000h-02FFFh	64	030000h-03FFFFh	18000h-1FFFFh						
32 008000h-00FFFFh 04000h-07FFFh 8 006000h-007FFFh 03000h-03FFFh 8 004000h-005FFFh 02000h-02FFFh	64	020000h-02FFFFh	10000h-17FFFh						
8 006000h-007FFh 03000h-03FFh 8 004000h-005FFFh 02000h-02FFFh	64	010000h-01FFFFh	08000h-0FFFFh						
8 004000h-005FFFh 02000h-02FFFh	32	008000h-00FFFFh	04000h-07FFFh						
	8	006000h-007FFFh	03000h-03FFFh						
16 000000h-003FFFh 00000h-01FFFh	8	004000h-005FFFh	02000h-02FFFh						
	16	000000h-003FFFh	00000h-01FFFh						

4/20

18000h-1FFFFh

10000h-17FFh 08000h-0FFFh

00000h-07FFFh

Table 4A. Bus Operations, $\overline{\text{BYTE}} = V_{\text{IL}}$

Operation	Ē	G	w	Address Inputs	Data Inputs/Outputs		
Operation	E	G	VV	DQ15A-1, A0-A19	DQ14-DQ8	DQ7-DQ0	
Bus Read	V _{IL}	V_{IL}	V _{IH}	Cell Address	Hi-Z	Data Output	
Bus Write	V _{IL}	V _{IH}	V _{IL}	Command Address	Hi-Z	Data Input	
Output Disable	Х	V _{IH}	V _{IH}	Х	Hi-Z	Hi-Z	
Standby	V _{IH}	Х	Х	Х	Hi-Z	Hi-Z	
Read Manufacturer Code	V _{IL}	V _{IL}	V _{IH}	$ \begin{array}{l} A0 = V_{IL}, \ A1 = V_{IL}, \ A9 = V_{ID}, \\ Others \ V_{IL} \ or \ V_{IH} \end{array} $	Hi-Z	20h	
Read Device Code	V _{IL}	V _{IL}	V _{IH}	$A0 = V_{IH}$, $A1 = V_{IL}$, $A9 = V_{ID}$, Others V_{IL} or V_{IH}	Hi-Z	CCh (M29F160BT) 4Bh (M29F160BB)	

Note: $X = V_{IL}$ or V_{IH} .

Table 4B. Bus Operations, $\overline{\text{BYTE}} = V_{\text{IH}}$

Operation	Ē	G	W	Address Inputs A0-A19	Data Inputs/Outputs DQ15A-1, DQ14-DQ0
Bus Read	V _{IL}	V _{IL}	V _{IH}	Cell Address	Data Output
Bus Write	V _{IL}	V _{IH}	V _{IL}	Command Address	Data Input
Output Disable	Х	V _{IH}	V _{IH}	Х	Hi-Z
Standby	V _{IH}	Х	Х	X	Hi-Z
Read Manufacturer Code	V _{IL}	V _{IL}	V _{IH}	$ \begin{array}{l} A0 = V_{IL}, \ A1 = V_{IL}, \ A9 = V_{ID}, \\ Others \ V_{IL} \ or \ V_{IH} \end{array} $	0020h
Read Device Code	VIL	VIL	V _{IH}	$ \begin{aligned} &A0 = V_{IH}, \ A1 = V_{IL}, \ A9 = V_{ID}, \\ &Others \ V_{IL} \ or \ V_{IH} \end{aligned} $	22CCh (M29F160BT) 224Bh (M29F160BB)

Note: $X = V_{IL}$ or V_{IH} .

 V_{CC} Supply Voltage. The V_{CC} Supply Voltage supplies the power for all operations (Read, Program, Erase etc.).

The Command Interface is disabled when the V_{CC} Supply Voltage is less than the Lockout Voltage, V_{LKO} . This prevents Bus Write operations from accidentally damaging the data during power up, power down and power surges. If the Program/ Erase Controller is programming or erasing during this time then the operation aborts and the memory contents being altered will be invalid. A $0.1\mu F$ capacitor should be connected between the V_{CC} Supply Voltage pin and the V_{SS} Ground pin to decouple the current surges from the power supply. The PCB track widths must be sufficient to carry the currents required during program and erase operations, I_{CC4} .

Vss Ground. The V_{SS} Ground is the reference for all voltage measurements.

BUS OPERATIONS

There are five standard bus operations that control the device. These are Bus Read, Bus Write, Output Disable, Standby and Automatic Standby. See Tables 4A and 4B, Bus Operations, for a summary. Typically glitches of less than 5ns on Chip Enable or Write Enable are ignored by the memory and do not affect bus operations.

Bus Read. Bus Read operations read from the memory cells, or specific registers in the Command Interface. A valid Bus Read operation involves setting the desired address on the Address Inputs, applying a Low signal, V_{IL} , to Chip Enable and Output Enable and keeping Write Enable High, V_{IH} . The Data Inputs/Outputs will output the value, see Figure 7, Read Mode AC Waveforms, and Table 11, Read AC Characteristics, for details of when the output becomes valid.

Bus Write. Bus Write operations write to the Command Interface. A valid Bus Write operation begins by setting the desired address on the Address Inputs. The Address Inputs are latched by the Command Interface on the falling edge of Chip Enable or Write Enable, whichever occurs last. The Data Inputs/Outputs are latched by the Command Interface on the rising edge of Chip Enable or Write Enable, whichever occurs first. Output Enable must remain High, V_{IH}, during the whole Bus Write operation. See Figures 8 and 9, Write AC Waveforms, and Tables 12 and 13, Write AC Characteristics, for details of the timing requirements.

Output Disable. The Data Inputs/Outputs are in the high impedance state when Output Enable is High, V_{IH} .

Standby. When Chip Enable is High, V_{IH} , the Data Inputs/Outputs pins are placed in the high-impedance state and the Supply Current is reduced to the Standby level.

When Chip Enable is at V_{IH} the Supply Current is reduced to the TTL Standby Supply Current, I_{CC2}. To further reduce the Supply Current to the CMOS Standby Supply Current, I_{CC3}, Chip Enable should be held within V_{CC} \pm 0.2V. For Standby current levels see Table 10, DC Characteristics.

During program or erase operations the memory will continue to use the Program/Erase Supply Current, I_{CC4}, for Program or Erase operations until the operation completes.

Automatic Standby. If CMOS levels ($V_{CC} \pm 0.2V$) are used to drive the bus and the bus is inactive for 150ns or more the memory enters Automatic Standby where the internal Supply Current is reduced to the CMOS Standby Supply Current, I_{CC3} . The Data Inputs/Outputs will still output data if a Bus Read operation is in progress.

Special Bus Operations

Additional bus operations can be performed to read the Electronic Signature and also to apply and remove Block Protection. These bus operations are intended for use by programming equipment and are not usually used in applications. They require V_{ID} to be applied to some pins.

Electronic Signature. The memory has two codes, the manufacturer code and the device code, that can be read to identify the memory. These codes can be read by applying the signals listed in Tables 4A and 4B, Bus Operations.

Block Protection and **Blocks Unprotection**. Each block can be separately protected against accidental Program or Erase. Protected blocks can be unprotected to allow data to be changed.

There are two methods available for protecting and unprotecting the blocks, one for use on programming equipment and the other for in-system use. For further information refer to Application Note AN1122, Applying Protection and Unprotection to M29 Series Flash.

COMMAND INTERFACE

All Bus Write operations to the memory are interpreted by the Command Interface. Commands consist of one or more sequential Bus Write operations. Failure to observe a valid sequence of Bus Write operations will result in the memory returning to Read mode. The long command sequences are imposed to maximize data security.

The address used for the commands changes depending on whether the memory is in 16-bit or 8-bit mode. See either Table 5A, or 5B, depending on the configuration that is being used, for a summary of the commands.

Read/Reset Command. The Read/Reset command returns the memory to its Read mode where it behaves like a ROM or EPROM. It also resets the errors in the Status Register. Either one or three Bus Write operations can be used to issue the Read/Reset command.

If the Read/Reset command is issued during a Block Erase operation or following a Programming or Erase error then the memory will take upto 10μ s to abort. During the abort period no valid data can be read from the memory. Issuing a Read/Reset command during a Block Erase operation will leave invalid data in the memory.

Auto Select Command. The Auto Select command is used to read the Manufacturer Code, the Device Code and the Block Protection Status. Three consecutive Bus Write operations are required to issue the Auto Select command. Once the Auto Select command is issued the memory remains in Auto Select mode until another command is issued.

From the Auto Select mode the Manufacturer Code can be read using a Bus Read operation with $A0 = V_{IL}$ and $A1 = V_{IL}$. The other address bits may be set to either V_{IL} or V_{IH} . The Manufacturer Code for STMicroelectronics is 0020h.

The Device Code can be read using a Bus Read operation with $A0 = V_{IH}$ and $A1 = V_{IL}$. The other address bits may be set to either V_{IL} or V_{IH} . The Device Code for the M29F160BT is 22CCh and for the M29F160BB is 224Bh.

The Block Protection Status of each block can be read using a Bus Read operation with $A0 = V_{IL}$, $A1 = V_{IH}$, and A12-A19 specifying the address of the block. The other address bits may be set to either V_{IL} or V_{IH} . If the addressed block is protected then 01h is output on Data Inputs/Outputs DQ0-DQ7, otherwise 00h is output.

Table 5A. Commands, 16-bit mode, BYTE = VIH

	ч		Bus Write Operations										
Command	Length	1:	st	2r	2nd		rd	41	h	5th		6th	
	تّ	Addr	Data	Addr	Data	Addr	Data	Addr	Data	Addr	Data	Addr	Data
Read/Reset	1	Х	F0										
Reau/Reset	3	555	AA	2AA	55	Х	F0						
Auto Select	3	555	AA	2AA	55	555	90						
Program	4	555	AA	2AA	55	555	A0	PA	PD				
Unlock Bypass	3	555	AA	2AA	55	555	20						
Unlock Bypass Program	2	Х	A0	PA	PD								
Unlock Bypass Reset	2	Х	90	Х	00								
Chip Erase	6	555	AA	2AA	55	555	80	555	AA	2AA	55	555	10
Block Erase	6+	555	AA	2AA	55	555	80	555	AA	2AA	55	ВА	30
Erase Suspend	1	Х	В0										
Erase Resume	1	Х	30										

Table 5B. Commands, 8-bit mode, $\overline{\text{BYTE}} = V_{IL}$

	ے	Bus Write Operations											
Command	Length	1:	st	2r	nd	31	rd	41	th	5th		6th	
	۳	Addr	Data	Addr	Data	Addr	Data	Addr	Data	Addr	Data	Addr	Data
Read/Reset	1	Х	F0										
Reau/Reset	3	AAA	AA	555	55	Х	F0						
Auto Select	3	AAA	AA	555	55	AAA	90						
Program	4	AAA	AA	555	55	AAA	A0	PA	PD				
Unlock Bypass	3	AAA	AA	555	55	AAA	20						
Unlock Bypass Program	2	Х	A0	PA	PD								
Unlock Bypass Reset	2	Х	90	Х	00								
Chip Erase	6	AAA	AA	555	55	AAA	80	AAA	AA	555	55	AAA	10
Block Erase	6+	AAA	AA	555	55	AAA	80	AAA	AA	555	55	ВА	30
Erase Suspend	1	Х	В0										
Erase Resume	1	Х	30										

Note: X Don't Care, PA Program Address, PD Program Data, BA Any address in the Block.

All values in the table are in hexadecimal.

The Command Interface only uses A-1, A0-A10 and DQ0-DQ7 to verify the commands; A11-A19, DQ8-DQ14 and DQ15 are Don't Care. DQ15A-1 is A-1 when BYTE is V_{IL} or DQ15 when BYTE is V_{IH}.

Read/Reset. After a Read/Reset command, read the memory as normal until another command is issued.

Auto Select. After an Auto Select command, read Manufacturer ID, Device ID or Block Protection Status.

Program, Unlock Bypass Program, Chip Erase, Block Erase. After these commands read the Status Register until the Program/Erase Controller completes and the memory returns to Read Mode. Add additional Blocks during Block Erase Command with additional Bus Write Operations until the Timeout Bit is set.

Unlock Bypass. After the Unlock Bypass command issue Unlock Bypass Program or Unlock Bypass Reset commands.

Unlock Bypass Reset. After the Unlock Bypass Reset command read the memory as normal until another command is issued.

Erase Suspend. After the Erase Suspend command read non-erasing memory blocks as normal, issue Auto Select and Program commands on non-erasing blocks as normal.

Erase Resume. After the Erase Resume command the suspended Erase operation resumes, read the Status Register until the Program/ Erase Controller completes and the memory returns to Read Mode.

Table 6. Program, Erase Times and Program, Erase Endurance Cycles ($T_A = 0$ to 70° C, -40 to 85° C or -40 to 125° C)

Parameter	Min	Typ ⁽¹⁾	Typical after 100k W/E Cycles ⁽¹⁾	Max	Unit
Chip Erase (All bits in the memory set to '0')		6	6		sec
Chip Erase		16	16		sec
Block Erase (64 Kbytes)		0.6	0.6	t.b.d.	sec
Program (Byte or Word)		8	8		μs
Chip Program (Byte by Byte)		18	18		sec
Chip Program (Word by Word)		9	9		sec
Program/Erase Cycles (per Block)	100,000				cycles

Note: 1. $T_A = 25^{\circ}C$, $V_{CC} = 5V$.

Program Command. The Program command can be used to program a value to one address in the memory array at a time. The command requires four Bus Write operations, the final write operation latches the address and data in the internal state machine and starts the Program/Erase Controller.

If the address falls in a protected block then the Program command is ignored, the data remains unchanged. The Status Register is never read and no error condition is given.

During the program operation the memory will ignore all commands. It is not possible to issue any command to abort or pause the operation. Typical program times are given in Table 6. Bus Read operations during the program operation will output the Status Register on the Data Inputs/Outputs. See the section on the Status Register for more details.

After the program operation has completed the memory will return to the Read mode, unless an error has occurred. When an error occurs the memory will continue to output the Status Register. A Read/Reset command must be issued to reset the error condition and return to Read mode.

Note that the Program command cannot change a bit set at '0' back to '1' and attempting to do so will cause an error. One of the Erase Commands must be used to set all the bits in a block or in the whole memory from '0' to '1'.

Unlock Bypass Command. The Unlock Bypass command is used in conjunction with the Unlock Bypass Program command to program the memo-

ry. When the access time to the device is long (as with some EPROM programmers) considerable time saving can be made by using these commands. Three Bus Write operations are required to issue the Unlock Bypass command.

Once the Unlock Bypass command has been issued the memory will only accept the Unlock Bypass Program command and the Unlock Bypass Reset command. The memory can be read as if in Read mode.

Unlock Bypass Program Command. The Unlock Bypass Program command can be used to program one address in memory at a time. The command requires two Bus Write operations, the final write operation latches the address and data in the internal state machine and starts the Program/Erase Controller.

The Program operation using the Unlock Bypass Program command behaves identically to the Program operation using the Program command. A protected block cannot be programmed; the operation cannot be aborted and the Status Register is read. Errors must be reset using the Read/Reset command, which leaves the device in Unlock Bypass Mode. See the Program command for details on the behavior.

Unlock Bypass Reset Command. The Unlock Bypass Reset command can be used to return to Read/Reset mode from Unlock Bypass Mode. Two Bus Write operations are required to issue the Unlock Bypass Reset command.

Chip Erase Command. The Chip Erase command can be used to erase the entire chip. Six Bus Write operations are required to issue the Chip Erase Command and start the Program/Erase Controller.

If any blocks are protected then these are ignored and all the other blocks are erased. If all of the blocks are protected the Chip Erase operation appears to start but will terminate within about 100µs, leaving the data unchanged. No error condition is given when protected blocks are ignored.

During the erase operation the memory will ignore all commands. It is not possible to issue any command to abort the operation. Typical chip erase times are given in Table 6. All Bus Read operations during the Chip Erase operation will output the Status Register on the Data Inputs/Outputs. See the section on the Status Register for more details.

After the Chip Erase operation has completed the memory will return to the Read Mode, unless an error has occurred. When an error occurs the memory will continue to output the Status Register. A Read/Reset command must be issued to reset the error condition and return to Read Mode.

The Chip Erase Command sets all of the bits in unprotected blocks of the memory to '1'. All previous data is lost.

Block Erase Command. The Block Erase command can be used to erase a list of one or more blocks. Six Bus Write operations are required to select the first block in the list. Each additional block in the list can be selected by repeating the sixth Bus Write operation using the address of the additional block. The Block Erase operation starts the Program/Erase Controller about 50µs after the last Bus Write operation. Once the Program/Erase Controller starts it is not possible to select any more blocks. Each additional block must therefore be selected within 50µs of the last block. The 50µs timer restarts when an additional block is selected. The Status Register can be read after the sixth Bus Write operation. See the Status Register for details on how to identify if the Program/Erase Controller has started the Block Erase operation.

If any selected blocks are protected then these are ignored and all the other selected blocks are erased. If all of the selected blocks are protected the Block Erase operation appears to start but will terminate within about 100µs, leaving the data un-

changed. No error condition is given when protected blocks are ignored.

During the Block Erase operation the memory will ignore all commands except the Erase Suspend and Read/Reset commands. Typical block erase times are given in Table 6. All Bus Read operations during the Block Erase operation will output the Status Register on the Data Inputs/Outputs. See the section on the Status Register for more details.

After the Block Erase operation has completed the memory will return to the Read Mode, unless an error has occurred. When an error occurs the memory will continue to output the Status Register. A Read/Reset command must be issued to reset the error condition and return to Read mode.

The Block Erase Command sets all of the bits in the unprotected selected blocks to '1'. All previous data in the selected blocks is lost.

Erase Suspend Command. The Erase Suspend Command may be used to temporarily suspend a Block Erase operation and return the memory to Read mode. The command requires one Bus Write operation.

The Program/Erase Controller will suspend within 15µs of the Erase Suspend Command being issued. Once the Program/Erase Controller has stopped the memory will be set to Read mode and the Erase will be suspended. If the Erase Suspend command is issued during the period when the memory is waiting for an additional block (before the Program/Erase Controller starts) then the Erase is suspended immediately and will start immediately when the Erase Resume Command is issued. It will not be possible to select any further blocks for erasure after the Erase Resume.

During Erase Suspend it is possible to Read and Program cells in blocks that are not being erased; both Read and Program operations behave as normal on these blocks. Reading from blocks that are being erased will output the Status Register. It is also possible to enter the Auto Select mode: the memory will behave as in the Auto Select mode on all blocks until a Read/Reset command returns the memory to Erase Suspend mode.

Erase Resume Command. The Erase Resume command must be used to restart the Program/ Erase Controller from Erase Suspend. An erase can be suspended and resumed more than once.

Table 7. Status Register Bits

Operation	Address	DQ7	DQ6	DQ5	DQ3	DQ2	$R\overline{B}$	
Program	Any Address	DQ7	Toggle	0	_	_	0	
Program During Erase Suspend	Any Address	DQ7	Toggle	0	_	_	0	
Program Error	Any Address	DQ7	Toggle	1	_	_	0	
Chip Erase	Any Address	0	Toggle	0	1	Toggle	0	
Block Erase before	Erasing Block	0	Toggle	0	0	Toggle	0	
timeout	Non-Erasing Block	0	Toggle	0	0	No Toggle	0	
Block Erase	Erasing Block	0	Toggle	0	1	Toggle	0	
DIOCK ETase	Non-Erasing Block	0	Toggle	0	1	No Toggle	0	
Erase Suspend	Erasing Block	1	No Toggle	0	1	Toggle	1	
Erase Suspend	Non-Erasing Block	Data read as normal						
Erase Error	Good Block Address	0	Toggle	1	1	No Toggle	0	
LIASE LITUI	Faulty Block Address	0	Toggle	1	1	Toggle	0	

Note: Unspecified data bits should be ignored.

STATUS REGISTER

Bus Read operations from any address always read the Status Register during Program and Erase operations. It is also read during Erase Suspend when an address within a block being erased is accessed.

The bits in the Status Register are summarized in Table 7, Status Register Bits.

Data Polling Bit (DQ7). The Data Polling Bit can be used to identify whether the Program/Erase Controller has successfully completed its operation or if it has responded to an Erase Suspend. The Data Polling Bit is output on DQ7 when the Status Register is read.

During Program operations the Data Polling Bit outputs the complement of the bit being programmed to DQ7. After successful completion of the Program operation the memory returns to Read mode and Bus Read operations from the address just programmed output DQ7, not its complement.

During Erase operations the Data Polling Bit outputs '0', the complement of the erased state of DQ7. After successful completion of the Erase operation the memory returns to Read Mode.

In Erase Suspend mode the Data Polling Bit will output a '1' during a Bus Read operation within a block being erased. The Data Polling Bit will change from a '0' to a '1' when the Program/Erase Controller has suspended the Erase operation.

Figure 3, Data Polling Flowchart, gives an example of how to use the Data Polling Bit. A Valid Ad-

dress is the address being programmed or an address within the block being erased.

Toggle Bit (DQ6). The Toggle Bit can be used to identify whether the Program/Erase Controller has successfully completed its operation or if it has responded to an Erase Suspend. The Toggle Bit is output on DQ6 when the Status Register is read.

During Program and Erase operations the Toggle Bit changes from '0' to '1' to '0', etc., with successive Bus Read operations at any address. After successful completion of the operation the memory returns to Read mode.

During Erase Suspend mode the Toggle Bit will output when addressing a cell within a block being erased. The Toggle Bit will stop toggling when the Program/Erase Controller has suspended the Erase operation.

Figure 4, Data Toggle Flowchart, gives an example of how to use the Data Toggle Bit.

Error Bit (DQ5). The Error Bit can be used to identify errors detected by the Program/Erase Controller. The Error Bit is set to '1' when a Program, Block Erase or Chip Erase operation fails to write the correct data to the memory. If the Error Bit is set a Read/Reset command must be issued before other commands are issued. The Error bit is output on DQ5 when the Status Register is read. Note that the Program command cannot change a bit set at '0' back to '1' and attempting to do so will cause an error. One of the Erase commands must be used to set all the bits in a block or in the whole memory from '0' to '1'.

Figure 3. Data Polling Flowchart


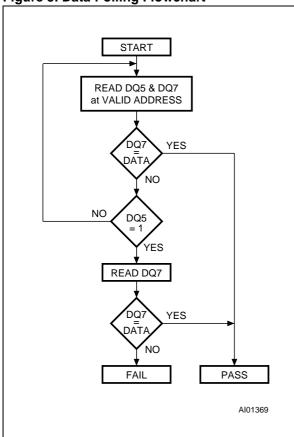


Figure 4. Data Toggle Flowchart

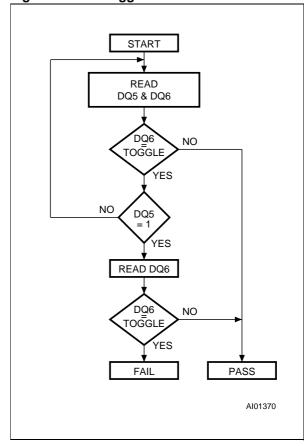

Erase Timer Bit (DQ3). The Erase Timer Bit can be used to identify the start of Program/Erase Controller operation during a Block Erase command. Once the Program/Erase Controller starts erasing the Erase Timer Bit is set to '1'. Before the Program/Erase Controller starts the Erase Timer Bit is set to '0' and additional blocks to be erased may be written to the Command Interface. The Erase Timer Bit is output on DQ3 when the Status Register is read.

Alternative Toggle Bit (DQ2). The Alternative Toggle Bit can be used to monitor the Program/ Erase controller during Erase operations. The Alternative Toggle Bit is output on DQ2 when the Status Register is read.

During Chip Erase and Block Erase operations the Toggle Bit changes from '0' to '1' to '0', etc., with successive Bus Read operations from addresses

within the blocks being erased. Once the operation completes the memory returns to Read mode.

During Erase Suspend the Alternative Toggle Bit changes from '0' to '1' to '0', etc. with successive Bus Read operations from addresses within the blocks being erased. Bus Read operations to addresses within blocks not being erased will output the memory cell data as if in Read mode.

After an Erase operation that causes the Error Bit to be set the Alternative Toggle Bit can be used to identify which block or blocks have caused the error. The Alternative Toggle Bit changes from '0' to '1' to '0', etc. with successive Bus Read Operations from addresses within blocks that have not erased correctly. The Alternative Toggle Bit does not change if the addressed block has erased correctly.

Table 8. AC Measurement Conditions

Davameter	M29F160B					
Parameter	55 / 70	90				
AC Test Conditions	High Speed	Standard				
Load Capacitance (C _L)	30pF	100pF				
Input Rise and Fall Times	≤ 10ns	≤ 10ns				
Input Pulse Voltages	0 to 3V	0.45 to 2.4V				
Input and Output Timing Ref. Voltages	1.5V	0.8V and 2.0V				

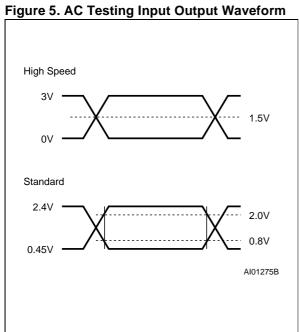


Figure 6. AC Testing Load Circuit

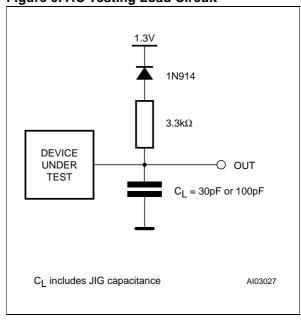


Table 9. Capacitance (T_A = 25 °C, f = 1 MHz)

Symbol	Parameter	Test Condition	Min	Max	Unit
C _{IN}	Input Capacitance	$V_{IN} = 0V$		6	pF
C _{OUT}	Output Capacitance	V _{OUT} = 0V		12	pF

Note: Sampled only, not 100% tested.

Table 10. DC Characteristics $(T_A = 0 \text{ to } 70^{\circ}\text{C}, -40 \text{ to } 85^{\circ}\text{C} \text{ or } -40 \text{ to } 125^{\circ}\text{C})$

Symbol	Parameter	Test Condition	Min	Max	Unit
I _{LI}	Input Leakage Current	$0V \le V_{IN} \le V_{CC}$		±1	μΑ
I _{LO}	Output Leakage Current	0V ≤ V _{OUT} ≤ V _{CC}		±1	μA
I _{CC1}	Supply Current (Read)	$\overline{E} = V_{IL}, \overline{G} = V_{IH}, f = 6MHz$		20	mA
I _{CC2}	Supply Current (Standby) TTL	E = V _{IH}		1	mA
I _{CC3}	Supply Current (Standby) CMOS	$\overline{E} = V_{CC} \pm 0.2V$		150	μΑ
I _{CC4} ⁽¹⁾	Supply Current (Program/Erase)	Program/Erase Controller active		20	mA
V _{IL}	Input Low Voltage		-0.5	0.8	V
V _{IH}	Input High Voltage		2	V _{CC} + 0.5	V
V _{OL}	Output Low Voltage	I _{OL} = 5.8mA		0.45	V
V _{OH}	Output High Voltage TTL	I _{OH} = −2.5mA	2.4		V
VOH	Output High Voltage CMOS	I _{OH} = -100μA	V _{CC} - 0.4		V
V _{ID}	Identification Voltage		11.5	12.5	V
I _{ID}	Identification Current	A9 = V _{ID}		100	μA
V _{LKO} (1)	Program/Erase Lockout Supply Voltage		3.2	4.2	V

Note: 1. Sampled only, not 100% tested.


Table 11. Read AC Characteristics

 $(TA = 0 \text{ to } 70^{\circ}C, -40 \text{ to } 85^{\circ}C \text{ or } -40 \text{ to } 125^{\circ}C)$

Symbol	Alt Parameter		Tost Cond	Test Condition		M29F160B		
Symbol	Alt	Parameter	rest Cond	rest condition		70	90	Unit
t _{AVAV}	t _{RC}	Address Valid to Next Address Valid	$\overline{E} = V_{IL},$ $\overline{G} = V_{IL}$	Min	55	70	90	ns
t _{AVQV}	t _{ACC}	Address Valid to Output Valid	Address Valid to Output Valid $\frac{\overline{E} = V_{IL}}{\overline{G} = V_{IL}}$ Max		55	70	90	ns
t _{ELQX} (1)	t _{LZ}	Chip Enable Low to Output Transition	G = V _{IL}	Min	0	0	0	ns
t _{ELQV}	t _{CE}	Chip Enable Low to Output Valid	G = V _{IL}	Max	55	70	90	ns
t _{GLQX} (1)	t _{OLZ}	Output Enable Low to Output Transition	$\overline{E} = V_{IL}$	Min	0	0	0	ns
t _{GLQV}	toe	Output Enable Low to Output Valid	E = V _{IL}	Max	30	30	35	ns
t _{EHQZ} (1)	t _{HZ}	Chip Enable High to Output Hi-Z	G = V _{IL}	Max	18	20	20	ns
t _{GHQZ} (1)	t _{DF}	Output Enable High to Output Hi-Z	E = V _{IL}	Max	18	20	20	ns
t _{EHQX} t _{GHQX} t _{AXQX}	tон	Chip Enable, Output Enable or Address Transition to Output Transition		Min	0	0	0	ns
t _{ELBL} t _{ELBH}	t _{ELFL}	Chip Enable to BYTE Low or High		Max	5	5	5	ns
t _{BLQZ}	t _{FLQZ}	BYTE Low to Output Hi-Z		Max	15	20	20	ns
t _{BHQV}	t _{FHQV}	BYTE High to Output Valid		Max	30	30	40	ns

Note: 1. Sampled only, not 100% tested.

Figure 7. Read Mode AC Waveforms

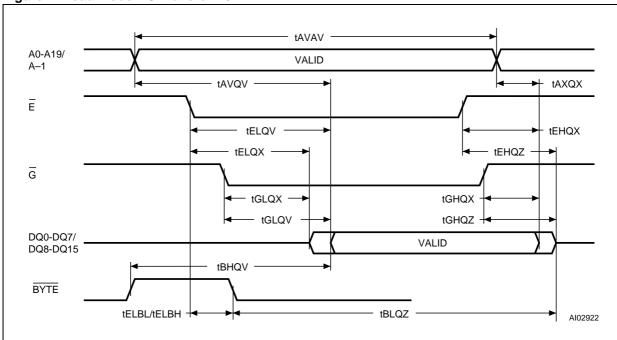

15/20

Table 12. Write AC Characteristics, Write Enable Controlled (T_A = 0 to 70 °C, -40 to 85 °C or -40 to 125 °C)

Symbol	A 14	Alt Boromotor			M29F160B		
Symbol	Alt	Parameter	•	55	70	90	Unit
t _{AVAV}	t _{WC}	Address Valid to Next Address Valid	Min	55	70	90	ns
t _{ELWL}	t _{CS}	Chip Enable Low to Write Enable Low	Min	0	0	0	ns
t _{WLWH}	t _{WP}	Write Enable Low to Write Enable High	Min	40	45	45	ns
t _{DVWH}	t _{DS}	Input Valid to Write Enable High	Min	25	30	45	ns
t _{WHDX}	t _{DH}	Write Enable High to Input Transition	Min	0	0	0	ns
twheh	tCH	Write Enable High to Chip Enable High	Min	0	0	0	ns
t _{WHWL}	twpH	Write Enable High to Write Enable Low	Min	20	20	20	ns
t _{AVWL}	t _{AS}	Address Valid to Write Enable Low	Min	0	0	0	ns
t _{WLAX}	t _{AH}	Write Enable Low to Address Transition	Min	40	45	45	ns
t _{GHWL}		Output Enable High to Write Enable Low	Min	0	0	0	ns
t _{WHGL}	toeh	Write Enable High to Output Enable Low	Min	0	0	0	ns
t _{WHRL} (1)	t _{BUSY}	Program/Erase Valid to RB Low	Max	30	30	35	ns
tvchel	t _{VCS}	V _{CC} High to Chip Enable Low	Min	50	50	50	μs

Note: 1. Sampled only, not 100% tested.

Figure 8. Write AC Waveforms, Write Enable Controlled


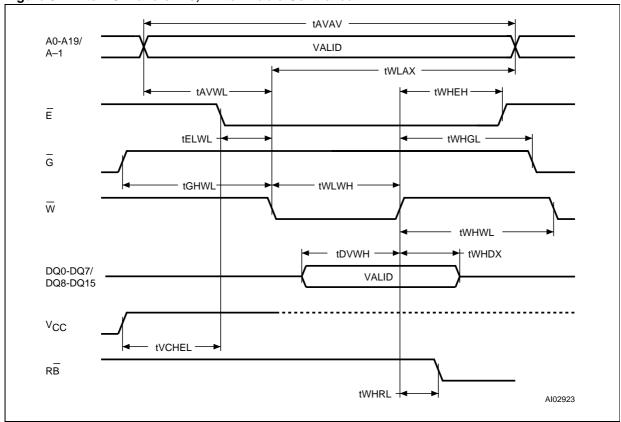


Table 13. Write AC Characteristics, Chip Enable Controlled (T_A = 0 to 70 °C, -40 to 85 °C or -40 to 125 °C)

Cumbal	Alt	Parameter			M29F160B		
Symbol Alt		Parameter	55	70	90	Unit	
t _{AVAV}	t _{WC}	Address Valid to Next Address Valid	Min	55	70	90	ns
tWLEL	t _{WS}	Write Enable Low to Chip Enable Low	Min	0	0	0	ns
tELEH	t _{CP}	Chip Enable Low to Chip Enable High	Min	40	45	45	ns
t _{DVEH}	t _{DS}	Input Valid to Chip Enable High	Min	25	30	45	ns
t _{EHDX}	t _{DH}	Chip Enable High to Input Transition	Min	0	0	0	ns
tEHWH	t _{WH}	Chip Enable High to Write Enable High	Min	0	0	0	ns
tehel	tcph	Chip Enable High to Chip Enable Low	Min	20	20	20	ns
t _{AVEL}	t _{AS}	Address Valid to Chip Enable Low	Min	0	0	0	ns
t _{ELAX}	t _{AH}	Chip Enable Low to Address Transition	Min	40	45	45	ns
t _{GHEL}		Output Enable High Chip Enable Low	Min	0	0	0	ns
t _{EHGL}	toeh	Chip Enable High to Output Enable Low	Min	0	0	0	ns
t _{EHRL} (1)	tBUSY	Program/Erase Valid to RB Low	Max	30	30	35	ns
tvchwL	t _{VCS}	V _{CC} High to Write Enable Low	Min	50	50	50	μs

Note: 1. Sampled only, not 100% tested.

Figure 9. Write AC Waveforms, Chip Enable Controlled

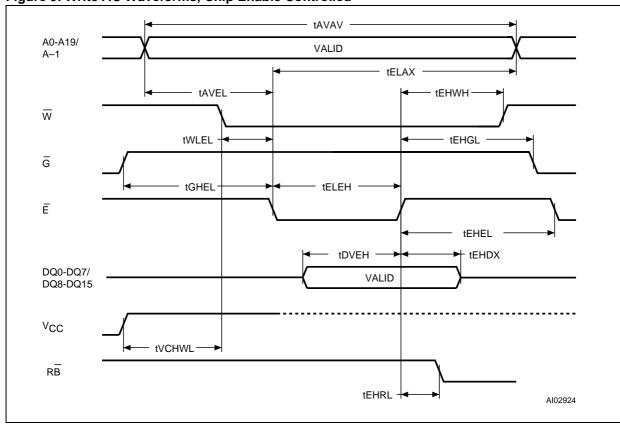

47/ 16/20

Table 14. Reset/Block Temporary Unprotect AC Characteristics (T_A = 0 to 70 °C, -40 to 85 °C or -40 to 125 °C)

Symbol	Alt	Parameter		M29F160B			Unit
Syllibol	Ait	raiailletei	55	70	90	O.III	
t _{PHWL} ⁽¹⁾ t _{PHEL} t _{PHGL} ⁽¹⁾	t _{RH}	RP High to Write Enable Low, Chip Enable Low, Output Enable Low	Min	50	50	50	ns
t _{RHWL} (1) t _{RHEL} (1) t _{RHGL} (1)	t _{RB}	RB High to Write Enable Low, Chip Enable Low, Output Enable Low	Min	0	0	0	ns
t _{PLPX}	t _{RP}	RP Pulse Width	Min	500	500	500	ns
t _{PLYH} (1)	t _{READY}	RP Low to Read Mode	Max	10	10	10	μs
t _{PHPHH} (1)	t _{VIDR}	RP Rise Time to V _{ID}	Min	500	500	500	ns

Note: 1. Sampled only, not 100% tested.

Figure 10. Reset/Block Temporary Unprotect AC Waveforms


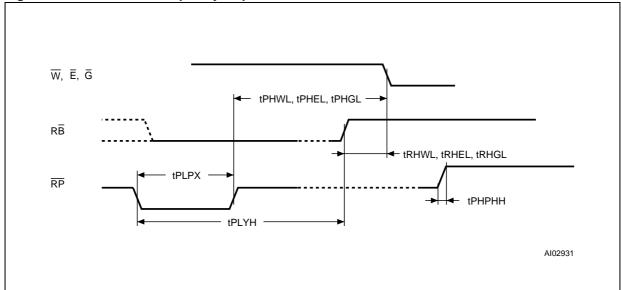


Table 15. Ordering Information Scheme

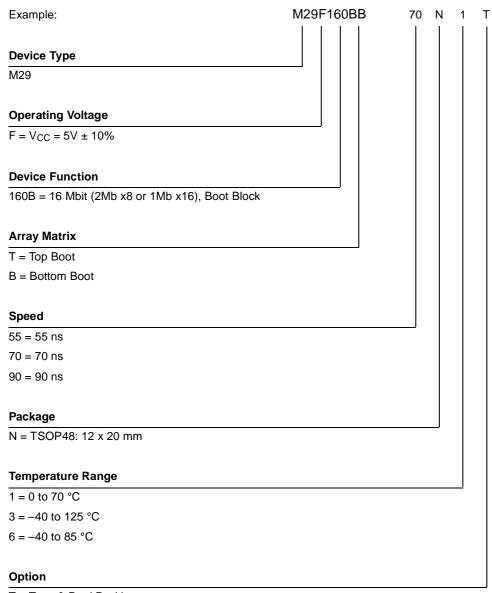

T = Tape & Reel Packing

Note: The last two characters of the ordering code may be replaced by a letter code for preprogrammed parts, otherwise devices are shipped from the factory with the memory content erased (to FFFFh).

For a list of available options (Speed, Package, etc...) or for further information on any aspect of this device, please contact the ST Sales Office nearest to you.

57

Table 16. TSOP48 - 48 lead Plastic Thin Small Outline, 12 x 20mm, Package Mechanical Data

Symbol		mm			inches			
Symbol	Тур	Min	Max	Тур	Min	Max		
А			1.20			0.047		
A1		0.05	0.15		0.002	0.006		
A2		0.95	1.05		0.037	0.041		
В		0.17	0.27		0.007	0.011		
С		0.10	0.21		0.004	0.008		
D		19.80	20.20		0.780	0.795		
D1		18.30	18.50		0.720	0.728		
E		11.90	12.10		0.469	0.476		
е	0.50	-	_	0.020	_	_		
L		0.50	0.70		0.020	0.028		
α		0°	5°		0°	5°		
N		48	•		48			
СР			0.10			0.004		

Α1

Drawing is not to scale.

TSOP-a

Information furnished is believed to be accurate and reliable. However, STMicroelectronics assumes no responsibility for the consequences of use of such information nor for any infringement of patents or other rights of third parties which may result from its use. No license is granted by implication or otherwise under any patent or patent rights of STMicroelectronics. Specifications mentioned in this publication are subject to change without notice. This publication supersedes and replaces all information previously supplied. STMicroelectronics products are not authorized for use as critical components in life support devices or systems without express written approval of STMicroelectronics.

The ST logo is registered trademark of STMicroelectronics ® 1999 STMicroelectronics - All Rights Reserved

All other names are the property of their respective owners.

STMicroelectronics GROUP OF COMPANIES

Australia - Brazil - Canada - China - France - Germany - Italy - Japan - Korea - Malaysia - Malta - Mexico - Morocco - The Netherlands - Singapore - Spain - Sweden - Switzerland - Taiwan - Thailand - United Kingdom - U.S.A.

http://www.st.com