

**For Vacuum Ultraviolet Light Detection
Cs-Te (R7311), Cs-I (R7511) Photocathode, MgF₂ Window,
13mm (1/2 Inch) Diameter, 9-stage, Side-on Type**

FEATURES

- Sensitivity in the Vacuum Ultraviolet Region
 - R7311.....115 to 320nm
 - R7511.....115 to 195nm
- High Quantum Efficiency (at 121.6nm)
 - R7311.....17.3% (Typ.)
 - R7511.....26.5% (Typ.)
- High Anode Sensitivity
 - R7311 (at 200nm)..... 3.8×10^5 A/W (Typ.)
 - R7511 (at 121.6nm)..... 5.2×10^4 A/W (Typ.)

APPLICATIONS

- Emission Spectroscopy, etc.




TPMSF0077

GENERAL

Parameter		R7311	R7511	Unit
Spectral Response		115 to 320	115 to 195	nm
Wavelength of Maximum Response		200	130	nm
Photocathode Material		Cs-Te	Cs-I	—
Window Material		MgF ₂		—
Minimum Effective Area		4 × 5		mm
Dynode	Structure	Circular-cage		—
	Number of Stage	9		—
	Material	Sb-Cs		—
Direct Interelectrode Capacitances	Anode to Dynode No.9	Approx. 1.7		pF
	All Other Electrodes	Approx. 2.0		pF
Base		11-pin base		—
Weight		7		g
Suitable Socket for Base (supplied)		E678-11H		—

Figure 1: Typical Spectral Response

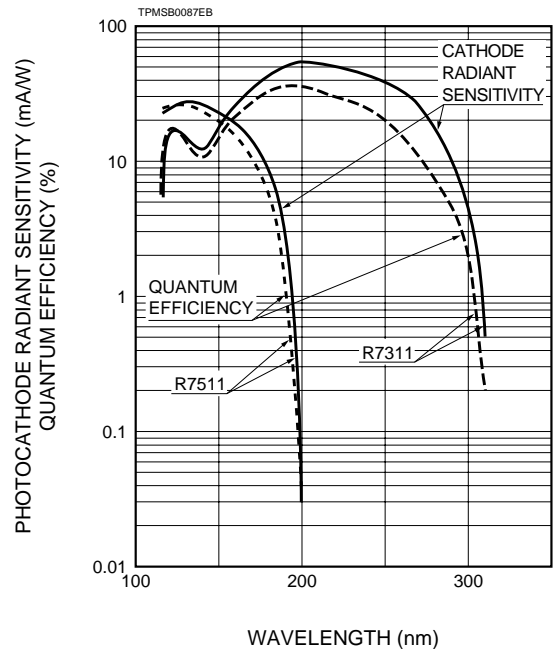

PHOTOMULTIPLIER TUBES R7311, R7511

MAXIMUM RATINGS (Absolute Maximum Values)

Parameter		Value	Unit
Supply Voltage	Between Anode and Cathode	1250	Vdc
	Between Each Succeeding Electrode	150	Vdc
Average Anode Current		0.01	mA
Ambient Temperature		-80 to +50	°C

CHARACTERISTICS (at 25°C)

Parameter	R7311			R7511			Unit	
	Min.	Typ.	Max.	Min.	Typ.	Max.		
Cathode Sensitivity	Radiant ^(A)	—	55	—	—	26	mA/W	
	Quantum Efficiency	at 121.6nm	—	17.3	—	—	26.5	%
Anode Sensitivity	Radiant	at 200nm	—	34.1	—	—	—	%
		at 121.6nm	—	1.2×10^5	—	—	5.2×10^4	A/W
Gain	—	at 200nm	—	3.8×10^5	—	—	—	A/W
		—	—	7.0×10^6	—	—	2.0×10^6	—
Anode Dark Current		—	0.3	3	—	0.3	3	nA
Time Response	Anode Pulse Rise Time	—	1.4	—	—	1.4	—	ns
	Electron Transit Time	—	15	—	—	15	—	ns

NOTE: (A) R7311 at 200nm, R7511 at 121.6nm

VOLTAGE DISTRIBUTION RATIO

Electrodes	K	Dy1	Dy2	Dy3	Dy4	Dy5	Dy6	Dy7	Dy8	Dy9	P
Ratio	1	1	1	1	1	1	1	1	1	1	1

Supply Voltage: 1000Vdc, K: Cathode, Dy: Dynode, P: Anode

Figure 2: Typical Gain Characteristics


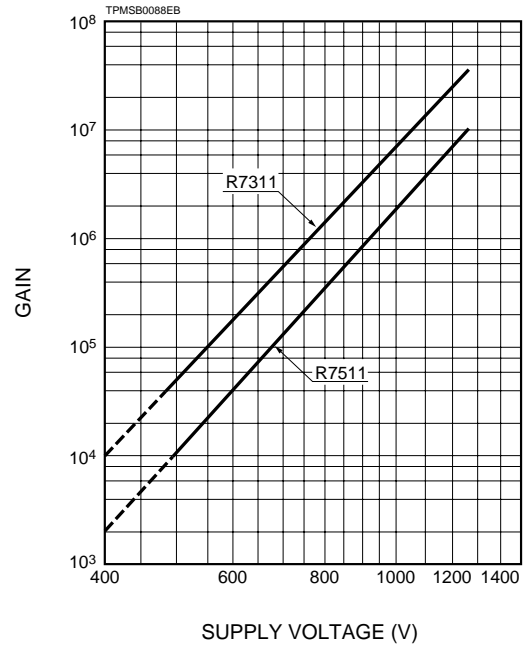


Figure 3: Dimensional Outline and Basing Diagram (Unit: mm)

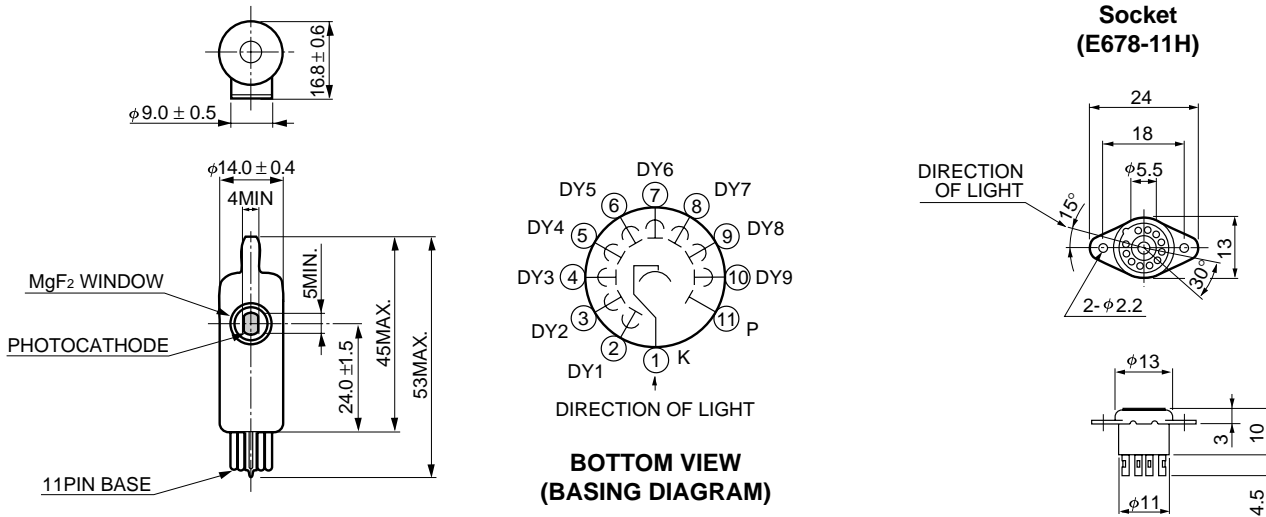

TPMSA0038EB

TACCA0038EA

HAMAMATSU

HAMAMATSU PHOTONICS K.K., Electron Tube Center

314-5, Shimokanzo, Toyooka-village, Iwata-gun, Shizuoka-ken, 438-0193, Japan, Telephone: (81)539/62-5248, Fax: (81)539/62-2205

U.S.A.: Hamamatsu Corporation: 360 Foothill Road, P. O. Box 6910, Bridgewater, N.J. 08807-0910, U.S.A., Telephone: (1)908-231-0960, Fax: (1)908-231-1218

Germany: Hamamatsu Photonics Deutschland GmbH: Arzbergerstr. 10, D-82211 Herrsching am Ammersee, Germany, Telephone: (49)8152-375-0, Fax: (49)8152-2658

France: Hamamatsu Photonics France S.A.R.L.: 8, Rue du Saule Trapu, Parc du Moulin de Massy, 91882 Massy Cedex, France, Telephone: (33)1 69 53 71 00, Fax: (33)1 69 53 71 10

United Kingdom: Hamamatsu Photonics UK Limited: Lough Point, 2 Gladbeck Way, Windmill Hill, Enfield, Middlesex EN2 7JA, United Kingdom, Telephone: (44)181-367-3560, Fax: (44)181-367-6384

North Europe: Hamamatsu Photonics Norden AB: Färögatan 7, S-164-40 Kista Sweden, Telephone: (46)8-703-29-50, Fax: (46)8-750-58-95

Italy: Hamamatsu Photonics Italia: S.R.L.: Strada della Moia, 1/E, 20020 Arese, (Milano), Italy, Telephone: (39)02-935 81 733, Fax: (39)02-935 81 741

TPMS1038E02

JUL. 1998 SI

Printed in Japan (500)