

SYNCHRONOUS DRAM

512Mb: x4, x8, x16 SDRAM

MT48LC128M4A2 – 32 Meg x 4 x 4 banks MT48LC64M8A2 – 16 Meg x 8 x 4 banks MT48LC32M16A2 – 8 Meg x 16 x 4 banks

For the latest data sheet, please refer to the Micron Web site: www.micron.com/dramds

FEATURES

- PC100- and PC133-compliant
- Fully synchronous; all signals registered on positive edge of system clock
- Internal pipelined operation; column address can be changed every clock cycle
- Internal banks for hiding row access/precharge
- Programmable burst lengths: 1, 2, 4, 8, or full page
- Auto Precharge, includes CONCURRENT AUTO PRECHARGE, and Auto Refresh Modes
- Self Refresh Mode
- 64ms, 8,192-cycle refresh
- LVTTL-compatible inputs and outputs
- Single +3.3V ±0.3V power supply

OPTIONS MARKING

 Configurations 	
128 Meg x 4 (32 Meg x 4 x 4 banks)	128M4
64 Meg x 8 (16 Meg x 8 x 4 banks)	64M8
32 Meg x 16 (8 Meg x 16 x 4 banks)	32M16
• WRITE Recovery (^t WR)	
$^{t}WR = "2 \text{ CLK}"^{1}$	A2
• Plastic Package – OCPL ²	
54-pin TSOP II (400 mil)	TG
• Timing (Cycle Time)	
7.5ns @ CL = 2 (PC133)	-7E
7.5ns @ CL = 3 (PC133)	-75
Self Refresh	
Standard	None
Low power	L
Operating Temperature	
Commercial ($0^{\circ}C$ to +70°C)	None

NOTE: 1. Refer to Micron Technical Note TN-48-05. 2. Off-center parting line.

Part Number Example: MT48LC32M16A2TG-75

512Mb SDRAM PART NUMBERS

PART NUMBER	ARCHITECTURE
MT48LC128M4A2TG	128 Meg x 4
MT48LC64M8A2TG	64 Meg x 8
MT48LC32M16A2TG	32 Meg x 16

Pin Assignment (Top View) 54-Pin TSOP

<u>_x4</u>	<u>x8</u>	<u>x16</u>				<u>x16</u>	<u>x8</u>	<u>x4</u>
-	-	Vdd	1•	54		Vss	-	-
NC	DQ0	DQ0	2	53		DQ15	DQ7	NC
-	-	VDDQ	3	52		VssQ	-	-
NC	NC	DQ1	4	51		DQ14	NC	NC
DQ0	DQ1	DQ2	5	50		DQ13	DQ6	DQ3
-	-	VssQ	6	49		VDDQ	-	-
NC	NC	DQ3	7	48		DQ12	NC	NC
NC	DQ2	DQ4	8	47		DQ11	DQ5	NC
-	-	VddQ	9	46		VssQ	-	-
NC	NC	DQ5	10	45		DQ10	NC	NC
DQ1	DQ3	DQ6	11	44		DQ9	DQ4	DQ2
-	-	VssQ	12	43		VddQ	-	-
NC	NC	DQ7	13	42		DQ8	NC	NC
-	-	Vdd	14	41		Vss	-	-
NC	NC	DQML	15	40	μ Π	NC	-	-
-	-	WE#	16	39		DQMH	DQM	DQM
-	-	CAS#	17	38	μ.	CLK	-	-
-	-	RAS#	18	37		CKE	-	-
-	-	CS#	19	36		A12	-	-
-	-	BA0	20	35		A11	-	-
-	-	BA1	21	34		A9	-	-
-	-	A10	22	33		A8	-	-
-	-	A0	23	32		A7	-	-
-	-	A1	24	31		A6	-	-
-	-	A2	25	30		A5	-	-
-	-	A3	26	29		A4	-	-
-	-	Vdd	27	28		Vss	-	-

NOTE: The # symbol indicates signal is active LOW. A dash (-) indicates x8 and x4 pin function is same as x16 pin function.

	128 Meg x 4	64 Meg x 8	32 Meg x 16		
Configuration	32 Meg x 4 x 4 banks	16 Meg x 8 x 4 banks	8 Meg x 16 x 4 banks		
Refresh Count	8K	8K	8K		
Row Addressing	8K (A0–A12)	8K (A0–A12)	8K (A0–A12)		
Bank Addressing	4 (BA0, BA1)	4 (BA0, BA1)	4 (BA0, BA1)		
Column Addressing	4K (A0–A9, A11, A12)	2K (A0–A9, A11)	1K (A0–A9)		

KEY TIMING PARAMETERS

SPEED	CLOCK	ACCESS TIME		SETUP	HOLD	
GRADE	FREQUENCY	CL = 2*	CL = 3*	TIME	TIME	
-7E	143 MHz	-	5.4ns	1.5ns	0.8ns	
-75	133 MHz	-	5.4ns	1.5ns	0.8ns	
-7E	133 MHz	5.4ns	-	1.5ns	0.8ns	
-75	100 MHz	6ns	-	1.5ns	0.8ns	

*CL = CAS (READ) latency

512Mb: x4, x8, x16 SDRAM 512MSDRAM_D.p65 – Rev. D; Pub 1/02

1

Micron Technology, Inc., reserves the right to change products or specifications without notice. ©2000, Micron Technology, Inc.

‡ PRODUCTS AND SPECIFICATIONS DISCUSSED HEREIN ARE FOR EVALUATION AND REFERENCE PURPOSES ONLY AND ARE SUBJECT TO CHANGE BY MICRON WITHOUT NOTICE. PRODUCTS ARE ONLY WARRANTED BY MICRON TO MEET MICRON'S PRODUCTION DATA SHEET SPECIFICATIONS.



GENERAL DESCRIPTION

The 512Mb SDRAM is a high-speed CMOS, dynamic random-access memory containing 536,870,912 bits. It is internally configured as a quad-bank DRAM with a synchronous interface (all signals are registered on the positive edge of the clock signal, CLK). Each of the x4's 134,217,728-bit banks is organized as 8,192 rows by 4,096 columns by 4 bits. Each of the x8's 134,217,728-bit banks is organized as 8,192 rows by 2,048 columns by 8 bits. Each of the x16's 134,217,728-bit banks is organized as 8,192 rows by 1,024 columns by 16 bits.

Read and write accesses to the SDRAM are burst oriented; accesses start at a selected location and continue for a programmed number of locations in a programmed sequence. Accesses begin with the registration of an AC-TIVE command, which is then followed by a READ or WRITE command. The address bits registered coincident with the ACTIVE command are used to select the bank and row to be accessed (BA0, BA1 select the bank; A0-A12 select the row). The address bits registered coincident with the READ or WRITE command are used to select the starting column location for the burst access.

The SDRAM provides for programmable READ or WRITE burst lengths of 1, 2, 4, or 8 locations, or the full

page, with a burst terminate option. An auto precharge function may be enabled to provide a self-timed row precharge that is initiated at the end of the burst sequence.

The 512Mb SDRAM uses an internal pipelined architecture to achieve high-speed operation. This architecture is compatible with the 2*n* rule of prefetch architectures, but it also allows the column address to be changed on every clock cycle to achieve a high-speed, fully random access. Precharging one bank while accessing one of the other three banks will hide the precharge cycles and provide seamless, high-speed, random-access operation.

The 512Mb SDRAM is designed to operate at 3.3V. An auto refresh mode is provided, along with a power-saving, power-down mode. All inputs and outputs are LVTTL-compatible.

SDRAMs offer substantial advances in DRAM operating performance, including the ability to synchronously burst data at a high data rate with automatic columnaddress generation, the ability to interleave between internal banks to hide precharge time and the capability to randomly change column addresses on each clock cycle during a burst access.



TABLE OF CONTENTS

Functional Block Diagram – 128 Meg x 4	4
Functional Block Diagram – 64 Meg x 8	5
Functional Block Diagram – 32 Meg x 16	6
Pin Descriptions	7
Functional Description	8
Initialization	8
Register Definition	8
Mode Register	8
Burst Length	8
Burst Type	9
CAS Latency	10
Operating Mode	10
Write Burst Mode	10
Commands	11
Truth Table 1 (Commands and DQM Operation)	11
Command Inhibit	12
No Operation (NOP)	12
Load Mode Register	12
Active	12
Read	12
Write	12
Precharge	12
Auto Precharge	12
Burst Terminate	13
Auto Refresh	13
Self Refresh	13
Operation	14
Bank/Row Activation	14
Reads	16
Writes	21
Precharge	23
Power-Down	23
Clock Suspend	24

SDRA	Ν
Burst Read/Single Write	24
Concurrent Auto Precharge	25
Truth Table 2 (CKE)	27
Truth Table 3 (Current State, Same Bank)	28
Truth Table 4 (Current State, Different Bank)	30
Absolute Maximum Ratings	32
DC Electrical Characteristics and Operating	
Conditions	32
IDD Specifications and Conditions	32
Capacitance	33
	~ ~

512Mb: x4, x8, x16


AC Electrical Characteristics (Timing Table)	33
Timing Waveforms	
Initialize and Load Mode Register	36
Power-Down Mode	37
Clock Suspend Mode	38
Auto Refresh Mode	39
Self Refresh Mode	40
Reads	
Read – Without Auto Precharge	41
Read – With Auto Precharge	42
Single Read – Without Auto Precharge	43
Single Read – With Auto Precharge	44
Alternating Bank Read Accesses	45
Read – Full-Page Burst	46
Read – DQM Operation	47
Writes	
Write – Without Auto Precharge	48
Write – With Auto Precharge	49
Single Write – Without Auto Precharge	50
Single Write – With Auto Precharge	51
Alternating Bank Write Accesses	52
Write – Full-Page Burst	53
Write – DQM Operation	54



512Mb: x4, x8, x16 SDRAM

FUNCTIONAL BLOCK DIAGRAM

128 Meg x 4 SDRAM

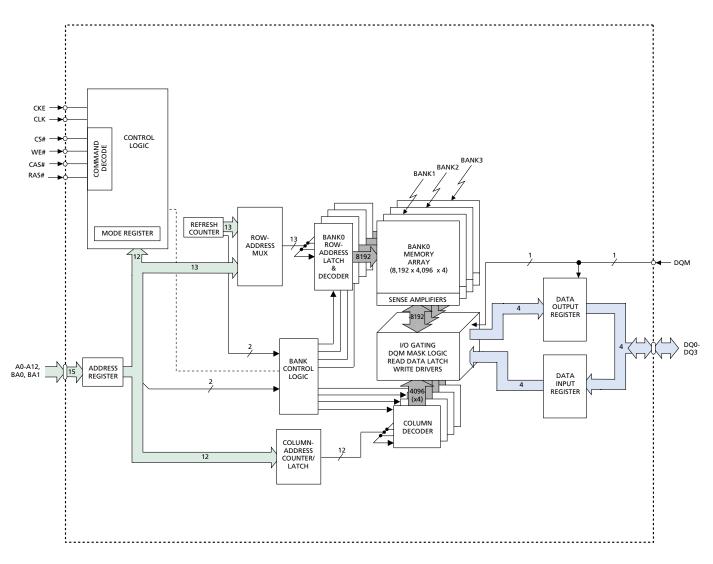




512Mb: x4, x8, x16 SDRAM

FUNCTIONAL BLOCK DIAGRAM

64 Meg x 8 SDRAM

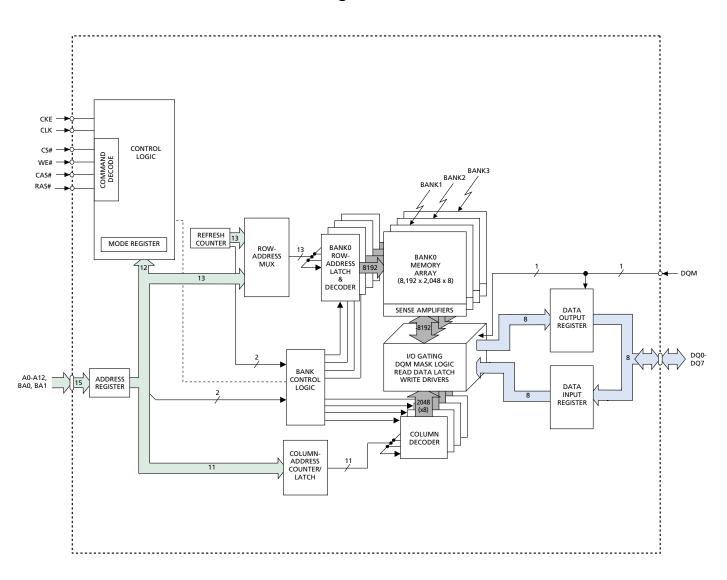




512Mb: x4, x8, x16 SDRAM

FUNCTIONAL BLOCK DIAGRAM

32 Meg x 16 SDRAM

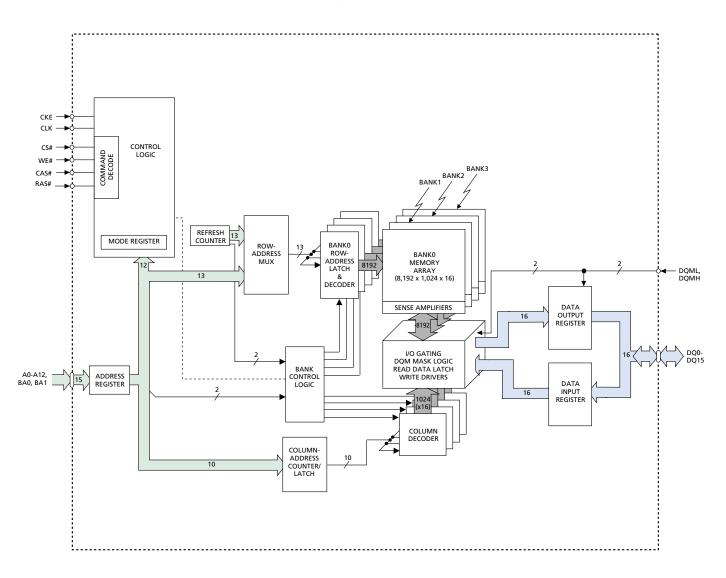



512Mb: x4, x8, x16 SDRAM

PIN DESCRIPTIONS

PIN NUMBERS	SYMBOL	TYPE	DESCRIPTION
38	СLК	Input	Clock: CLK is driven by the system clock. All SDRAM input signals are sampled on the positive edge of CLK. CLK also increments the internal burst counter and controls the output registers.
37	CKE	Input	Clock Enable: CKE activates (HIGH) and deactivates (LOW) the CLK signal. Deactivating the clock provides PRECHARGE POWER-DOWN and SELF REFRESH operation (all banks idle), ACTIVE POWER-DOWN (row active in any bank) or CLOCK SUSPEND operation (burst/access in progress). CKE is synchronous except after the device enters power-down and self refresh modes, where CKE becomes asynchronous until after exiting the same mode. The input buffers, including CLK, are disabled during power-down and self refresh modes, providing low standby power. CKE may be tied HIGH.
19	CS#	Input	Chip Select: CS# enables (registered LOW) and disables (registered HIGH) the command decoder. All commands are masked when CS# is registered HIGH. CS# provides for external bank selection on systems with multiple banks. CS# is considered part of the command code.
18, 17, 16	RAS#, CAS#, WE#	Input	Command Inputs: RAS#, CAS#, and WE# (along with CS#) define the command being entered.
39	x4, x8: DQM	Input	Input/Output Mask: DQM is an input mask signal for write accesses and an output enable signal for read accesses. Input data is masked when
15, 39	x16: DQML, DQMH		DQM is sampled HIGH during a WRITE cycle. The output buffers are placed in a High-Z state (two-clock latency) when DQM is sampled HIGH during a READ cycle. On the x4 and x8, DQML (Pin 15) is a NC and DQMH is DQM. On the x16, DQML corresponds to DQ0-DQ7 and DQMH corresponds to DQ8-DQ15. DQML and DQMH are considered same state when referenced as DQM.
20, 21	BA0, BA1	Input	Bank Address Inputs: BA0 and BA1 define to which bank the ACTIVE, READ, WRITE, or PRECHARGE command is being applied.
23-26, 29-34, 22, 35, 36	A0-A12	Input	Address Inputs: A0-A12 are sampled during the ACTIVE command (row- address A0-A12) and READ/WRITE command (column-address A0-A9, A11, A12 [x4]; A0-A9, A11 [x8]; A0-A9 [x16]; with A10 defining auto precharge) to select one location out of the memory array in the respective bank. A10 is sampled during a PRECHARGE command to determine if all banks are to be precharged (A10 [HIGH]) or bank selected by (A10 [LOW]). The address inputs also provide the op-code during a LOAD MODE REGISTER command.
2, 4, 5, 7, 8, 10, 11, 13, 42, 44, 45, 47, 48, 50, 51, 53	DQ0-DQ15	x16: I/O	Data Input/Output: Data bus for x16 (4, 7, 10, 13, 15, 42, 45, 48, and 51 are NCs for x8; and 2, 4, 7, 8, 10, 13, 15, 42, 45, 47, 48, 51, and 53 are NCs for x4).
2, 5, 8, 11, 44, 47, 50, 53	DQ0-DQ7	x8: I/O	Data Input/Output: Data bus for x8 (2, 8, 47, and 53 are NCs for x4).
5, 11, 44, 50	DQ0-DQ3	x4: I/O	Data Input/Output: Data bus for x4.
40	NC	_	No Connect: This pin should be left unconnected.
3, 9, 43, 49	VddQ	Supply	DQ Power: Isolated DQ power to the die for improved noise immunity.
6, 12, 46, 52	VssQ	Supply	DQ Ground: Isolated DQ ground to the die for improved noise immunity.
1, 14, 27	Vdd	Supply	Power Supply: +3.3V ±0.3V.
28, 41, 54	Vss	Supply	Ground.

SDRAM

512Mb: x4, x8, x16



FUNCTIONAL DESCRIPTION

In general, the 512Mb SDRAMs (32 Meg x 4 x 4 banks, 16 Meg x 8 x 4 banks, and 8 Meg x 16 x 4 banks) are quadbank DRAMs that operate at 3.3V and include a synchronous interface (all signals are registered on the positive edge of the clock signal, CLK). Each of the x4's 134,217,728bit banks is organized as 8,192 rows by 4,096 columns by 4 bits. Each of the x8's 134,217,728-bit banks is organized as 8,192 rows by 2,048 columns by 8 bits. Each of the x16's 134,217,728-bit banks is organized as 8,192 rows by 1,024 columns by 16 bits.

Read and write accesses to the SDRAM are burst oriented; accesses start at a selected location and continue for a programmed number of locations in a programmed sequence. Accesses begin with the registration of an AC-TIVE command, which is then followed by a READ or WRITE command. The address bits registered coincident with the ACTIVE command are used to select the bank and row to be accessed (BA0 and BA1 select the bank, A0-A12 select the row). The address bits (x4: A0-A9, A11, A12; x8: A0-A9, A11; x16: A0-A9) registered coincident with the READ or WRITE command are used to select the starting column location for the burst access.

Prior to normal operation, the SDRAM must be initialized. The following sections provide detailed information covering device initialization, register definition, command descriptions and device operation.

Initialization

SDRAMs must be powered up and initialized in a predefined manner. Operational procedures other than those specified may result in undefined operation. Once power is applied to VDD and VDDQ (simultaneously) and the clock is stable (stable clock is defined as a signal cycling within timing constraints specified for the clock pin), the SDRAM requires a 100µs delay prior to issuing any command other than a COMMAND INHIBIT or NOP. Starting at some point during this 100µs period and continuing at least through the end of this period, COMMAND INHIBIT or NOP commands should be applied.

Once the 100µs delay has been satisfied with at least one COMMAND INHIBIT or NOP command having been applied, a PRECHARGE command should be applied. All banks must then be precharged, thereby placing the device in the all banks idle state.

Once in the idle state, two AUTO REFRESH cycles must be performed. After the AUTO REFRESH cycles are complete, the SDRAM is ready for Mode Register programming. Because the Mode Register will power up in an unknown state, it should be loaded prior to applying any operational command.

Register Definition

The Mode Register is used to define the specific mode of operation of the SDRAM. This definition includes the selection of a burst length, a burst type, a CAS latency, an operating mode and a write burst mode, as shown in Figure 1. The Mode Register is programmed via the LOAD MODE REGISTER command and will retain the stored information until it is programmed again or the device loses power.

Mode Register bits M0-M2 specify the burst length, M3 specifies the type of burst (sequential or interleaved), M4-M6 specify the CAS latency, M7 and M8 specify the operating mode, M9 specifies the write burst mode, and M10 and M11 are reserved for future use. Address A12 (M12) is undefined but should be driven LOW during loading of the Mode Register.

The Mode Register must be loaded when all banks are idle, and the controller must wait the specified time before initiating the subsequent operation. Violating either of these requirements will result in unspecified operation.

Burst Length

Read and write accesses to the SDRAM are burst oriented, with the burst length being programmable, as shown in Figure 1. The burst length determines the maximum number of column locations that can be accessed for a given READ or WRITE command. Burst lengths of 1, 2, 4 or 8 locations are available for both the sequential and the interleaved burst types, and a full-page burst is available for the sequential type. The full-page burst is used in conjunction with the BURST TERMINATE command to generate arbitrary burst lengths.

Reserved states should not be used, as unknown operation or incompatibility with future versions may result.

When a READ or WRITE command is issued, a block of columns equal to the burst length is effectively selected. All accesses for that burst take place within this block, meaning that the burst will wrap within the block if a boundary is reached. The block is uniquely selected by A1-A9, A11, A12 (x4); A1-A9, A11 (x8); or A1-A9 (x16) when the burst length is set to two; by A2-A9, A11, A12 (x4); A2-A9, A11 (x8) or A2-A9 (x16) when the burst length is set to eight. The remaining (least significant) address bit(s) is (are) used to select the starting location within the block. Full-page bursts wrap within the page if the boundary is reached.

SDRAM

512Mb: x4, x8, x16



Burst Type

Accesses within a given burst may be programmed to be either sequential or interleaved; this is referred to as the burst type and is selected via bit M3.

The ordering of accesses within a burst is determined by the burst length, the burst type and the starting column address, as shown in Table 1.

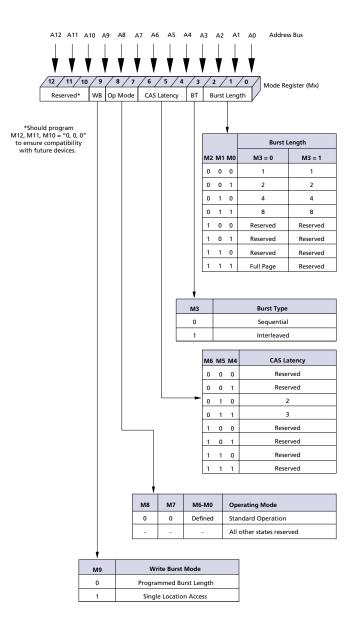


Figure 1 Mode Register Definition

Table 1 Burst Definition

Burst	Starti	ng Co	olumn	Order of Accesses Within a Burst				
Length	Address		ss	Type = Sequential	Type = Interleaved			
			A0					
2			0	0-1	0-1			
2			1	1-0	1-0			
		A1	A0					
		0	0	0-1-2-3	0-1-2-3			
4		0	1	1-2-3-0	1-0-3-2			
-		1	0	2-3-0-1	2-3-0-1			
	1 1		1	3-0-1-2	3-2-1-0			
	A2	A1	A0					
	0	0	0	0-1-2-3-4-5-6-7	0-1-2-3-4-5-6-7			
	0	0	1	1-2-3-4-5-6-7-0	1-0-3-2-5-4-7-6			
	0	1	0	2-3-4-5-6-7-0-1	2-3-0-1-6-7-4-5			
8	0	1	1	3-4-5-6-7-0-1-2	3-2-1-0-7-6-5-4			
	1	0	0	4-5-6-7-0-1-2-3	4-5-6-7-0-1-2-3			
	1	0	1	5-6-7-0-1-2-3-4	5-4-7-6-1-0-3-2			
	1	1	0	6-7-0-1-2-3-4-5	6-7-4-5-2-3-0-1			
	1	1	1	7-0-1-2-3-4-5-6	7-6-5-4-3-2-1-0			
Full	n – 4	Δ <u>-</u> Δ1	1/9/8	Cn, Cn + 1, Cn + 2				
Page	/	AI	1,5,0	Cn + 3, Cn + 4	Not Supported			
-	(100	ation	0-11	Cn - 1,	Not Supported			
(y)		auon	u-y)	Cn				

- **NOTE:** 1. For full-page accesses: y = 4,096 (x4); y = 2,048 (x8); y = 1,024 (x16).
 - 2. For a burst length of two, A1-A9, A11, A12 (x4); A1-A9, A11 (x8); or A1-A9 (x16) select the blockof-two burst; A0 selects the starting column within the block.
 - 3. For a burst length of four, A2-A9, A11, A12 (x4); A2-A9, A11 (x8); or A2-A9 (x16) select the blockof-four burst; A0-A1 select the starting column within the block.
 - 4. For a burst length of eight, A3-A9, A11, A12 (x4); A3-A9, A11 (x8); or A3-A9 (x16) select the blockof-eight burst; A0-A2 select the starting column within the block.
 - 5. For a full-page burst, the full row is selected and A0-A9, A11, A12 (x4); A0-A9, A11 (x8); or A0-A9 (x16) select the starting column.
 - 6. Whenever a boundary of the block is reached within a given sequence above, the following access wraps within the block.
 - 7. For a burst length of one, A0-A9, A11, A12 (x4); A0-A9, A11 (x8); or A0-A9 (x16) select the unique column to be accessed, and Mode Register bit M3 is ignored.




512Mb: x4, x8, x16 SDRAM

CAS Latency

The CAS latency is the delay, in clock cycles, between the registration of a READ command and the availability of the first piece of output data. The latency can be set to two or three clocks.

If a READ command is registered at clock edge n, and the latency is m clocks, the data will be available by clock edge n + m. The DQs will start driving as a result of the clock edge one cycle earlier (n + m - 1), and provided that the relevant access times are met, the data will be valid by clock edge n + m. For example, assuming that the clock cycle time is such that all relevant access times are met, if a READ command is registered at T0 and the latency is programmed to two clocks, the DQs will start driving after T1 and the data will be valid by T2, as shown in Figure 2. Table 2 below indicates the operating frequencies at which each CAS latency setting can be used.

Reserved states should not be used as unknown operation or incompatibility with future versions may result.

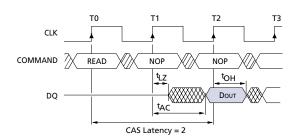

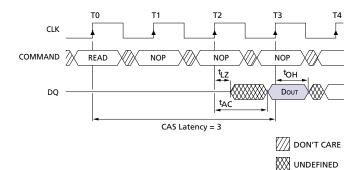


Figure 2 CAS Latency

Operating Mode

The normal operating mode is selected by setting M7 and M8 to zero; the other combinations of values for M7 and M8 are reserved for future use and/or test modes. The programmed burst length applies to both READ and WRITE bursts.

Test modes and reserved states should not be used because unknown operation or incompatibility with future versions may result.

Write Burst Mode

When M9 = 0, the burst length programmed via M0-M2 applies to both READ and WRITE bursts; when M9 = 1, the programmed burst length applies to READ bursts, but write accesses are single-location (nonburst) accesses.

Table 2 CAS Latency

	ALLOWABLE OPERATING FREQUENCY (MHz)					
SPEED	CAS LATENCY = 2	CAS LATENCY = 3				
-7E	≤ 133	≤ 143				
-75	≤ 100	≤ 133				



512Mb: x4, x8, x16 SDRAM

COMMANDS

Truth Table 1 provides a quick reference of available commands. This is followed by a written description of each command. Three additional Truth Tables appear following the Operation section; these tables provide current state/next state information.

TRUTH TABLE 1 – COMMANDS AND DQM OPERATION

(Note: 1)

NAME (FUNCTION)	CS#	RAS#	CAS#	WE#	DQM	ADDR	DQs	NOTES
COMMAND INHIBIT (NOP)	н	Х	Х	Х	X	Х	Х	
NO OPERATION (NOP)	L	н	н	н	X	Х	x	
ACTIVE (Select bank and activate row)	L	L	Н	Н	X	Bank/Row	Х	3
READ (Select bank and column, and start READ burst)	L	Н	L	Н	L/H ⁸	Bank/Col	Х	4
WRITE (Select bank and column, and start WRITE burst)	L	Н	L	L	L/H ⁸	Bank/Col	Valid	4
BURST TERMINATE	L	н	Н	L	X	Х	Active	
PRECHARGE (Deactivate row in bank or banks)	L	L	Н	L	X	Code	X	5
AUTO REFRESH or SELF REFRESH (Enter self refresh mode)	L	L	L	Н	X	Х	Х	6, 7
LOAD MODE REGISTER	L	L	L	L	X	Op-Code	Х	2
Write Enable/Output Enable	_	-	-	_	L	_	Active	8
Write Inhibit/Output High-Z	_	-	_	_	н	_	High-Z	8

NOTE: 1. CKE is HIGH for all commands shown except SELF REFRESH.

- 2. A0-A11 define the op-code written to the Mode Register, and A12 should be driven LOW.
- 3. A0-A12 provide row address, and BA0, BA1 determine which bank is made active.
- 4. A0-A9, A11, A12 (x4); A0-A9, A11 (x8); or A0-A9 (x16) provide column address; A10 HIGH enables the auto precharge feature (nonpersistent), while A10 LOW disables the auto precharge feature; BA0, BA1 determine which bank is being read from or written to.
- 5. A10 LOW: BA0, BA1 determine the bank being precharged. A10 HIGH: All banks precharged and BA0, BA1 are "Don't Care."
- 6. This command is AUTO REFRESH if CKE is HIGH; SELF REFRESH if CKE is LOW.
- 7. Internal refresh counter controls row addressing; all inputs and I/Os are "Don't Care" except for CKE.
- 8. Activates or deactivates the DQs during WRITEs (zero-clock delay) and READs (two-clock delay).

SDRAM

512Mb: x4, x8, x16



COMMAND INHIBIT

The COMMAND INHIBIT function prevents new commands from being executed by the SDRAM, regardless of whether the CLK signal is enabled. The SDRAM is effectively deselected. Operations already in progress are not affected.

NO OPERATION (NOP)

The NO OPERATION (NOP) command is used to perform a NOP to an SDRAM which is selected (CS# is LOW). This prevents unwanted commands from being registered during idle or wait states. Operations already in progress are not affected.

LOAD MODE REGISTER

The Mode Register is loaded via inputs A0-A11 (A12 should be driven LOW.) See Mode Register heading in the Register Definition section. The LOAD MODE REGISTER command can only be issued when all banks are idle, and a subsequent executable command cannot be issued until ^tMRD is met.

ACTIVE

The ACTIVE command is used to open (or activate) a row in a particular bank for a subsequent access. The value on the BA0, BA1 inputs selects the bank, and the address provided on inputs A0-A12 selects the row. This row remains active (or open) for accesses until a PRECHARGE command is issued to that bank. A PRECHARGE command must be issued before opening a different row in the same bank.

READ

The READ command is used to initiate a burst read access to an active row. The value on the BA0, BA1 inputs selects the bank, and the address provided on inputs A0-A9, A11, A12 (x4); A0-A9, A11 (x8); or A0-A9 (x16) selects the starting column location. The value on input A10 determines whether or not auto precharge is used. If auto precharge is selected, the row being accessed will be precharged at the end of the READ burst; if auto precharge is not selected, the row will remain open for subsequent accesses. Read data appears on the DQs subject to the logic level on the DQM inputs two clocks earlier. If a given DQM signal was registered HIGH, the corresponding DQs will be High-Z two clocks later; if the DQM signal was registered LOW, the DQs will provide valid data.

WRITE

The WRITE command is used to initiate a burst write access to an active row. The value on the BA0, BA1 inputs selects the bank, and the address provided on inputs A0-A9, A11, A12 (x4); A0-A9, A11 (x8); or A0-A9 (x16) selects the starting column location. The value on input A10 determines whether or not auto precharge is used. If auto precharge is selected, the row being accessed will be precharged at the end of the WRITE burst; if auto precharge is not selected, the row will remain open for subsequent accesses. Input data appearing on the DQs is written to the memory array subject to the DQM input logic level appearing coincident with the data. If a given DQM signal is registered LOW, the corresponding data will be written to memory; if the DOM signal is registered HIGH, the corresponding data inputs will be ignored, and a WRITE will not be executed to that byte/column location.

PRECHARGE

The PRECHARGE command is used to deactivate the open row in a particular bank or the open row in all banks. The bank(s) will be available for a subsequent row access a specified time (^tRP) after the PRECHARGE command is issued. Input A10 determines whether one or all banks are to be precharged, and in the case where only one bank is to be precharged, inputs BA0, BA1 select the bank. Otherwise BA0, BA1 are treated as "Don't Care." Once a bank has been precharged, it is in the idle state and must be activated prior to any READ or WRITE commands being issued to that bank.

AUTO PRECHARGE

Auto precharge is a feature which performs the same individual-bank PRECHARGE function described above, without requiring an explicit command. This is accomplished by using A10 to enable auto precharge in conjunction with a specific READ or WRITE command. A PRECHARGE of the bank/row that is addressed with the READ or WRITE command is automatically performed upon completion of the READ or WRITE burst, except in the full-page burst mode, where auto precharge does not apply. Auto precharge is nonpersistent in that it is either enabled or disabled for each individual READ or WRITE command.

Auto precharge ensures that the precharge is initiated at the earliest valid stage within a burst. The user must not issue another command to the same bank until the precharge time (^tRP) is completed. This is determined as if an explicit PRECHARGE command was issued at the earliest possible time, as described for each burst type in the Operation section of this data sheet.

SDRAM

512Mb: x4, x8, x16



BURST TERMINATE

The BURST TERMINATE command is used to truncate either fixed-length or full-page bursts. The most recently registered READ or WRITE command prior to the BURST TERMINATE command will be truncated, as shown in the Operation section of this data sheet.

AUTO REFRESH

AUTO REFRESH is used during normal operation of the SDRAM and is analogous to CAS#-BEFORE-RAS# (CBR) REFRESH in conventional DRAMs. This command is nonpersistent, so it must be issued each time a refresh is required. All active banks must be PRECHARGED prior to issuing a AUTO REFRESH comand. The AUTO RE-FRESH command should not be issued until the minimum tRP has been met after the PRECHARGE command as shown in the operations section.

The addressing is generated by the internal refresh controller. This makes the address bits "Don't Care" during an AUTO REFRESH command. The 512Mb SDRAM requires 8, 192 AUTO REFRESH cycles every 64ms (^tREF), regardless of width option. Providing a distributed AUTO REFRESH command every 7.81µs will meet the refresh requirement and ensure that each row is refreshed. Alternatively, 8, 192 AUTO REFRESH commands can be issued in a burst at the minimum cycle rate (^tRC), once every 64ms.

SELF REFRESH

The SELF REFRESH command can be used to retain data in the SDRAM, even if the rest of the system is powered down. When in the self refresh mode, the SDRAM retains data without external clocking. The SELF RE-FRESH command is initiated like an AUTO REFRESH command except CKE is disabled (LOW). Once the SELF REFRESH command is registered, all the inputs to the SDRAM become "Don't Care" with the exception of CKE, which must remain LOW.

Once self refresh mode is engaged, the SDRAM provides its own internal clocking, causing it to perform its own AUTO REFRESH cycles. The SDRAM must remain in self refresh mode for a minimum period equal to ^tRAS and may remain in self refresh mode for an indefinite period beyond that.

The procedure for exiting self refresh requires a sequence of commands. First, CLK must be stable (stable clock is defined as a signal cycling within timing constraints specified for the clock pin) prior to CKE going back HIGH. Once CKE is HIGH, the SDRAM must have NOP commands issued (a minimum of two clocks) for ^tXSR because time is required for the completion of any internal refresh in progress.

Upon exiting the self refresh mode, AUTO REFRESH commands must be issued every 7.81µs or less as both SELF REFRESH and AUTO REFRESH utilize the row refresh counter.

SDRAM

512Mb: x4, x8, x16

Micron

Operation BANK/ROW ACTIVATION

Before any READ or WRITE commands can be issued to a bank within the SDRAM, a row in that bank must be "opened." This is accomplished via the ACTIVE command, which selects both the bank and the row to be activated (see Figure 3).

After opening a row (issuing an ACTIVE command), a READ or WRITE command may be issued to that row, subject to the ^tRCD specification. ^tRCD (MIN) should be divided by the clock period and rounded up to the next whole number to determine the earliest clock edge after the ACTIVE command on which a READ or WRITE command can be entered. For example, a ^tRCD specification of 20ns with a 125 MHz clock (8ns period) results in 2.5 clocks, rounded to 3. This is reflected in Figure 4, which covers any case where $2 < {^tRCD}$ (MIN)/^tCK - 3. (The same procedure is used to convert other specification limits from time units to clock cycles.)

A subsequent ACTIVE command to a different row in the same bank can only be issued after the previous active row has been "closed" (precharged). The minimum time interval between successive ACTIVE commands to the same bank is defined by ^tRC.

A subsequent ACTIVE command to another bank can be issued while the first bank is being accessed, which results in a reduction of total row-access overhead. The minimum time interval between successive ACTIVE commands to different banks is defined by ^tRRD.

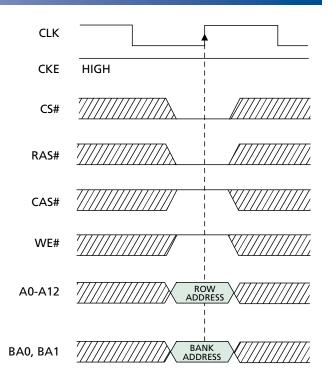


Figure 3 Activating a Specific Row In a Specific Bank

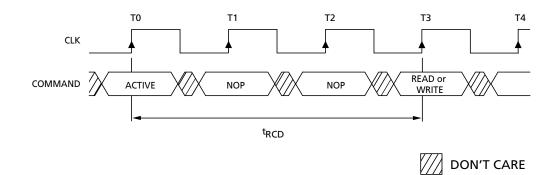


Figure 4 Example: Meeting ^tRCD (MIN) When 2 < ^tRCD (MIN)/^tCK \leq 3

Micron

READs

READ bursts are initiated with a READ command, as shown in Figure 5.

The starting column and bank addresses are provided with the READ command, and auto precharge is either enabled or disabled for that burst access. If auto precharge is enabled, the row being accessed is precharged at the completion of the burst. For the generic READ commands used in the following illustrations, auto precharge is disabled.

During READ bursts, the valid data-out element from the starting column address will be available following the CAS latency after the READ command. Each subsequent data-out element will be valid by the next positive clock edge. Figure 6 shows general timing for each possible CAS latency setting.

512Mb: x4, x8, x16 **SDRAM**

ADVANCE

Τ4

ťон

DOUT

DON'T CARE

Upon completion of a burst, assuming no other commands have been initiated, the DQs will go High-Z. A fullpage burst will continue until terminated. (At the end of the page, it will wrap to the start address and continue.)

Data from any READ burst may be truncated with a subsequent READ command, and data from a fixed-length READ burst may be immediately followed by data from a READ command. In either case, a continuous flow of data can be maintained. The first data element from the new burst follows either the last element of a completed burst or the last desired data element of a longer burst that is being truncated. The new READ command should be issued *x* cycles before the clock edge at which the last desired data element is valid, where x equals the CAS latency minus one. This is shown in Figure 7 for CAS

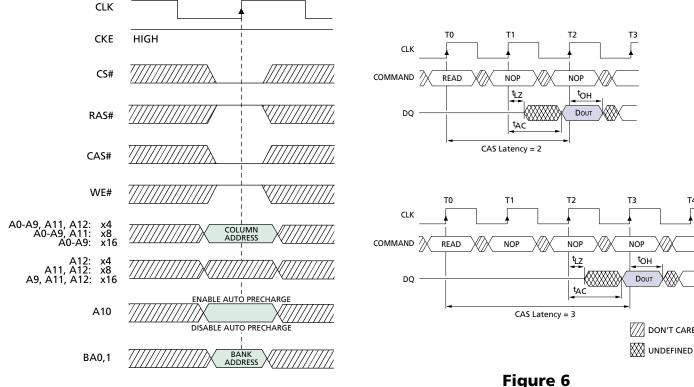


Figure 5 READ Command **CAS Latency**

SDRAM

<u>512Mb: x4, x8, x16</u>



latencies of two and three; data element n + 3 is either the last of a burst of four or the last desired of a longer burst. The 512Mb SDRAM uses a pipelined architecture and therefore does not require the 2n rule associated with a prefetch architecture. A READ command can be initiated on any clock cycle following a previous READ command. Full-speed random read accesses can be performed to the same bank, as shown in Figure 8, or each subsequent READ may be performed to a different bank.


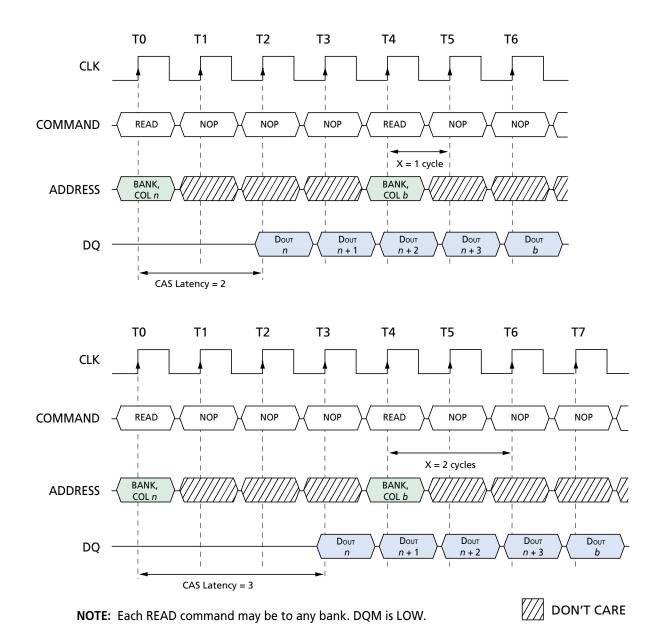


Figure 7 Consecutive READ Bursts



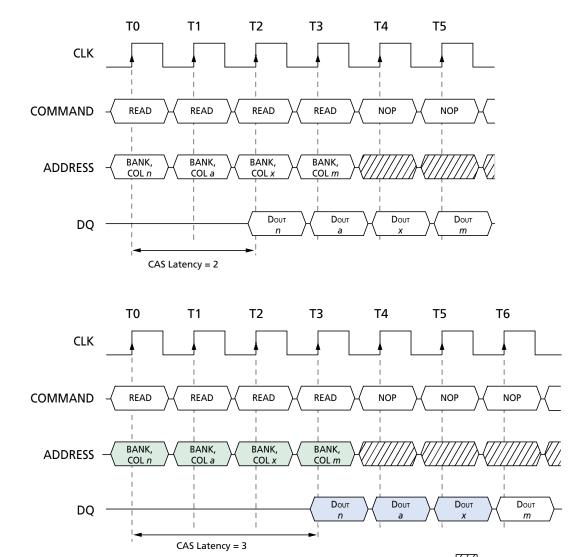

NOTE: Each READ command may be to any bank. DQM is LOW.

DON'T CARE

Figure 8 Random READ Accesses

Micron




Data from any READ burst may be truncated with a subsequent WRITE command, and data from a fixed-length READ burst may be immediately followed by data from a WRITE command (subject to bus turnaround limitations). The WRITE burst may be initiated on the clock edge immediately following the last (or last desired) data element from the READ burst, provided that I/ O contention can be avoided. In a given system design, there may be a possibility that the device driving the input data will go Low-Z before the SDRAM DQs go High-Z. In this case, at least a single-cycle delay should occur between the last read data and the WRITE command.

The DQM input is used to avoid I/O contention, as shown in Figures 9 and 10. The DQM signal must be asserted (HIGH) at least two clocks prior to the WRITE command (DQM latency is two clocks for output buffers)

512Mb: x4, x8, x16 SDRAM

to suppress data-out from the READ. Once the WRITE command is registered, the DQs will go High-Z (or remain High-Z), regardless of the state of the DQM signal; provided the DQM was active on the clock just prior to the WRITE command that truncated the READ command. If not, the second WRITE will be an invalid WRITE. For example, if DQM was LOW during T4 in Figure 10, then the WRITEs at T5 and T7 would be valid, while the WRITE at T6 would be invalid.

The DQM signal must be de-asserted prior to the WRITE command (DQM latency is zero clocks for input buffers) to ensure that the written data is not masked. Figure 9 shows the case where the clock frequency allows for bus contention to be avoided without adding a NOP cycle, and Figure 10 shows the case where the additional NOP is needed.

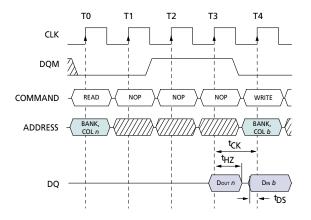

NOTE: A CAS latency of three is used for illustration. The READ command may be to any bank, and the WRITE command may be to any bank. If a burst of one is used, then DQM is not required.

Figure 9 READ to WRITE

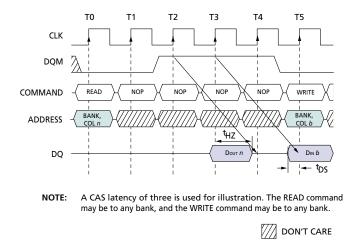


Figure 10 READ to WRITE with Extra Clock Cycle



512Mb: x4, x8, x16 SDRAM

A fixed-length READ burst may be followed by, or truncated with, a PRECHARGE command to the same bank (provided that auto precharge was not activated), and a full-page burst may be truncated with a PRECHARGE command to the same bank. The PRECHARGE command should be issued *x* cycles before the clock edge at which the last desired data element is valid, where *x* equals the CAS latency minus one. This is shown in Figure 11 for each possible CAS latency; data element n + 3 is either the last of a burst of four or the last desired of a longer burst. Following the PRECHARGE command, a subsequent command to the same bank cannot be issued until ^tRP is met. Note that part of the row precharge time is hidden during the access of the last data element(s).

In the case of a fixed-length burst being executed to completion, a PRECHARGE command issued at the optimum time (as described above) provides the same op-

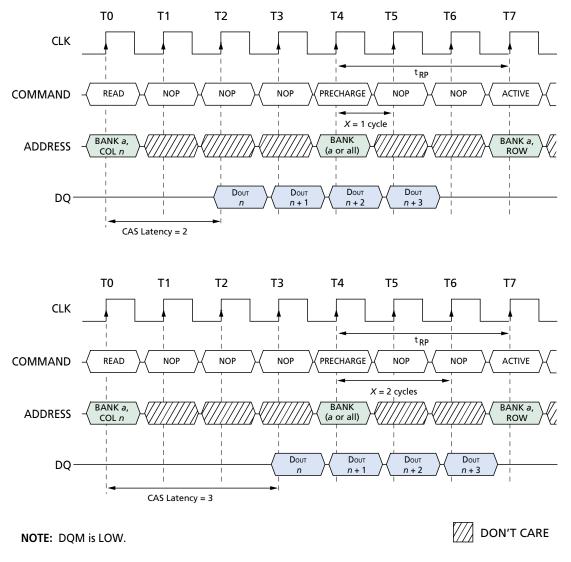


Figure 11 READ to PRECHARGE

SDRAM

512Mb: x4, x8, x16



eration that would result from the same fixed-length burst with auto precharge. The disadvantage of the PRECHARGE command is that it requires that the command and address buses be available at the appropriate time to issue the command; the advantage of the PRECHARGE command is that it can be used to truncate fixed-length or full-page bursts. Full-page READ bursts can be truncated with the BURST TERMINATE command, and fixed-length READ bursts may be truncated with a BURST TERMINATE command, provided that auto precharge was not activated. The BURST TERMINATE command should be issued x cycles before the clock edge at which the last desired data element is valid, where x equals the CAS latency minus one. This is shown in Figure 12 for each possible CAS latency; data element n + 3 is the last desired data element of a longer burst.

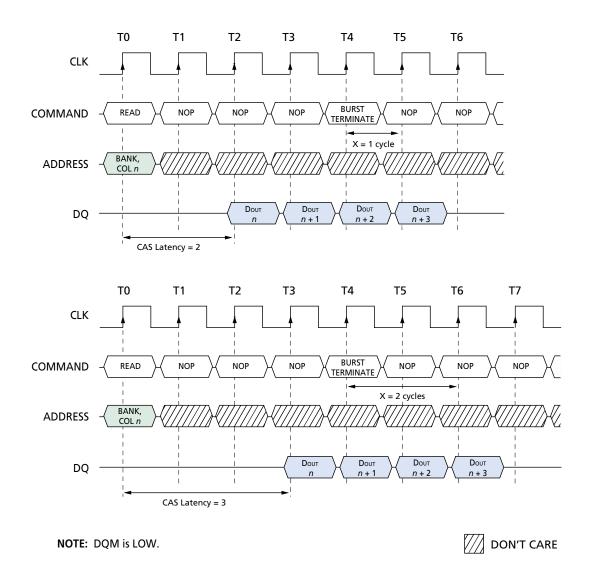


Figure 12 Terminating a READ Burst

Micron

WRITEs

WRITE bursts are initiated with a WRITE command, as shown in Figure 13.

The starting column and bank addresses are provided with the WRITE command, and auto precharge is either enabled or disabled for that access. If auto precharge is enabled, the row being accessed is precharged at the completion of the burst. For the generic WRITE commands used in the following illustrations, auto precharge is disabled.

During WRITE bursts, the first valid data-in element will be registered coincident with the WRITE command. Subsequent data elements will be registered on each successive positive clock edge. Upon completion of a fixed-length burst, assuming no other commands have been initiated, the DQs will remain High-Z and any additional input data will be ignored (see Figure 14). A fullpage burst will continue until terminated. (At the end of the page, it will wrap to the start address and continue.)

Data for any WRITE burst may be truncated with a subsequent WRITE command, and data for a fixed-length WRITE burst may be immediately followed by data for a WRITE command. The new WRITE command can be issued on any clock following the previous WRITE command, and the data provided coincident with the new command applies to the new command. An example is

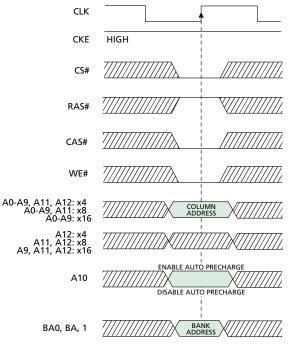


Figure 13 WRITE Command

512Mb: x4, x8, x16 SDRAM

shown in Figure 15. Data n + 1 is either the last of a burst of two or the last desired of a longer burst. The 512Mb SDRAM uses a pipelined architecture and therefore does not require the 2n rule associated with a prefetch architecture. A WRITE command can be initiated on any clock cycle following a previous WRITE command. Full-speed random write accesses within a page can be performed to the same bank, as shown in Figure 16, or each subsequent WRITE may be performed to a different bank.


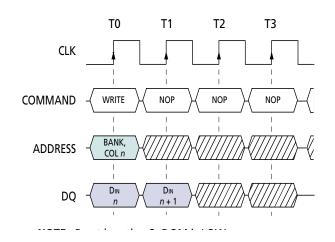


Figure 14 WRITE Burst




WRITE to WRITE

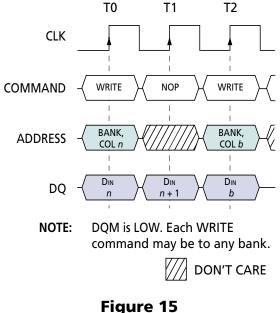

Data for any WRITE burst may be truncated with a subsequent READ command, and data for a fixed-length WRITE burst may be immediately followed by a READ command. Once the READ command is registered, the data inputs will be ignored, and WRITEs will not be executed. An example is shown in Figure 17. Data n + 1 is either the last of a burst of two or the last desired of a longer burst.

Data for a fixed-length WRITE burst may be followed by, or truncated with, a PRECHARGE command to the same bank (provided that auto precharge was not activated), and a full-page WRITE burst may be truncated with a PRECHARGE command to the same bank. The PRECHARGE command should be issued ^tWR after the clock edge at which the last desired input data element is

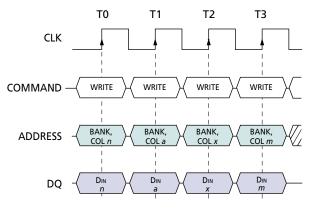

NOTE: Each WRITE command may be to any bank. DQM is LOW.

Figure 16 Random WRITE Cycles

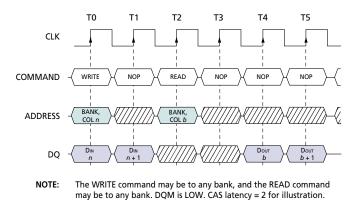


Figure 17 WRITE To READ

512Mb: x4, x8, x16 SDRAM

registered. The auto precharge mode requires a ^tWR of at least one clock plus time, regardless of frequency. In addition, when truncating a WRITE burst, the DQM signal must be used to mask input data for the clock edge prior to, and the clock edge coincident with, the PRECHARGE command. An example is shown in Figure 18. Data n + 1 is either the last of a burst of two or the last desired of a longer burst. Following the PRECHARGE command, a subsequent command to the same bank cannot be issued until ^tRP is met. The precharge can be issued coincident with the first coincident clock edge (T2 in Figure 18) on an A1 Version and with the second clock on an A2 Version (Figure 18.)

In the case of a fixed-length burst being executed to completion, a PRECHARGE command issued at the optimum time (as described above) provides the same operation that would result from the same fixed-length burst with auto precharge. The disadvantage of the PRECHARGE command is that it requires that the command and address buses be available at the appropriate time to issue the command; the advantage of the


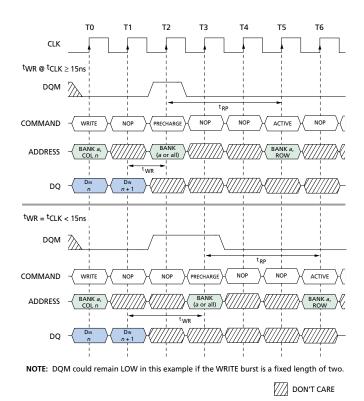


Figure 18 WRITE To PRECHARGE



PRECHARGE command is that it can be used to truncate fixed-length or full-page bursts.

Fixed-length or full-page WRITE bursts can be truncated with the BURST TERMINATE command. When truncating a WRITE burst, the input data applied coincident with the BURST TERMINATE command will be ignored. The last data written (provided that DQM is LOW at that time) will be the input data applied one clock previous to the BURST TERMINATE command. This is

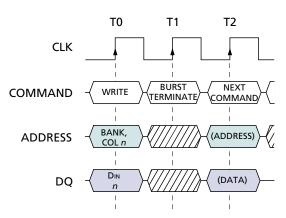

NOTE: DQMs are LOW.

Figure 19 Terminating a WRITE Burst

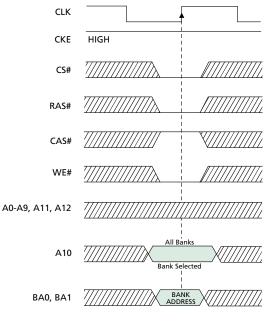


Figure 20 PRECHARGE Command

shown in Figure 19, where data *n* is the last desired data element of a longer burst.

PRECHARGE

The PRECHARGE command (see Figure 20) is used to deactivate the open row in a particular bank or the open row in all banks. The bank(s) will be available for a subsequent row access some specified time (^tRP) after the precharge command is issued. Input A10 determines whether one or all banks are to be precharged, and in the case where only one bank is to be precharged, inputs BA0, BA1 select the bank. When all banks are to be precharged, inputs BA0, BA1 select the bank. When all banks are to be precharged, inputs BA0, BA1 are treated as "Don't Care." Once a bank has been precharged, it is in the idle state and must be activated prior to any READ or WRITE commands being issued to that bank.

POWER-DOWN

Power-down occurs if CKE is registered low coincident with a NOP or COMMAND INHIBIT when no accesses are in progress. If power-down occurs when all banks are idle, this mode is referred to as precharge power-down; if power-down occurs when there is a row active in any bank, this mode is referred to as active power-down. Entering power-down deactivates the input and output buffers, excluding CKE, for maximum power savings while in standby. The device may not remain in the power-down state longer than the refresh period (64ms) since no refresh operations are performed in this mode.

The power-down state is exited by registering a NOP or COMMAND INHIBIT and CKE HIGH at the desired clock edge (meeting ^tCKS). (See Figure 21.)

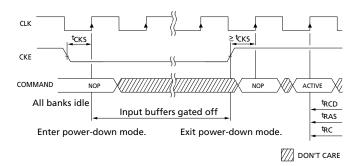


Figure 21 Power-Down

DON'T CARE



512Mb: x4, x8, x16 SDRAM


CLOCK SUSPEND

The clock suspend mode occurs when a column access/burst is in progress and CKE is registered LOW. In the clock suspend mode, the internal clock is deactivated, "freezing" the synchronous logic.

For each positive clock edge on which CKE is sampled LOW, the next internal positive clock edge is suspended. Any command or data present on the input pins at the time of a suspended internal clock edge is ignored; any data present on the DQ pins remains driven; and burst counters are not incremented, as long as the clock is suspended. (See examples in Figures 22 and 23.) Clock suspend mode is exited by registering CKE HIGH; the internal clock and related operation will resume on the subsequent positive clock edge.

BURST READ/SINGLE WRITE

The burst read/single write mode is entered by programming the write burst mode bit (M9) in the Mode Register to a logic 1. In this mode, all WRITE commands result in the access of a single column location (burst of one), regardless of the programmed burst length. READ commands access columns according to the programmed burst length and sequence, just as in the normal mode of operation (M9 = 0).

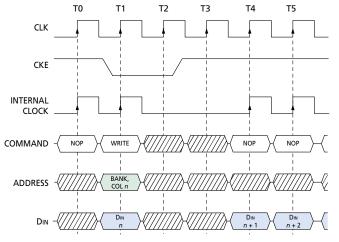

NOTE: For this example, burst length = 4 or greater, and DM is LOW.

Figure 22 Clock Suspend During WRITE Burst

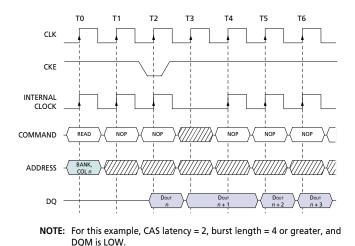


Figure 23 Clock Suspend During READ Burst



CONCURRENT AUTO PRECHARGE

An access command to (READ or WRITE) another bank while an access command with auto precharge enabled is executing is not allowed by SDRAMs, unless the SDRAM supports CONCURRENT AUTO PRECHARGE. Micron SDRAMs support CONCURRENT AUTO PRECHARGE. Four cases where CONCURRENT AUTO PRECHARGE occurs are defined below.

READ with auto precharge

1. Interrupted by a READ (with or without auto precharge): A READ to bank *m* will interrupt a READ



on bank *n*, CAS latency later. The PRECHARGE to bank *n* will begin when the READ to bank *m* is registered (Figure 24).

2. Interrupted by a WRITE (with or without auto precharge): A WRITE to bank *m* will interrupt a READ on bank *n* when registered. DQM should be used two clocks prior to the WRITE command to prevent bus contention. The PRECHARGE to bank *n* will begin when the WRITE to bank *m* is registered (Figure 25).

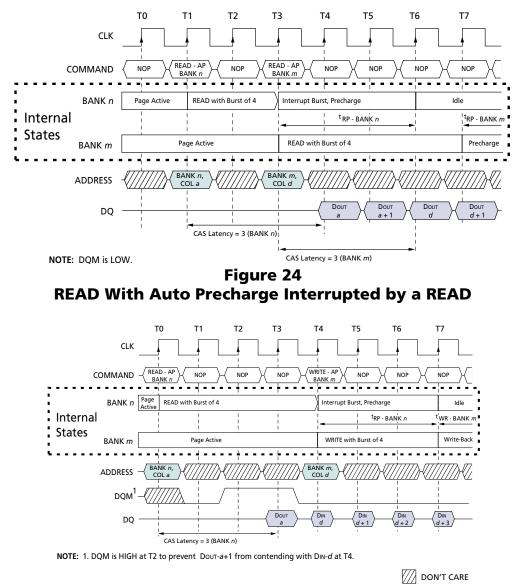


Figure 25 READ With Auto Precharge Interrupted by a WRITE



512Mb: x4, x8, x16 SDRAM

WRITE with auto precharge

- 3. Interrupted by a READ (with or without AUTO PRECHARGE): A READ to bank *m* will interrupt a WRITE on bank *n* when registered, with the data-out appearing CAS latency later. The PRECHARGE to bank *n* will begin after ^tWR is met, where ^tWR begins when the READ to bank *m* is registered. The last valid WRITE to bank *n* will be data-in registered one clock prior to the READ to bank *m* (Figure 26).
- 4. Interrupted by a WRITE (with or without auto precharge): A WRITE to bank m will interrupt a WRITE on bank n when registered. The PRECHARGE to bank n will begin after ^tWR is met, where ^tWR begins when the WRITE to bank m is registered. The last valid data WRITE to bank n will be data registered one clock prior to a WRITE to bank m (Figure 27).

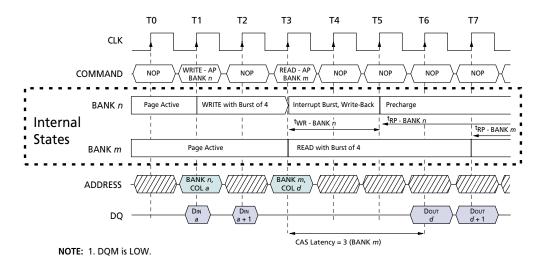


Figure 26 WRITE With Auto Precharge Interrupted by a READ

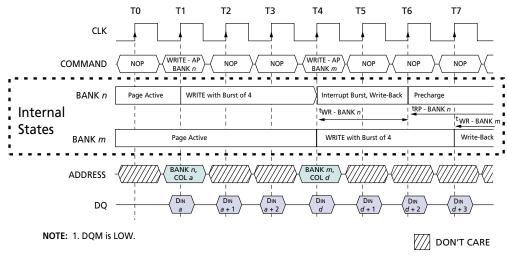


Figure 27 WRITE With Auto Precharge Interrupted by a WRITE



TRUTH TABLE 2 – CKE

(Notes: 1-4)

CKE _{n-1}	CKEn	CURRENT STATE	COMMAND _n	ACTIONn	NOTES
L	L	Power-Down	Х	Maintain Power-Down	
		Self Refresh	X	Maintain Self Refresh	
		Clock Suspend	х	Maintain Clock Suspend	
L	н	Power-Down	COMMAND INHIBIT or NOP	Exit Power-Down	5
		Self Refresh	COMMAND INHIBIT or NOP	Exit Self Refresh	6
		Clock Suspend	Х	Exit Clock Suspend	7
н	L	All Banks Idle	COMMAND INHIBIT or NOP	Power-Down Entry	
		All Banks Idle	AUTO REFRESH	Self Refresh Entry	
		Reading or Writing	VALID	Clock Suspend Entry	
Н	Н		See Truth Table 3 (page 28)		

- **NOTE:** 1. CKE_n is the logic state of CKE at clock edge *n*; CKE_{n-1} was the state of CKE at the previous clock edge.
 - 2. Current state is the state of the SDRAM immediately prior to clock edge *n*.
 - 3. COMMAND_n is the command registered at clock edge n, and ACTION_n is a result of COMMAND_n.
 - 4. All states and sequences not shown are illegal or reserved.
 - 5. Exiting power-down at clock edge n will put the device in the all banks idle state in time for clock edge n + 1 (provided that ^tCKS is met).
 - 6. Exiting self refresh at clock edge *n* will put the device in the all banks idle state once ^tXSR is met. COMMAND INHIBIT or NOP commands should be issued on any clock edges occurring during the ^tXSR period. A minimum of two NOP commands must be provided during ^tXSR period.
 - 7. After exiting clock suspend at clock edge n, the device will resume operation and recognize the next command at clock edge n + 1.



TRUTH TABLE 3 – CURRENT STATE BANK n - COMMAND TO BANK n

(Notes: 1-6; notes appear below and on next page)

CURRENT STATE	CS#	RAS#	CAS#	WE#	COMMAND (ACTION)	NOTES
Any	Н	Х	Х	Х	COMMAND INHIBIT (NOP/Continue previous operation)	
	L	н	н	Н	NO OPERATION (NOP/Continue previous operation)	
	L	L	н	Н	ACTIVE (Select and activate row)	
Idle	L	L	L	Н	AUTO REFRESH	7
	L	L	L	L	LOAD MODE REGISTER	7
	L	L	н	L	PRECHARGE	11
	L	н	L	Н	READ (Select column and start READ burst)	10
Row Active	L	н	L	L	WRITE (Select column and start WRITE burst)	10
	L	L	н	L	PRECHARGE (Deactivate row in bank or banks)	8
Read	L	н	L	н	READ (Select column and start new READ burst)	10
(Auto	L	н	L	L	WRITE (Select column and start WRITE burst)	10
Precharge	L	L	н	L	PRECHARGE (Truncate READ burst, start PRECHARGE)	8
Disabled)	L	н	н	L	BURST TERMINATE	9
Write	L	н	L	н	READ (Select column and start READ burst)	10
(Auto	L	Н	L	L	WRITE (Select column and start new WRITE burst)	10
Precharge	L	L	н	L	PRECHARGE (Truncate WRITE burst, start PRECHARGE)	8
Disabled)	L	н	н	L	BURST TERMINATE	9

NOTE: 1. This table applies when CKE_{n-1} was HIGH and CKE_n is HIGH (see Truth Table 2) and after ^tXSR has been met (if the previous state was self refresh).

- 2. This table is bank-specific, except where noted, i.e., the current state is for a specific bank and the commands shown are those allowed to be issued to that bank when in that state. Exceptions are covered in the notes below.
- 3. Current state definitions:

Idle: The bank has been precharged, and ^tRP has been met.

- Row Active: A row in the bank has been activated, and ^tRCD has been met. No data bursts/accesses and no register accesses are in progress.
 - Read: A READ burst has been initiated, with auto precharge disabled, and has not yet terminated or been terminated.
 - Write: A WRITE burst has been initiated, with auto precharge disabled, and has not yet terminated or been terminated.
- 4. The following states must not be interrupted by a command issued to the same bank. COMMAND INHIBIT or NOP commands, or allowable commands to the other bank should be issued on any clock edge occurring during these states. Allowable commands to the other bank are determined by its current state and Truth Table 3, and according to Truth Table 4.

Precharging:	Starts with registration of a PRECHARGE command and ends when ^t RP is met. Once ^t RP is met, the bank will be in the idle state.
Row Activating:	Starts with registration of an ACTIVE command and ends when ^t RCD is met. Once ^t RCD is met, the bank will be in the row active state.
Read w/Auto	
Precharge	
Enabled:	Starts with registration of a READ command with auto precharge enabled and ends when ^t RP has been met. Once ^t RP is met, the bank will be in the idle state.
Write w/Auto	
Precharge	
Enabled:	Starts with registration of a WRITE command with auto precharge enabled and ends when ^t RP has
	been met. Once ^t RP is met, the bank will be in the idle state.



NOTE (continued):

5. The following states must not be interrupted by any executable command; COMMAND INHIBIT or NOP commands must be applied on each positive clock edge during these states.

Refreshing:	Starts with registration of an AUTO REFRESH command and ends when ^t RC is met. Once ^t RC is met,
	the SDRAM will be in the all banks idle state.
Accessing Mode	
Register:	Starts with registration of a LOAD MODE REGISTER command and ends when ^t MRD has been met.
	Once ^t MRD is met, the SDRAM will be in the all banks idle state.
Precharging All:	Starts with registration of a PRECHARGE ALL command and ends when ^t RP is met. Once ^t RP is met,
	all banks will be in the idle state.

- 6. All states and sequences not shown are illegal or reserved.
- 7. Not bank-specific; requires that all banks are idle.
- 8. May or may not be bank-specific; if all banks are to be precharged, all must be in a valid state for precharging.
- 9. Not bank-specific; BURST TERMINATE affects the most recent READ or WRITE burst, regardless of bank.
- 10. READs or WRITEs listed in the Command (Action) column include READs or WRITEs with auto precharge enabled and READs or WRITEs with auto precharge disabled.
- 11. Does not affect the state of the bank and acts as a NOP to that bank.



512Mb: x4, x8, x16 SDRAM

TRUTH TABLE 4 - CURRENT STATE BANK n - COMMAND TO BANK m

(Notes: 1-6; notes appear below and on next page)

CURRENT STATE	CS#	RAS#	CAS#	WE#	COMMAND (ACTION)	NOTES
Any	Н	X	Х	Х	COMMAND INHIBIT (NOP/Continue previous operation)	
	L	н	Н	Н	NO OPERATION (NOP/Continue previous operation)	
Idle	Х	X	Х	Х	Any Command Otherwise Allowed to Bank m	
Row	L	L	Н	Н	ACTIVE (Select and activate row)	
Activating,	L	н	L	Н	READ (Select column and start READ burst)	7
Active, or	L	н	L	L	WRITE (Select column and start WRITE burst)	7
Precharging	L	L	Н	L	PRECHARGE	
Read	L	L	Н	Н	ACTIVE (Select and activate row)	
(Auto	L	н	L	Н	READ (Select column and start new READ burst)	7, 10
Precharge	L	н	L	L	WRITE (Select column and start WRITE burst)	7, 11
Disabled)	L	L	Н	L	PRECHARGE	9
Write	L	L	Н	Н	ACTIVE (Select and activate row)	
(Auto	L	н	L	Н	READ (Select column and start READ burst)	7, 12
Precharge	L	н	L	L	WRITE (Select column and start new WRITE burst)	7, 13
Disabled)	L	L	Н	L	PRECHARGE	9
Read	L	L	Н	Н	ACTIVE (Select and activate row)	
(With Auto	L	н	L	Н	READ (Select column and start new READ burst)	7, 8, 14
Precharge)	L	н	L	L	WRITE (Select column and start WRITE burst)	7, 8, 15
	L	L	Н	L	PRECHARGE	9
Write	L	L	Н	Н	ACTIVE (Select and activate row)	
(With Auto	L	н	L	Н	READ (Select column and start READ burst)	7, 8, 16
Precharge)	L	н	L	L	WRITE (Select column and start new WRITE burst)	7, 8, 17
	L	L	н	L	PRECHARGE	9

- **NOTE:** 1. This table applies when CKE_{n-1} was HIGH and CKE_n is HIGH (see Truth Table 2) and after ^tXSR has been met (if the previous state was self refresh).
 - 2. This table describes alternate bank operation, except where noted; i.e., the current state is for bank *n* and the commands shown are those allowed to be issued to bank *m* (assuming that bank *m* is in such a state that the given command is allowable). Exceptions are covered in the notes below.
 - 3. Current state definitions:
 - Idle: The bank has been precharged, and ^tRP has been met.
 - Row Active: A row in the bank has been activated, and ^tRCD has been met. No data bursts/accesses and no register accesses are in progress.
 - Read: A READ burst has been initiated, with auto precharge disabled, and has not yet terminated or been terminated.
 - Write: A WRITE burst has been initiated, with auto precharge disabled, and has not yet terminated or been terminated.

Read w/Auto Precharge Enabled: Starts with registration of a READ command with auto precharge enabled, and ends when ^tRP has been met. Once ^tRP is met, the bank will be in the idle state. Write w/Auto Precharge Enabled: Starts with registration of a WRITE command with auto precharge enabled, and ends when ^tRP has been met. Once ^tRP is met, the bank will be in the idle state.



NOTE (continued):

- 4. AUTO REFRESH, SELF REFRESH and LOAD MODE REGISTER commands may only be issued when all banks are idle.
- 5. A BURST TERMINATE command cannot be issued to another bank; it applies to the bank represented by the current state only.
- 6. All states and sequences not shown are illegal or reserved.
- 7. READs or WRITEs to bank *m* listed in the Command (Action) column include READs or WRITEs with auto precharge enabled and READs or WRITEs with auto precharge disabled.
- 8. CONCURRENT AUTO PRECHARGE: Bank *n* will initiate the auto precharge command when its burst has been interrupted by bank *m*'s burst.
- 9. Burst in bank *n* continues as initiated.
- 10. For a READ without auto precharge interrupted by a READ (with or without auto precharge), the READ to bank *m* will interrupt the READ on bank *n*, CAS latency later (Figure 7).
- 11. For a READ without auto precharge interrupted by a WRITE (with or without auto precharge), the WRITE to bank *m* will interrupt the READ on bank *n* when registered (Figures 9 and 10). DQM should be used one clock prior to the WRITE command to prevent bus contention.
- 12. For a WRITE without auto precharge interrupted by a READ (with or without auto precharge), the READ to bank *m* will interrupt the WRITE on bank *n* when registered (Figure 17), with the data-out appearing CAS latency later. The last valid WRITE to bank *n* will be data-in registered one clock prior to the READ to bank *m*.
- 13. For a WRITE without auto precharge interrupted by a WRITE (with or without auto precharge), the WRITE to bank *m* will interrupt the WRITE on bank *n* when registered (Figure 15). The last valid WRITE to bank *n* will be data-in registered one clock prior to the READ to bank *m*.
- 14. For a READ with auto precharge interrupted by a READ (with or without auto precharge), the READ to bank *m* will interrupt the READ on bank *n*, CAS latency later. The PRECHARGE to bank *n* will begin when the READ to bank *m* is registered (Figure 24).
- 15. For a READ with auto precharge interrupted by a WRITE (with or without auto precharge), the WRITE to bank *m* will interrupt the READ on bank *n* when registered. DQM should be used two clocks prior to the WRITE command to prevent bus contention. The PRECHARGE to bank *n* will begin when the WRITE to bank *m* is registered (Figure 25).
- 16. For a WRITE with auto precharge interrupted by a READ (with or without auto precharge), the READ to bank *m* will interrupt the WRITE on bank *n* when registered, with the data-out appearing CAS latency later. The PRECHARGE to bank *n* will begin after ^tWR is met, where ^tWR begins when the READ to bank *m* is registered. The last valid WRITE to bank *n* will be data-in registered one clock prior to the READ to bank *m* (Figure 26).
- 17. For a WRITE with auto precharge interrupted by a WRITE (with or without auto precharge), the WRITE to bank *m* will interrupt the WRITE on bank *n* when registered. The PRECHARGE to bank *n* will begin after ^tWR is met, where ^tWR begins when the WRITE to bank *m* is registered. The last valid WRITE to bank *n* will be data registered one clock prior to the WRITE to bank *m* (Figure 27).

SDRAM

512Mb: x4, x8, x16



ABSOLUTE MAXIMUM RATINGS*

1V to +4.6V
1V to +4.6V
0°C to +70°C
55°C to +150°C
1W

*Stresses greater than those listed under "Absolute Maximum Ratings" may cause permanent damage to the device. This is a stress rating only, and functional operation of the device at these or any other conditions above those indicated in the operational sections of this specification is not implied. Exposure to absolute maximum rating conditions for extended periods may affect reliability.

DC ELECTRICAL CHARACTERISTICS AND OPERATING CONDITIONS

(Notes: 1, 5, 6; notes appear on page 35) (VDD, $VDDQ = +3.3V \pm 0.3V$)

PARAMETER/CONDITION	SYMBOL	MIN	MAX	UNITS	NOTES
Supply Voltage	Vdd, VddQ	3	3.6	V	
Input High Voltage: Logic 1; All inputs	Vін	2	Vdd + 0.3	V	22
Input Low Voltage: Logic 0; All inputs	VIL	-0.3	0.8	V	22
Input Leakage Current: Any input $0V \le V_{IN} \le V_{DD}$ (All other pins not under test = 0V)	h	-5	5	μA	
Output Leakage Current: DQs are disabled; $0V \le V_{\text{OUT}} \le V_{\text{DD}}Q$	loz	-5	5	μA	
Output Levels: Output High Voltage (lou⊤ = -4mA)	Vон	2.4	-	V	26
Output Low Voltage (lout = 4mA)	Vol	-	0.4	V	26

IDD SPECIFICATIONS AND CONDITIONS

(Notes: 1, 5, 6, 11, 13; notes appear on page 35) (VDD, VDDQ = +3.3V ±0.3V)

· · · · · · · · · · · · · · · · · · ·		,	IVI.	AX		
PARAMETER/CONDITION	SYMBOL	-7E	-75	UNITS	NOTES	
Operating Current: Active Mode; Burst = 1; READ or WRITE; ^t RC = ^t RC (MIN)	Idd1	TBD	TBD	mA	3, 18, 19, 29	
Standby Current: Power-Down Mode; CKE = LOW; All banks idle	Idd2	TBD	TBD	mA	29	
Standby Current: Active Mode; CS# = HIGH; CKE = HIGH; All banks active after ^t RCD met; No accesses in progress	IDD3	TBD	TBD	mA	3, 12, 19, 29	
Operating Current: Burst Mode; Continuous b READ or WRITE; All banks active	urst;	Idd4	TBD	TBD	mA	3, 18, 19, 29
Auto Refresh Current: CS# = HIGH; CKE = HIGH	^t RFC = ^t RFC (MIN)	Idd5	TBD	TBD	mA	3, 12, 18, 19,
	^t RFC = 7.81µs	IDD6	TBD	TBD	mA	29,30
Self Refresh Current: CKE \leq 0.2V	Standard	Idd7	TBD	TBD	mA	4
	Low power (L)	Idd7	TBD	TBD	mA	



CAPACITANCE

(Note: 2; notes appear on page 35)

PARAMETER	SYMBOL	MIN	MAX	UNITS
Input Capacitance: CLK	Cı1	2.5	3.5	рF
Input Capacitance: All other input-only pins	Cı2	2.5	3.8	рF
Input/Output Capacitance: DQs	Сю	4.0	6.0	pF

ELECTRICAL CHARACTERISTICS AND RECOMMENDED AC OPERATING CONDITIONS

(Notes: 5, 6, 8, 9, 11; notes appear on page 35)

AC CHARACTERISTICS			-7E	-7	-75			
PARAMETER	SYMBOL	MIN	MAX	MIN	MAX	UNITS	NOTES	
Access time from CLK (pos. edge)	CL = 3	^t AC(3)		5.4		5.4	ns	27
	CL = 2	^t AC(2)		5.4		6	ns	
Address hold time	1	^t AH	0.8		0.8		ns	
Address setup time		^t AS	1.5		1.5		ns	
CLK high-level width		^t CH	2.5		2.5		ns	
CLK low-level width		^t CL	2.5		2.5		ns	
Clock cycle time	CL = 3	^t CK(3)	7		7.5		ns	23
	CL = 2	^t CK(2)	7.5		10		ns	23
CKE hold time		^t CKH	0.8		0.8		ns	
CKE setup time		^t CKS	1.5		1.5		ns	
CS#, RAS#, CAS#, WE#, DQM hold time		^t CMH	0.8		0.8		ns	
CS#, RAS#, CAS#, WE#, DQM setup time		tCMS	1.5		1.5		ns	
Data-in hold time		^t DH	0.8		0.8		ns	
Data-in setup time		^t DS	1.5		1.5		ns	
Data-out high-impedance time	CL = 3	^t HZ(3)		5.4		5.4	ns	10
	CL = 2	^t HZ(2)		5.4		6	ns	10
Data-out low-impedance time		^t LZ	1		1		ns	
Data-out hold time (load)		tOH	2.7		2.7		ns	
Data-out hold time (no load)		^t OH _N	1.8		1.8		ns	28
ACTIVE to PRECHARGE command		^t RAS	37	120,000	44	120,000	ns	
ACTIVE to ACTIVE command period		^t RC	60		66		ns	
ACTIVE to READ or WRITE delay		^t RCD	15		20		ns	
Refresh period (8,192 rows)		^t REF		64		64	ms	
AUTO REFRESH period		^t RFC	66		66		ns	
PRECHARGE command period		^t RP	15		20		ns	
ACTIVE bank a to ACTIVE bank b comma	^t RRD	14		15		ns		
Transition time		^t T	0.3	1.2	0.3	1.2	ns	7
WRITE recovery time		tWR	1 CLK +		1 CLK +		-	24
			7ns		7.5ns			14
			14		15		ns	25
Exit SELF REFRESH to ACTIVE command		^t XSR	67		75		ns	20



512Mb: x4, x8, x16 SDRAM

AC FUNCTIONAL CHARACTERISTICS

(Notes: 5, 6, 7, 8, 9, 11; notes appear on page 35)

PARAMETER	SYMBOL	-7E	-75	UNITS	NOTES	
READ/WRITE command to READ/WRITE command		^t CCD	1	1	^t CK	17
CKE to clock disable or power-down entry mode		^t CKED	1	1	^t CK	14
CKE to clock enable or power-down exit setup mode		^t PED	1	1	^t CK	14
DQM to input data delay		^t DQD	0	0	^t CK	17
DQM to data mask during WRITEs		^t DQM	0	0	^t CK	17
DQM to data high-impedance during READs		^t DQZ	2	2	^t CK	17
WRITE command to input data delay		^t DWD	0	0	^t CK	17
Data-in to ACTIVE command		^t DAL	4	5	^t CK	15, 21
Data-in to PRECHARGE command		^t DPL	2	2	^t CK	16, 21
Last data-in to burst STOP command		^t BDL	1	1	^t CK	17
Last data-in to new READ/WRITE command		^t CDL	1	1	^t CK	17
Last data-in to PRECHARGE command		^t RDL	2	2	^t CK	16, 21
LOAD MODE REGISTER command to ACTIVE or REFRESH command	^t MRD	2	2	^t CK	26	
Data-out to high-impedance from PRECHARGE command CL = 3			3	3	^t CK	17
	CL = 2	^t ROH(2)	2	2	^t CK	17

Micron


ADVANCE

SDRAM

512Mb: x4, x8, x16

NOTES

- 1. All voltages referenced to Vss.
- 2. This parameter is sampled. VDD, VDDQ = +3.3V; f = 1 MHz, $T_A = 25^{\circ}$ C; pin under test biased at 1.4V.
- 3. IDD is dependent on output loading and cycle rates. Specified values are obtained with minimum cycle time and the outputs open.
- 4. Enables on-chip refresh and address counters.
- 5. The minimum specifications are used only to indicate cycle time at which proper operation over the full temperature range $(0^{\circ}C \le T_A \le 70^{\circ}C)$ is ensured.
- 6. An initial pause of 100µs is required after powerup, followed by two AUTO REFRESH commands, before proper device operation is ensured. (VDD and VDDQ must be powered up simultaneously. Vss and VssQ must be at same potential.) The two AUTO REFRESH command wake-ups should be repeated any time the ^tREF refresh requirement is exceeded.
- 7. AC characteristics assume ${}^{t}T = 1ns$.
- 8. In addition to meeting the transition rate specification, the clock and CKE must transit between VIH and VIL (or between VIL and VIH) in a monotonic manner.
- 9. Outputs measured at 1.5V with equivalent load:




- ^tHZ defines the time at which the output achieves the open circuit condition; it is not a reference to VOH or VOL. The last valid data element will meet ^tOH before going High-Z.
- 11. AC timing and IDD tests have VIL = 0V and VIH = 3V, with timing referenced to 1.5V crossover point. If the input transition time is longer than 1 ns, then the timing is referenced at VIL (MAX) and VIH (MIN) and no longer at the 1.5V crossover point.
- 12. Other input signals are allowed to transition no more than once every two clocks and are otherwise at valid VIH or VIL levels.

- 13. IDD specifications are tested after the device is properly initialized.
- 14. Timing actually specified by ^tCKS; clock(s) specified as a reference only at minimum cycle rate.
- 15. Timing actually specified by ^tWR plus ^tRP; clock(s) specified as a reference only at minimum cycle rate.
- 16. Timing actually specified by ^tWR.
- 17. Required clocks are specified by JEDEC functionality and are not dependent on any timing parameter.
- 18. The IDD current will increase or decrease in a proportional amount by the amount the frequency is altered for the test condition.
- 19. Address transitions average one transition every two clocks.
- 20. CLK must be toggled a minimum of two times during this period.
- 21. Based on ${}^{t}CK = 7.5ns$ for -75 and -7E.
- 22. VIH overshoot: VIH (MAX) = VDDQ + 2V for a pulse width \leq 3ns, and the pulse width cannot be greater than one third of the cycle rate. VIL undershoot: VIL (MIN) = -2V for a pulse width \leq 3ns.
- 23. The clock frequency must remain constant (stable clock is defined as a signal cycling within timing constraints specified for the clock pin) during access or precharge states (READ, WRITE, including ^tWR, and PRECHARGE commands). CKE may be used to reduce the data rate.
- 24. Auto precharge mode only. The precharge timing budget (^tRP) begins 7.5ns/7ns after the first clock delay, after the last WRITE is executed.
- 25. Precharge mode only.
- 26. JEDEC and PC100, PC133 specify three clocks.
- 27. ^{t}AC for -75/-7E at CL = 3 with no load is 4.6ns and is guaranteed by design.
- 28. Parameter guaranteed by design.
- 29. For -75, CL = 3, ^tCK = 7.5ns; For -7E, CL = 2, ^tCK = 7.5ns
- 30. CKE is HIGH during refresh command period ^tRFC(MIN) else CKE is LOW. The IDD6 limit is actually a nominal value and does not result in a fail value.



512Mb: x4, x8, x16 SDRAM



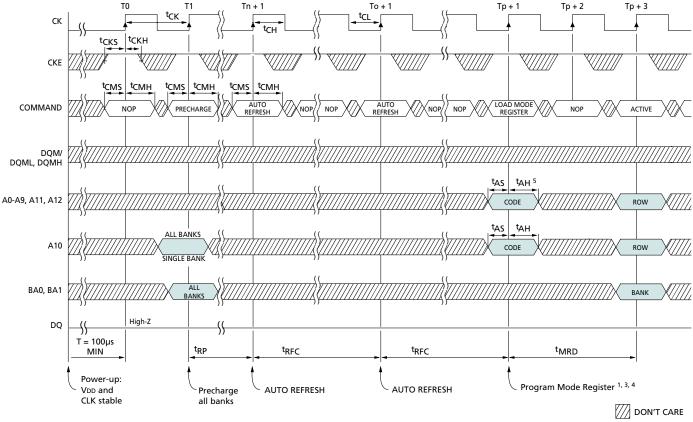

TIMING PARAMETERS

	-7E		-7	5	
SYMBOL*	MIN	MAX	MIN	MAX	UNITS
^t AH	0.8		0.8		ns
^t AS	1.5		1.5		ns
^t CH	2.5		2.5		ns
^t CL	2.5		2.5		ns
^t CK (3)	7		7.5		ns
^t CK (2)	7.5		10		ns
^t CKH	0.8		0.8		ns


	-7E		-75		
SYMBOL*	MIN	MAX	MIN	MAX	UNITS
^t CKS	1.5		1.5		ns
^t CMH	0.8		0.8		ns
^t CMS	1.5		1.5		ns
^t MRD ³	2		2		^t CK
^t RFC	66		66		ns
^t RP	15		20		ns

*CAS latency indicated in parentheses.

- 2. If CS is HIGH at clock high time, all commands applied are NOP, with CKE a "Don't Care."
 - 3. JEDEC and PC100 specify three clocks.
 - 4. Outputs are guaranteed High-Z after command is issued.
 - 5. A12 should be a LOW at ${}^{t}P + 1$.



POWER-DOWN MODE ¹

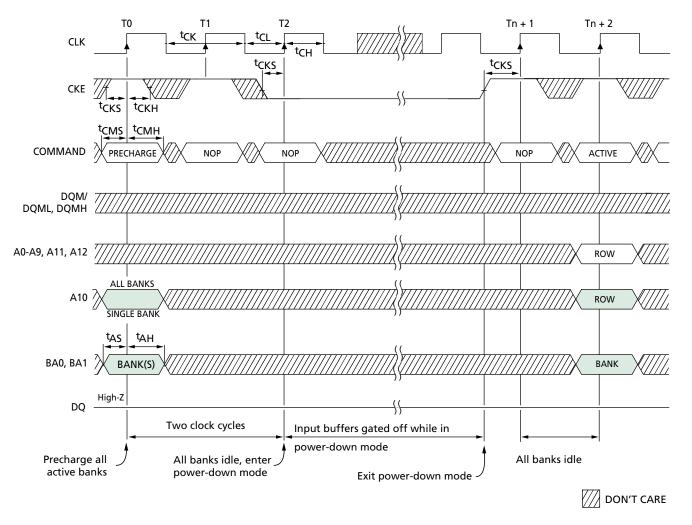

TIMING PARAMETERS

	-:	-7E		-75	
SYMBOL*	MIN	MAX	MIN	MAX	UNITS
^t AH	0.8		0.8		ns
^t AS	1.5		1.5		ns
^t CH	2.5		2.5		ns
^t CL	2.5		2.5		ns
^t CK (3)	7		7.5		ns


	-7	-7E		-75	
SYMBOL*	MIN	MAX	MIN	MAX	UNITS
^t CK (2)	7.5		10		ns
^t CKH	0.8		0.8		ns
^t CKS	1.5		1.5		ns
^t CMH	0.8		0.8		ns
^t CMS	1.5		1.5		ns

*CAS latency indicated in parentheses.

NOTE: 1. Violating refresh requirements during power-down may result in a loss of data.



512Mb: x4, x8, x16 SDRAM

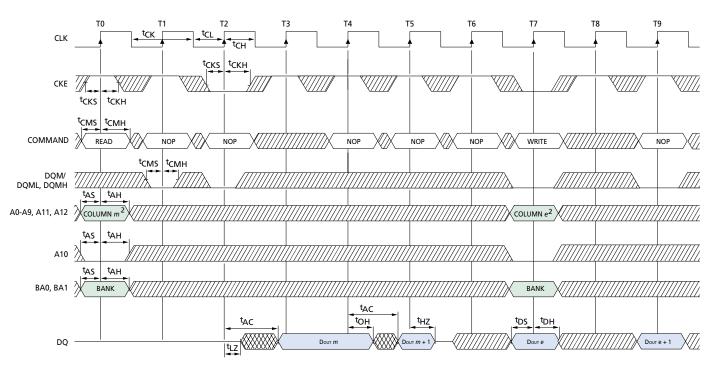

CLOCK SUSPEND MODE¹

DON'T CARE

TIMING PARAMETERS

	-7E		-75		
SYMBOL*	MIN	MAX	MIN	MAX	UNITS
^t AC (3)		5.4		5.4	ns
^t AC (2)		5.4		6	ns
^t AH	0.8		0.8		ns
^t AS	1.5		1.5		ns
^t CH	2.5		2.5		ns
^t CL	2.5		2.5		ns
^t CK (3)	7		7.5		ns
^t CK (2)	7.5		10		ns
^t CKH	0.8		0.8		ns

	-7E		-75		
SYMBOL*	MIN	MAX	MIN	MAX	UNITS
^t CKS	1.5		1.5		ns
^t CMH	0.8		0.8		ns
^t CMS	1.5		1.5		ns
^t DH	0.8		0.8		ns
^t DS	1.5		1.5		ns
^t HZ (3)		5.4		5.4	ns
^t HZ (2)		5.4		6	ns
^t LZ	1		1		ns
^t OH	2.7		2.7		ns


*CAS latency indicated in parentheses.

NOTE: 1. For this example, the burst length = 2, the CAS latency = 3, and AUTO PRECHARGE is disabled. 2. x16: A11 and A12 = "Don't Care"

x8: A12 = "Don't Care"

Micron

512Mb: x4, x8, x16 SDRAM

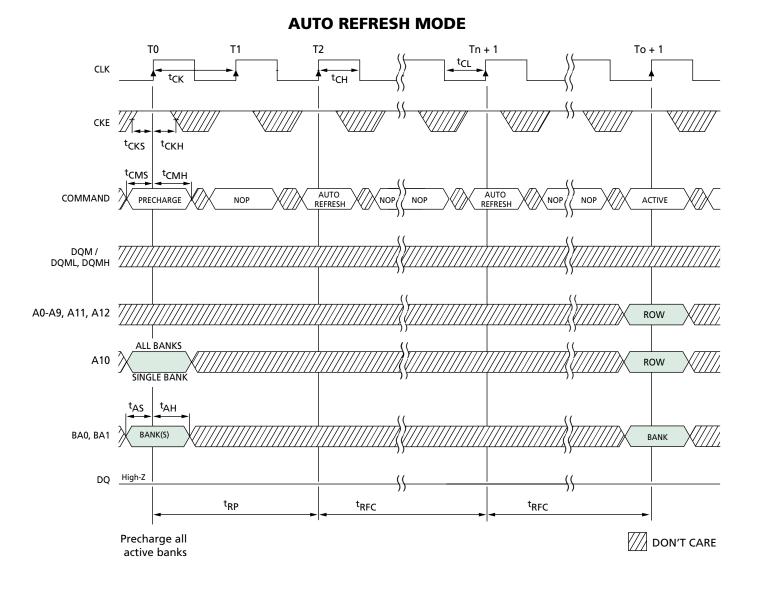

TIMING PARAMETERS

	-7E		-75		
SYMBOL*	MIN	MAX	MIN	MAX	UNITS
^t AH	0.8		0.8		ns
^t AS	1.5		1.5		ns
^t CH	2.5		2.5		ns
^t CL	2.5		2.5		ns
^t CK (3)	7		7.5		ns
^t CK (2)	7.5		10		ns


	-7E		-75		
SYMBOL*	MIN	MAX	MIN	MAX	UNITS
^t CKH	0.8		0.8		ns
^t CKS	1.5		1.5		ns
^t CMH	0.8		0.8		ns
^t CMS	1.5		1.5		ns
^t RFC	66		66		ns
^t RP	15		20		ns

SDRAM

<u>512Mb: x4, x8, x16</u>



SELF REFRESH MODE

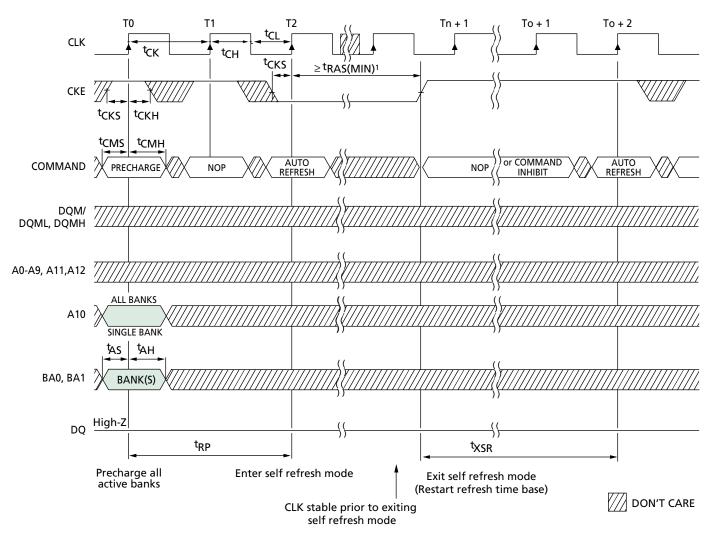

TIMING PARAMETERS

	-7E		-75		
SYMBOL*	MIN	MAX	MIN	MAX	UNITS
^t AH	0.8		0.8		ns
^t AS	1.5		1.5		ns
^t CH	2.5		2.5		ns
^t CL	2.5		2.5		ns
^t CK (3)	7		7.5		ns
^t CK (2)	7.5		10		ns
^t CKH	0.8		0.8		ns

	-7E		-75		
SYMBOL*	MIN	MAX	MIN	MAX	UNITS
^t CKS	1.5		1.5		ns
^t CMH	0.8		0.8		ns
^t CMS	1.5		1.5		ns
^t RAS	37	120,000	44	120,000	ns
^t RP	15		20		ns
^t XSR	67		75		ns

*CAS latency indicated in parentheses.

NOTES: 1. No maximum time limit for Self Refresh. ^tRAS(MAX) applies to non-Self Refresh mode. 2. ^tXSR requires minimum of two clocks regardless of frequency or timing.

SDRAM

<u>512Mb: x4, x8, x16</u>



Т2 Т3 Т4 Т5 Т6 Τ7 Т8 то Τ1 ţСК ^tCL CLK [▲]t_{CH} ^tCKH ^tCKS CKE V//// CMS ^tCMH COMMAND 2 PRECHARGE ACTIVE NOP READ NOP NOP NOP NOP ACTIVE ^tCMS ^tCMH DQM/ DQML, DQMH tAS ^tAH A0-A9, A11, A12 🤇 ROW COLUMN m2 ROW tAS tдн ALL BANKS A10 2 ROW ROW $/\lambda$ SINGLE BANK DISABLE AUTO PRECHARGE ţАН tAS BA0, BA1 BANK BANK BANK BANK ^tAC ^tAC †AC tон ^tAC ţОН ^tон ţОН DQ DOUT m Dout m + 1 , Dout m + 2 Dout *m* + 3 tLZ ŧнz ^tRCD CAS Latency ^tRP ^tRAS ^tRC

READ – WITHOUT AUTO PRECHARGE ¹

DON'T CARE

TIMING PARAMETERS

	-7E		-75		
SYMBOL*	MIN	MAX	MIN	MAX	UNITS
^t AC (3)		5.4		5.4	ns
^t AC (2)		5.4		6	ns
^t AH	0.8		0.8		ns
^t AS	1.5		1.5		ns
^t CH	2.5		2.5		ns
^t CL	2.5		2.5		ns
^t CK (3)	7		7.5		ns
^t CK (2)	7.5		10		ns
^t CKH	0.8		0.8		ns
^t CKS	1.5		1.5		ns

	-7E		-75		
SYMBOL*	MIN	MAX	MIN	MAX	UNITS
^t CMH	0.8		0.8		ns
^t CMS	1.5		1.5		ns
^t HZ (3)		5.4		5.4	ns
^t HZ (2)		5.4		6	ns
^t LZ	1		1		ns
^t OH	2.7		2.7		ns
^t RAS	37	120,000	44	120,000	ns
^t RC	60		66		ns
^t RCD	15		20		ns
^t RP	15		20		ns

- **NOTE:** 1. For this example, the burst length = 4, the CAS latency = 2, and the READ burst is followed by a "manual" PRECHARGE.
 - 2. x16: A11 and A12 = "Don't Care" x8: A12 = "Don't Care"

ADVANCE 512Mb: x4, x8, x16 SDRAM



READ – WITH AUTO PRECHARGE ¹ то T2 Т3 Τ4 T5 Т6 Τ7 Т8 T1 ^tCK ťCL CLK tсн tcks tскн ске 🎢 ^tCMH CMS COMMAND NOP READ NOP NOP ACTIVE NOP NOP NOP ACTIVE ^tCMS ^tCMH DQM/ DQML, DQMH tAS ţАН A0-A9, A11, A12 👌 COLUMN m2 ROW ROW ^tAS ţАН ENABLE AUTO PRECHARGE A10 (ROW ROW tAS ţАН BAO, BA1 BANK BANK BANK ^tAC tAC tAC ^tAC tон tон tон tон DQ DOUT m Dout m + 1 Dout m + 2 Dout m + 3 tLZ

CAS Latency

DON'T CARE W UNDEFINED

tHZ

TIMING PARAMETERS

	-7E		-75		
SYMBOL*	MIN	MAX	MIN	MAX	UNITS
^t AC (3)		5.4		5.4	ns
^t AC (2)		5.4		6	ns
^t AH	0.8		0.8		ns
^t AS	1.5		1.5		ns
^t CH	2.5		2.5		ns
^t CL	2.5		2.5		ns
^t CK (3)	7		7.5		ns
^t CK (2)	7.5		10		ns
^t CKH	0.8		0.8		ns
^t CKS	1.5		1.5		ns

^tRCD

tRAS ^tRC

	-7E		-75		
SYMBOL*	MIN	MAX	MIN	MAX	UNITS
^t CMH	0.8		0.8		ns
^t CMS	1.5		1.5		ns
^t HZ (3)		5.4		5.4	ns
^t HZ (2)		5.4		6	ns
^t LZ	1		1		ns
tOH	2.7		2.7		ns
^t RAS	37	120,000	44	120,000	ns
^t RC	60		66		ns
^t RCD	15		20		ns
^t RP	15		20		ns

t_{RP}


*CAS latency indicated in parentheses.

NOTE: 1. For this example, the burst length = 4, and the CAS latency = 2. 2. x16: A11 and A12 = "Don't Care"

x8: A12 = "Don't Care"



512Mb: x4, x8, x16 SDRAM

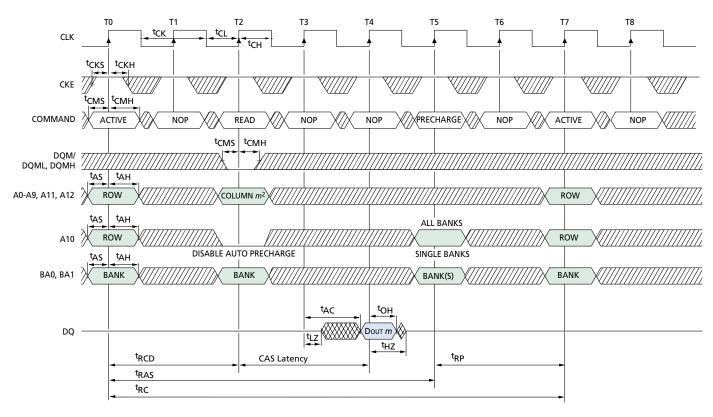

SINGLE READ – WITHOUT AUTO PRECHARGE ¹

DON'T CARE

TIMING PARAMETERS


	-7E		-75		
SYMBOL*	MIN	MAX	MIN	MAX	UNITS
^t AC (3)		5.4		5.4	ns
^t AC (2)		5.4		6	ns
^t AH	0.8		0.8		ns
^t AS	1.5		1.5		ns
^t CH	2.5		2.5		ns
^t CL	2.5		2.5		ns
^t CK (3)	7		7.5		ns
^t CK (2)	7.5		10		ns
^t CKH	0.8		0.8		ns
^t CKS	1.5		1.5		ns

	-7E		-75		
SYMBOL*	MIN	MAX	MIN	MAX	UNITS
^t CMH	0.8		0.8		ns
^t CMS	1.5		1.5		ns
^t HZ (3)		5.4		5.4	ns
^t HZ (2)		5.4		6	ns
^t LZ	1		1		ns
^t OH	2.7		2.7		ns
^t RAS	37	120,000	44	120,000	ns
^t RC	60		66		ns
^t RCD	15		20		ns
^t RP	15		20		ns

- **NOTE:** 1. For this example, the burst length = 1, the CAS latency = 2, and the READ burst is followed by a "manual" PRECHARGE.
 - 2. x16: A11 and A12 = "Don't Care" x8: A12 = "Don't Care"



512Mb: x4, x8, x16 SDRAM

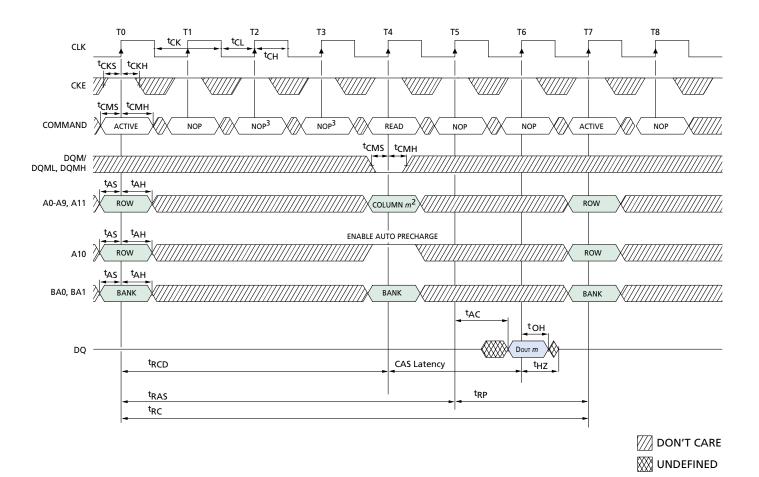

SINGLE READ – WITH AUTO PRECHARGE ¹

TIMING PARAMETERS

	-7E		-75		
SYMBOL*	MIN	MAX	MIN	MAX	UNITS
^t AC (3)		5.4		5.4	ns
^t AC (2)		5.4		6	ns
^t AH	0.8		0.8		ns
^t AS	1.5		1.5		ns
^t CH	2.5		2.5		ns
^t CL	2.5		2.5		ns
^t CK (3)	7		7.5		ns
^t CK (2)	7.5		10		ns
^t CKH	0.8		0.8		ns
^t CKS	1.5		1.5		ns


	-7E		-75		
SYMBOL*	MIN	MAX	MIN	MAX	UNITS
^t CMH	0.8		0.8		ns
^t CMS	1.5		1.5		ns
^t HZ (3)		5.4		5.4	ns
^t HZ (2)		5.4		6	ns
^t LZ	1		1		ns
tOH	2.7		2.7		ns
^t RAS	37	120,000	44	120,000	ns
^t RC	60		66		ns
^t RCD	15		20		ns
^t RP	15		20		ns

*CAS latency indicated in parentheses.

NOTE: 1. For this example, the burst length = 1, and the CAS latency = 2.

- 2. x16: A11 and A12 = "Don't Care"
 - x8: A12 = "Don't Care"
- 3. READ command not allowed else ^tRAS would be violated



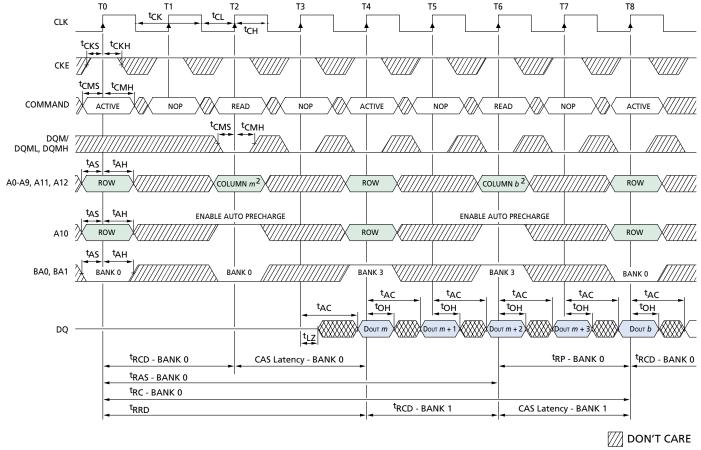

TIMING PARAMETERS

	-7E		-75		
SYMBOL*	MIN	MAX	MIN	MAX	UNITS
^t AC (3)		5.4		5.4	ns
^t AC (2)		5.4		6	ns
^t AH	0.8		0.8		ns
^t AS	1.5		1.5		ns
^t CH	2.5		2.5		ns
^t CL	2.5		2.5		ns
^t CK (3)	7		7.5		ns
^t CK (2)	7.5		10		ns
^t CKH	0.8		0.8		ns
^t CKS	1.5		1.5		ns

	-7E		-75		
SYMBOL*	MIN	MAX	MIN	MAX	UNITS
^t CMH	0.8		0.8		ns
^t CMS	1.5		1.5		ns
^t LZ	1		1		ns
tOH	2.7		2.7		ns
^t RAS	37	120,000	44	120,000	ns
^t RC	60		66		ns
^t RCD	15		20		ns
^t RP	15		20		ns
^t RRD	14		15		ns


*CAS latency indicated in parentheses.

NOTE: 1. For this example, the burst length = 4, and the CAS latency = 2. 2. x16: A11 and A12 = "Don't Care"

x8: A12 = "Don't Care"





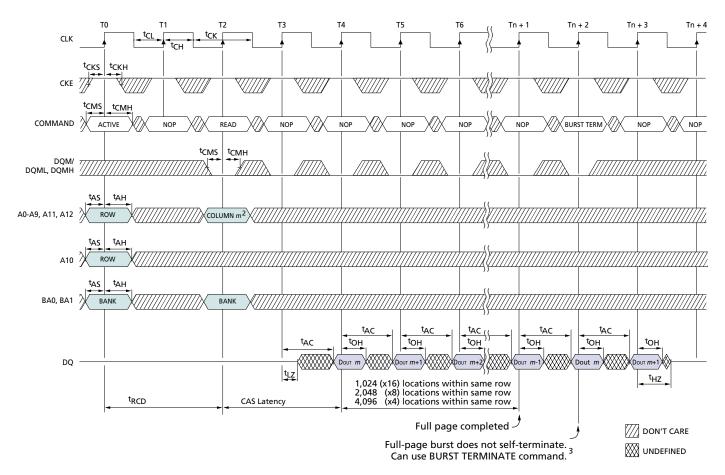

TIMING PARAMETERS

	-7E		-75		
SYMBOL*	MIN	MAX	MIN	MAX	UNITS
^t AC (3)		5.4		5.4	ns
^t AC (2)		5.4		6	ns
^t AH	0.8		0.8		ns
^t AS	1.5		1.5		ns
^t CH	2.5		2.5		ns
^t CL	2.5		2.5		ns
^t CK (3)	7		7.5		ns
^t CK (2)	7.5		10		ns
^t CKH	0.8		0.8		ns

-7E -75 SYMBOL* MIN MAX MIN MAX UNITS ^tCKS 1.5 1.5 ns ^tCMH 0.8 0.8 ns ^tCMS 1.5 1.5 ns ^tHZ (3) 5.4 5.4 ns ^tHZ (2) 5.4 6 ns ^tLZ 1 1 ns ^tOH 2.7 2.7 ns ^tRCD 15 20 ns

- **NOTE:** 1. For this example, the CAS latency = 2. 2. x16: A11 and A12 = "Don't Care"
 - x8: A12 = "Don't Care"
 - 3. Page left open; no ^tRP.



т0 Т1 Т2 T3 Т4 Т5 Τ6 Τ7 Т8 ^tск ^tCL CLK ^tсн tcks | tckh ске 7/ \///// V//// ^tCM<u>H</u> tcms COMMAND ACTIVE NOP READ NOP NOP NOP NOP NOP NOP ^tCMS ^tСМН DQM/ DQML, DQMH tАн tas A0-A9, A11, A12 👌 ROW COLUMN m² tан tAS ENABLE AUTO PRECHARGE A10 2 ROW DISABLE AUTO PRECHARGE tAS ţАН BA0, BA1 2 BANK BANK ^tAC tон tон ^tAC ^tAC tон DQ Dout m Dout *m* + 2 Dout *m* + 3 ^tLZ tHZ ťLΖ tHZ CAS Latency ^tRCD DON'T CARE

W UNDEFINED

TIMING PARAMETERS

	-7E		-75		
SYMBOL*	MIN	MAX	MIN	MAX	UNITS
^t AC (3)		5.4		5.4	ns
^t AC (2)		5.4		6	ns
^t AH	0.8		0.8		ns
^t AS	1.5		1.5		ns
^t CH	2.5		2.5		ns
^t CL	2.5		2.5		ns
^t CK (3)	7		7.5		ns
^t CK (2)	7.5		10		ns
^t CKH	0.8		0.8		ns

	-7E		-7		
SYMBOL*	MIN	MAX	MIN	MAX	UNITS
^t CKS	1.5		1.5		ns
^t CMH	0.8		0.8		ns
^t CMS	1.5		1.5		ns
^t HZ (3)		5.4		5.4	ns
^t HZ (2)		5.4		6	ns
^t LZ	1		1		ns
^t OH	2.7		2.7		ns
^t RCD	15		20		ns

READ – DQM OPERATION ¹

- **NOTE:** 1. For this example, the burst length = 4, and the CAS latency = 2.
 - 2. x16: A11 and A12 = "Don't Care"
 - x8: A12 = "Don't Care"

SDRAM

<u>512Mb: x4, x8, x16</u>



Т3 Т4 T5 T7 Τ0 T1 T2 T6 Τ8 Т9 ^tCK ^tCL CLK ^tсн ^tCKS | ^tCKH ске 🎢 \// tcms [‡]СМН COMMAND ACTIVE NOP WRITE NOP NOP NOP NOP PRECHARGE NOP ACTIVE tCMS tCMH DQM/ DQML, DQMH tАн A0-A9, A11, A12 ROW ROW t_{АН} t⊿ς ALL BANKs A10 ROW ROW DISABLE AUTO PRECHARGE SINGLE BANK t_{AS} t_{AH} BA0, BA1 BANK BANK BANK BANK t_{DS} ^tDH t_{DS} ^tDH t_{DS} ^tDH t_{DS} ^tDH dq 7/////// Din m DIN *m* + 1 DIN *m* + 2 DIN *m* + 3 ^tRCD ^tWR² t_{RP} ^tRAS ^tRC

WRITE – WITHOUT AUTO PRECHARGE¹

DON'T CARE

TIMING PARAMETERS

	-7E		-75		
SYMBOL*	MIN	MAX	MIN	MAX	UNITS
^t AH	0.8		0.8		ns
^t AS	1.5		1.5		ns
^t CH	2.5		2.5		ns
^t CL	2.5		2.5		ns
^t CK (3)	7		7.5		ns
^t CK (2)	7.5		10		ns
^t CKH	0.8		0.8		ns
^t CKS	1.5		1.5		ns
^t CMH	0.8		0.8		ns

	-7E		-75		
SYMBOL*	MIN	MAX	MIN	MAX	UNITS
^t CMS	1.5		1.5		ns
^t DH	0.8		0.8		ns
^t DS	1.5		1.5		ns
^t RAS	37	120,000	44	120,000	ns
^t RC	60		66		ns
^t RCD	15		20		ns
^t RP	15		20		ns
^t WR	14		15		ns

*CAS latency indicated in parentheses.

NOTE: 1. For this example, the burst length = 4, and the WRITE burst is followed by a "manual" PRECHARGE.

2. 14ns to 15ns is required between <DIN m> and the PRECHARGE command, regardless of frequency.

3. x16: A11 and A12 = "Don't Care"

512Mb: x4, x8, x16 SDRAM



т0 Т1 T2 Т3 Т4 T5 T6 T7 Т8 Т9 tск ^tCL CLK ^tCH tскн ^tCKS ске 🎢 V//// \//// V//// \//// V//// V//// tсмs ţсмн command \rangle WRITE ACTIVE ** ACTIVE NOP NOP NOP NOP NOP NOP NOP ^tCMS ^tCMH DQM/ DQML, DQMH ¥// t_{AS} t_{АН} A0-A9, A11, A12 ROW ROW K////// t_{AH} t_{AS} ENABLE AUTO PRECHARGE A10 $\nabla \Pi$ ROW ROW t_{АН} t_{AS} BA0, BA1 🆄 BANK BANK BANK ^tDH t_{DS} ^tDH t_{DS} ^tDH t_{DS} ^tDH t_{DS} DQ 7/// DIN m DIN m + 1DIN *m* + 2 DIN m + 3 ^tRCD twr ^tRP t_{RAS} ^tRC

WRITE – WITH AUTO PRECHARGE ¹

DON'T CARE

TIMING PARAMETERS


	-7E		-75		
SYMBOL*	MIN	MAX	MIN	MAX	UNITS
^t AH	0.8		0.8		ns
^t AS	1.5		1.5		ns
^t CH	2.5		2.5		ns
^t CL	2.5		2.5		ns
^t CK (3)	7		7.5		ns
^t CK (2)	7.5		10		ns
^t CKH	0.8		0.8		ns
^t CKS	1.5		1.5		ns
tCMH	0.8		0.8		ns

	-7E		-75		
SYMBOL*	MIN	MAX	MIN	MAX	UNITS
tCMS	1.5		1.5		ns
^t DH	0.8		0.8		ns
^t DS	1.5		1.5		ns
^t RAS	37	120,000	44	120,000	ns
^t RC	60		66		ns
^t RCD	15		20		ns
^t RP	15		20		ns
^t WR	1 CLK + 7ns		1 CLK + 7.5ns		-
	,,,,,		7.5.15		

- **NOTE:** 1. For this example, the burst length = 4. 2. x16: A11 and A12 = "Don't Care"
 - x8: A12 = "Don't Care"



512Mb: x4, x8, x16 SDRAM

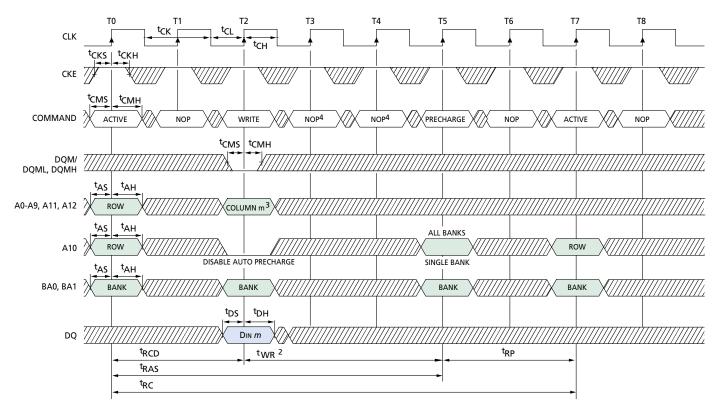

SINGLE WRITE – WITHOUT AUTO PRECHARGE¹

DON'T CARE

TIMING PARAMETERS


	-7E		-75		
SYMBOL*	MIN	MAX	MIN	MAX	UNITS
^t AH	0.8		0.8		ns
^t AS	1.5		1.5		ns
^t CH	2.5		2.5		ns
^t CL	2.5		2.5		ns
^t CK (3)	7		7.5		ns
^t CK (2)	7.5		10		ns
^t CKH	0.8		0.8		ns
^t CKS	1.5		1.5		ns
^t CMH	0.8		0.8		ns

	-7E		-75		
SYMBOL*	MIN	MAX	MIN	MAX	UNITS
^t CMS	1.5		1.5		ns
^t DH	0.8		0.8		ns
^t DS	1.5		1.5		ns
^t RAS	37	120,000	44	120,000	ns
^t RC	60		66		ns
^t RCD	15		20		ns
^t RP	15		20		ns
tWR	14		15		ns

- **NOTE:** 1. For this example, the burst length = 1, and the WRITE burst is followed by a "manual" PRECHARGE.
 - 2. 14ns to 15ns is required between <DIN m> and the PRECHARGE command, regardless of frequency.
 - 3. x16: A11 and A12 = "Don't Care"
 - x8: A12 = "Don't Care"
 - 4. PRECHARGE command not allowed else ^tRAS would be violated



512Mb: x4, x8, x16 SDRAM

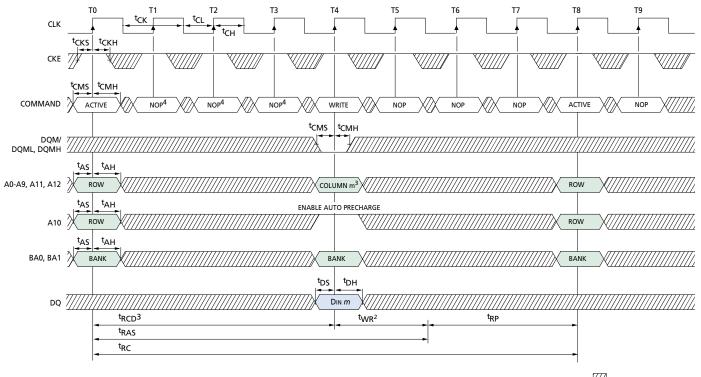

SINGLE WRITE – WITH AUTO PRECHARGE ¹

DON'T CARE


TIMING PARAMETERS

	-7E		-75		
SYMBOL*	MIN	MAX	MIN	MAX	UNITS
^t AH	0.8		0.8		ns
^t AS	1.5		1.5		ns
^t CH	2.5		2.5		ns
^t CL	2.5		2.5		ns
^t CK (3)	7		7.5		ns
^t CK (2)	7.5		10		ns
^t CKH	0.8		0.8		ns
^t CKS	1.5		1.5		ns
^t CMH	0.8		0.8		ns

-7E -75 SYMBOL* MIN MAX MIN MAX UNITS ^tCMS 1.5 1.5 ns ^tDH 0.8 0.8 ns ^tDS 1.5 1.5 ns ^tRAS 37 120,000 44 120,000 ns tRC 60 66 ns ^tRCD 20 15 ns ^tRP 15 20 ns tWR 1 CLK + 1 CLK + ns 7ns 7ns

- **NOTE:** 1. For this example, the burst length = 1, and the WRITE burst is followed by a "manual" PRECHARGE.
 - 2. 14ns to 15ns is required between <DIN m> and the PRECHARGE command, regardless of frequency.
 - 3. x16: A11 and A12 = "Don't Care"
 - x8: A12 = "Don't Care"
 - 4. WRITE command not allowed else ^tRAS would be violated



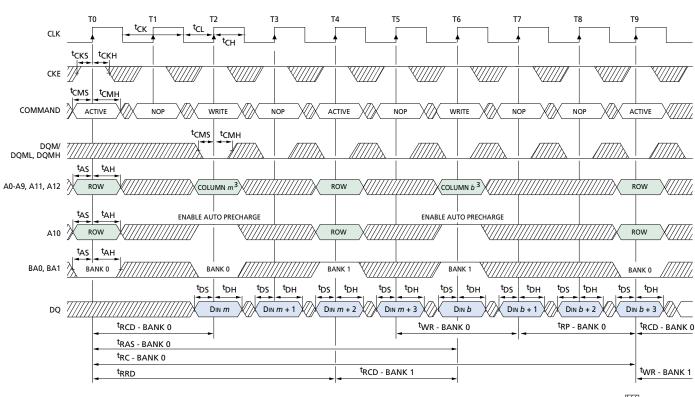

ALTERNATING BANK WRITE ACCESSES¹

DON'T CARE

TIMING PARAMETERS


	-7E		-75		
SYMBOL*	MIN	MAX	MIN	MAX	UNITS
^t AH	0.8		0.8		ns
^t AS	1.5		1.5		ns
^t CH	2.5		2.5		ns
^t CL	2.5		2.5		ns
^t CK (3)	7		7.5		ns
^t CK (2)	7.5		10		ns
^t СКН	0.8		0.8		ns
^t CKS	1.5		1.5		ns
^t CMH	0.8		0.8		ns

	-7E		-75		
SYMBOL*	MIN	MAX	MIN	MAX	UNITS
^t CMS	1.5		1.5		ns
^t DH	0.8		0.8		ns
^t DS	1.5		1.5		ns
^t RAS	37	120,000	44	120,000	ns
^t RC	60		66		ns
^t RCD	15		20		ns
^t RP	15		20		ns
^t RRD	14		15		ns
^t WR	Note 2		Note 2		ns

- **NOTE:** 1. For this example, the burst length = 4.
 - 2. Requires one clock plus time (7ns to 7.5ns) with auto precharge or 14ns to 15ns with PRECHARGE.
 - 3. x16: A11 and A12 = "Don't Care" x8: A12 = "Don't Care"



WRITE – FULL-PAGE BURST

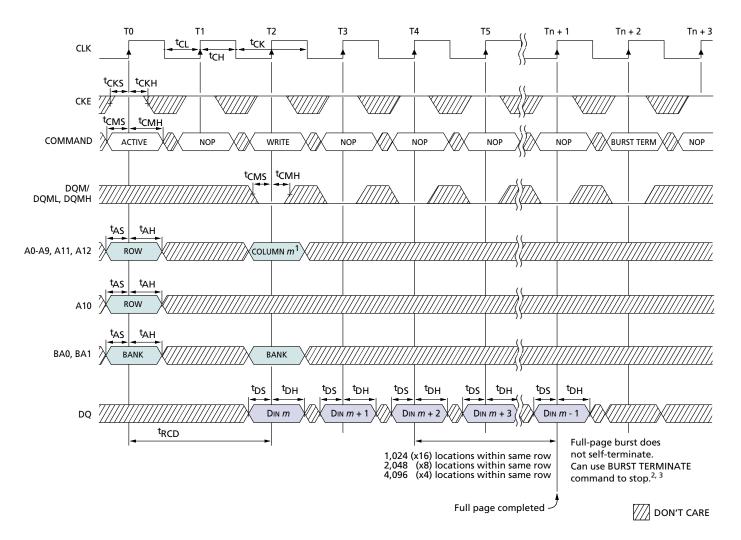

TIMING PARAMETERS

	-7E		-75		
SYMBOL*	MIN	MAX	MIN	MAX	UNITS
^t AH	0.8		0.8		ns
^t AS	1.5		1.5		ns
^t CH	2.5		2.5		ns
^t CL	2.5		2.5		ns
^t CK (3)	7		7.5		ns
^t CK (2)	7.5		10		ns
^t CKH	0.8		0.8		ns

*CAS latency indicated in parentheses.

NOTE: 1. x16: A11 and A12 = "Don't Care"

- x8: A12 = "Don't Care"
- 2. ^tWR must be satisfied prior to PRECHARGE command.
- 3. Page left open; no ^tRP.

	-7E		-75			
SYMBOL*	MIN	MAX	MIN	MAX	UNITS	
^t CKS	1.5		1.5		ns	
^t CMH	0.8		0.8		ns	
^t CMS	1.5		1.5		ns	
^t DH	0.8		0.8		ns	
^t DS	1.5		1.5		ns	
^t RCD	15		20		ns	



WRITE - DQM OPERATION ¹ T2 ΤЗ Т4 т0 Τ1 Т5 Т6 Τ7 ^tCK tCL CLK ^tCH ^tCKH tcks ске 🛛 ^tCMH ^tCMS COMMAND ACTIVE NOP WRITE NOP NOP NOP NOP NOP tcms ^tCMH DQM/ DQML, DQMH tAS tАн A0-A9, A11, A12 ROW COLUMN m² ^tAH tas ENABLE AUTO PRECHARGE A10 / ROW $\langle | | |$ DISABLE AUTO PRECHARGE ^tAH t_{AS} BA0, BA1 BANK BANK ^tDS ^tDH ^tDS ťDн t_{DS} ^tDH DQ // DIN m DIN m + 2DIN m + 3

DON'T CARE

TIMING PARAMETERS

	-7E		-75		
SYMBOL*	MIN	MAX	MIN	MAX	UNITS
^t AH	0.8		0.8		ns
^t AS	1.5		1.5		ns
^t CH	2.5		2.5		ns
^t CL	2.5		2.5		ns
^t CK (3)	7		7.5		ns
^t CK (2)	7.5		10		ns
^t CKH	0.8		0.8		ns

^tRCD


	-7E		-75		
SYMBOL*	MIN	MAX	MIN	MAX	UNITS
^t CKS	1.5		1.5		ns
^t CMH	0.8		0.8		ns
^t CMS	1.5		1.5		ns
^t DH	0.8		0.8		ns
^t DS	1.5		1.5		ns
^t RCD	15		20		ns

- **NOTE:** 1. For this example, the burst length = 4. 2. x16: A11 and A12 = "Don't Care"
 - x8: A12 = "Don't Care"





54-PIN PLASTIC TSOP (400 mil)

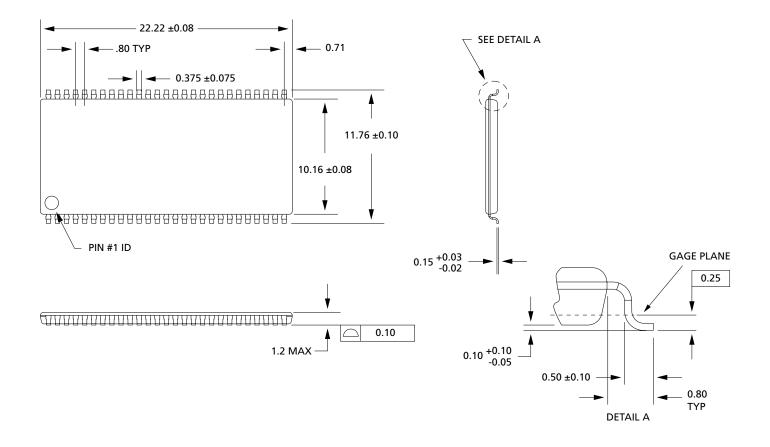

NOTE: 1. All dimensions in millimeters.

2. Package width and length do not include mold protrusion; allowable mold protrusion is 0.25mm per side.



8000 S. Federal Way, P.O. Box 6, Boise, ID 83707-0006, Tel: 208-368-3900 E-mail: prodmktg@micron.com, Internet: http://www.micron.com, Customer Comment Line: 800-932-4992 Micron is a registered trademark and the Micron logo and M logo are trademarks of Micron Technology, Inc.