
Long-distance Photoelectric Sensor with Built-in Amplifier

E3G

CSM_E3G_DS_E_5_1

Line of Long-distance Photoelectric Sensors for Large Workpieces Includes Retroreflective Models with Sensing Distance of 10 m and Distance Settings Up to 2 m.

- Compact Retro-reflective models require less wiring and less space with a sensing distance as long as 10 m.
- Distance-setting models feature a teaching function.
- Stability indicator shows at a glance when operating conditions are stable.
- Relay and selectable NPN/PNP transistor outputs provided.
- Cable, standard connector, and terminal board models available.



Ordering Information



Sensors (Refer to <i>Dimensions</i> on page 10.)							Red ligh	nt Infrared light
	Annoar			Timer			Model	
Sensing method	Appear- ance	Connection method	Ser	Sensing distance		function	NPN/PNP selector	Relay output
		Pre-wired (2 m)					E3G-R13 2M	
Betro-reflective	Connector (M12)	1 0 m		10 m		E3G-R17		
(with MSR function)	E39-R2 (provided)		 		500 mm)			E3G-MR19
		Terminal block	*	Yes		E3G-MR19T		
		Pre-wired (2 m)					E3G-L73 2M	
Distance-setting	↓	Connector (M12)	White p	e paper (300 × 300	× 300 mm)		E3G-L77	
		- · · · ·			📥 0.2 to 2 m			E3G-ML79
	~ _	Terminal block				Yes	1	E3G-ML79T

* Values in parentheses indicate the minimum required distance between the Sensor and Reflector.

Accessories (Order Separately)

Reflectors (Refer to Dimensions on E39-L/F39-L/E39-S/E39-R.)

Appearance	Sensing distance (typical)	Model	Minimum order	Remarks
	10 m (500 mm) (Rated value)*	E39-R2	1	Provided with the E3G-R1□/MR19(T).
	6 m (100 mm)*	E39-R1	1	

* Values in parentheses indicate the minimum required distance between the Sensor and Reflector.

Terminal Protection Cover for Side-pullout Cable (Refer to Dimensions on page 12.)

Appearance	Model	Minimum order	Applicable model	Remarks
	E39-L129	1	E3G-MR19(T) E3G-ML79(T)	Provided with rubber bushing and cap for pullout prevention in vertical direction.

Mounting Brackets (Refer to E39-L/F39-L/E39-S/E39-R)

Appearance	Model	Quantity	Applicable model	Remarks
	E39-L131	1	E3G-R1□	
	E39-L132	1	E3G-L7□	Rear-mounting use
	E39-L135	1	E3G-MR19(T)	Cable pulled out in the downward direction
	E39-L136	1	E3G-ML79(T)	

Note: Mounting Brackets are not provided with Sensors and must be purchased separately.

Sensor I/O Connectors (M12) (Refer to Dimensions on XS2.)

Cable	Арре	arance	Cab	le type	Model
Standard			2 m	Three- conductor	XS2F-D421-DC0-A
	Straight	a state	5 m		XS2F-D421-GC0-A
Standard	-		2 m		XS2F-D422-DC0-A
	L-shaped		5 m		XS2F-D422-GC0-A

Note: Refer to Introduction to Sensor I/O Connectors for details.

Ratings and Specifications


Sensing	method	Rei	tro-reflective (w	vith MSR function	on)	Distance-setting				
Item	Model	E3G-R13	E3G-R17	E3G-MR19	E3G-MR19T	E3G-L73	E3G-L77	E3G-ML79	E3G-ML79T	
Sensing o)*1 (when using		200 111101		00 x 300 mm): (200.112701	
Setting di			, (0			、	00 x 300 mm): 0			
Standard sensing o		Opaque: 80-m	m dia. min.				,			
Differentia (typical)	al travel		-			10% of setting distance				
Direction	•	Sensor: 1° to 5	°							
Reflectivi acteristics white erro	s (black/	har- ack/					1-m sensing dis	stance)		
Light sou (waveleng						Infrared LED (8	360 nm)			
Spot size			-			70 dia. max. (a	t 1-m sensing d	istance)		
Power su voltage	pply	10 to 30 VDC, ripple (p-p): 10	%	12 to 240 VDC: ripple (p-p): 10 24 to 240 VAC: 60 Hz	% max.	10 to 30 VDC, ripple (p-p): 10	% (p-p)	12 to 240 VDC±10%, ripple (p-p): 10% max. 24 to 240 VAC±10% at 50/ 60 Hz		
Current/P consump		50 mA max.		2 W max.		60 mA max.		2 W max.		
Control o	utput	Load power su 30 VDC max. Load current: 1 Residual voltag NPN output: 1. PNP output: 2. Open collector (NPN/PNP sele L.ON/D.ON sel	100 mA max. ge: 2 V max. 0 V max. output ectable)	D mA max. V max. V max. 3 A max. at 30 VDC 4 L.ON/D.ON selectable 4 Relay output: SPDT, 3 A 3 A max. at 30 VDC 4 L.ON/D.ON selectable		Load power su 30 VDC max. Load current: 1 Residual volta NPN output: 1. PNP output: 2. Open collector (NPN/PNP selu L.ON/D.ON se	100 mA max. ge: 2 V max. 0 V max. output ectable)	Relay output: SPDT, 3 A (cosφ= 1) max. at 250 VAC or 3 A max. at 30 VDC L.ON/D.ON selectable		
Life expect-	Me- chani- cal			50,000,000 operations min. (switching frequency: 18,000 operations/h)		-		50,000,000 operations min. (switching frequency: 18,000 operations/h)		
ancy (relay output)	Electri- cal			100,000 operations min. (switching frequency: 1,800 operations/h)		-		100,000 operations min. (switching frequency: 1,800 operations/h)		
Protection circuits Protection, Output short-circuit protection, Mutual interfer- ence prevention		Mutual interference preven- tion				Mutual interference preven- tion				
Response	e time	Operate or res		Operate or rese	et: 30 ms max.	Operate or res		Operate or res	et: 30 ms max.	
Sensitivit adjustme	y	One-turn adjus					ORMAL or ZON			
Timer fun	iction				ON- or OFF- delay: 0 to 5 s (adjustable)				ON- or OFF- delay: 0 to 5 s (adjustable)	
Ambient illumination (Receiver		Incandescent la Sunlight: 10,00	amp: 3,000 lx m)0 lx max.	ax.		1				
Ambient t ture range		Operating: -25	^{5°} to 55°C, Stora	ge: -30° to 70°0	C (with no icing	or condensatior	ı)			
Ambient h range	numidity	Operating: 35%	% to 85%, Storag	ge: 35% to 95%	(with no conder	isation)				
Insulation resistance	e	20 M Ω min. at	500 VDC							
Dielectric strength		1,000 VAC, 50/	/60 Hz for 1 min	2,000 VAC, 50/ 1 min.	60 Hz for	1,000 VAC, 50	/60 Hz for 1 min	2,000 VAC, 50 1 min.	/60 Hz for	
Vibration resistance		Destruction: 10) to 55 Hz, 1.5-m	nm double ampli	ude for 2 hours	s each in X, Y, and Z directions				
Shock res		Destruction: 500 m/s ² 3 times each in X, Y, and Z directions								
Degree of protection		IEC 60529 IP67 (with protective cover)								
Connectio method	on	Pre-wired (Standard length: 2 m)	Connector (M12)	Terminal block		Pre-wired (Standard length: 2 m)	Connector (M12)	Terminal block		
Weight (packed s	state)	Approx. 150 g	Approx. 50 g	Approx. 150 g			Approx. 50 g	Approx. 150 g		
mato	ase	PBT (polybutyl	ene terephthala	te)						
rial Le	ens	Mechacrylic res	sin							
Accessor	ies *2	Reflector, Adju	stment screwdri	ver, and Instruct	ion manual	Adjustment sci	rewdriver and In	struction manua	1	


*1. Values in parentheses indicate the minimum required distance between the Sensor and Reflector. *2. Mounting Brackets are sold separately.

E3G-R/MR Retro-reflective Models

Excess Gain vs. Set Distance




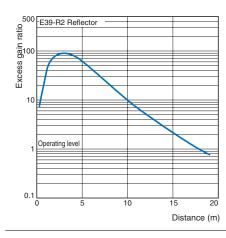

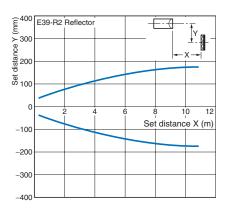


E3G-L/ML Distance-setting Models


Spot Diameter vs. Sensing Distance

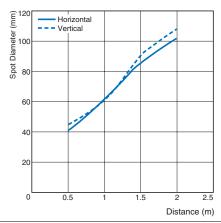


Operating Range in NORMAL Mode

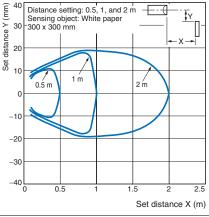


Operating Range in ZONE Mode

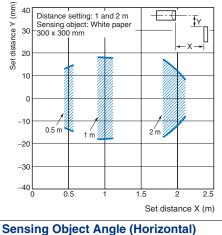

Sensing Object Size vs. Setting Distance

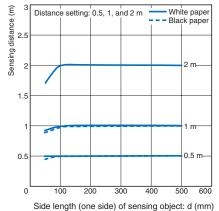


Sensing Object Angle Characteristics (Vertical)

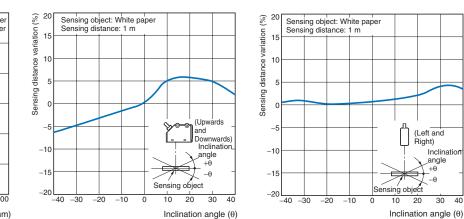




Close-range Characteristics

Sensing Distance vs. Sensing Object Material (at 1-m Setting Distance) Sensing Distance vs. Sensing Object Material (at 500-mm Setting Distance)

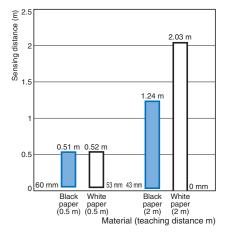

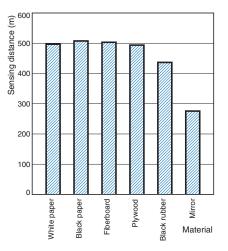

I/O Circuit Diagrams


NPN Output

Model	Operation mode	Timing charts	Operation selector	Output circuit
E3G-R13 E3G-R17	Light-ON	Incident light No incident light Operation ON indicator OFF Output ON transistor OFF Load Operate (relay) Reset	L side (L-ON)	Operation indicator (Orange) Hoto- Biectric Sensor MPN output VOrange) Hoto- Biectric Sensor MPN output VOrange) Bieck Control output VOrange) Bieck Control output VOrange) Bieck Control output VOrange) Bieck Control output VOrange) Bieck Control output VOrange) Bieck Control output VORANGE Bieck Control output VORANGE Bieck Control output VORANGE Bieck Control output VORANGE Bieck Control output VORANGE Bieck Control output VORANGE Bieck Control output VORANGE Bieck Control output VORANGE Bieck Control output VORANGE Bieck Control output VORANGE VORA
E3G-L73 E3G-L77	Dark-ON	Incident light No incident light Operation ON indicator OFF (orange) Output ON transistor OFF Load Operate (relay) Reset	D side (D-ON)	* Set the NPN or PNP selector to NPN. Connector Pin Arrangement

PNP Output

Model	Operation mode	Timing charts	Operation selector	Output circuit
E3G-R13 E3G-R17	Light-ON	Incident light No incident light Operation ON indicator OFF (orange) ON Output ON transistor OFF Load Operate (relay) Reset	L side (L-ON)	Operation Indicator (Green) Photo- Bectric Sensor circuit NPN or PNP output selector NPN output VPN outp
E3G-L73 E3G-L77	Dark-ON	Incident light No incident light Operation ON indicator OFF (orange) Output ON transistor OFF Load Operate (relay) Reset	D side (D-ON)	* Set the NPN or PNP selector to PNP. Connector Pin Arrangement

Relay Output

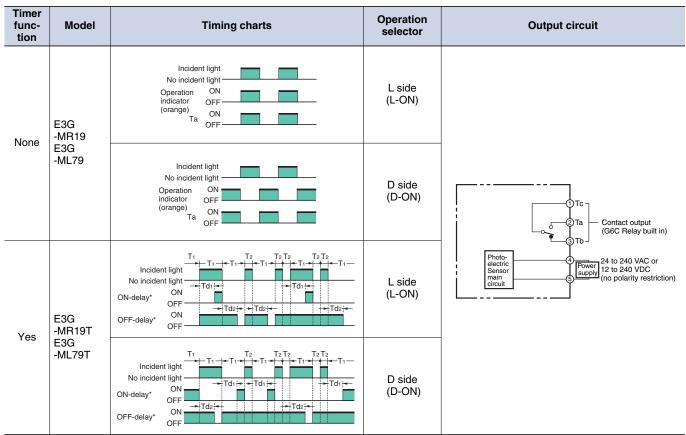


Note: Td1, Td2: Delay time (0 to 5 s)

T₁: A period longer than the delay time. T₂: A period shorter than the delay time.

T2: A period shorter than the delay time. * For ON- and OFF-delay timers, Td1 and Td2 are independently variable.

Plug (Sensor I/O Connector)



Classifi- cation	Wire color	Connector pin No.	Application
	Brown	1	Power supply (+V)
DC		2	
DC	Blue	3	Power supply (0 V)
	Black	4	Output

Note: Pin 2 is not used.


Nomenclature

Retro-reflective

E3G-R13 (Pre-wired Model) E3G-R17 (Standard Connector Model)



E3G-MR19 (Terminal Block Model) E3G-MR19T (Terminal Block Model with Timer)

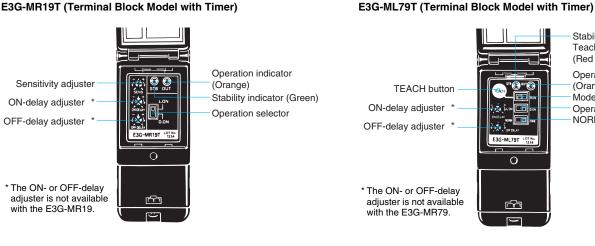

Distance-setting

E3G-L73 (Pre-wired Model) E3G-L77 (Standard Connector Model)

E3G-ML79 (Terminal Block Model)

TEACH button

Stability indicator (Green) Teaching indicator (Red and green) 3 Output selector NORMAL/ZONE selector 0

E3G-ML79T LOT N

0

ŕ

Operation indicator (Orange) Mode selector: TEACH, RUN (D-ON), RUN (L-ON)

TEACH button

Stability indicator (Green) Teaching indicator

(Red and green) Operation indicator

(Orange)

Mode selector

Operation selector NORMAL/ZONE selector

Safety Precautions

Refer to Warranty and Limitations of Liability.

WARNING

This product is not designed or rated for ensuring safety of persons either directly or indirectly. Do not use it for such purposes.



Precautions for Correct Use

Do not use the product in atmospheres or environments that exceed product ratings.

E3G-R/MR

Designing

Power Supply

A power supply with full-wave rectification can be connected to the E3G-MR19(T).

• Wiring


The tensile strength of the cable during operation should not exceed the values shown below.

Model	Tensile strength (torque)
E3G-R13 E3G-MR19(T)	50 N max.
E3G-R17	10 N max.

Adjusting

Indicators

- The following illustration indicates the operating levels of the E3G.
- Set the E3G so that it will work within the stable operation range.

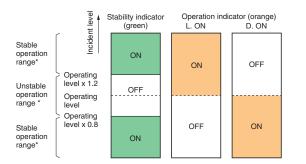

*If the operating level is set to the stable operation range, the E3G will operate with the highest reliability and without being influenced by temperature change, voltage fluctuation, dust, or setting change. If the operating level cannot be set to the stable operation range, pay close attention to environmental changes while operating the E3G.



Designing

Power Supply

A power supply with full-wave rectification can be connected to the E3G-ML79(T).

Wiring


The tensile strength of the cable during operation should not exceed the values shown below.

Model	Tensile strength (torque)
E3G-L73 E3G-ML79(T)	50 N max.
E3G-L77	10 N max.



Mounting Directions


• Make sure that the sensing side of the Sensor is parallel with the surface of each sensing object. Do not incline the Sensor towards the sensing object.




If the sensing object has a glossy surface, incline the Sensor by 5° to 10° as shown below, provided that the Sensor is not influenced by any background objects.




 If there is a mirror-like object below the Sensor, the Sensor may not be in stable operation. Therefore, incline the Sensor or keep the Sensor a distance away from the mirror-like object as shown below.



 Make sure not to install the Sensor in the incorrect direction. Refer to the following.

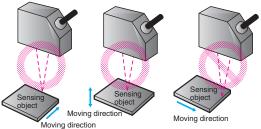

Install the Sensor as shown in the following if each sensing object greatly differs in color or material.

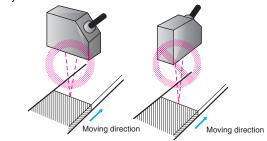

Others

EEPROM Write Errors


If a teaching data error occurs with the operation indicator flashing due to a power failure or static noise, perform the teaching operation of the Sensor again.

E3G-M□(T)


Wiring

- The cable with an external diameter of 6 to 8 mm is recommended.
- Be sure to attach the cover with screws securely in order to maintain the water- and dust-resistive properties of the product. The size of the conduit opening is PF1/2 in accordance with JIS B0202.
- Do not tighten the Terminal Protection Cover with wires pinched between the Sensor and the cover in order to maintain the waterand dust-resistive properties of the product.

Recommended Example

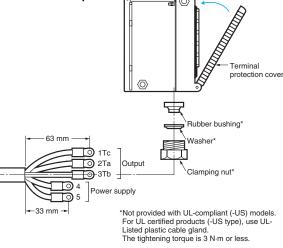

• Changing to Side-pullout Cable from Vertical-pullout Cable

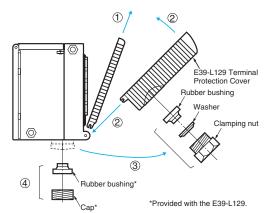

Proce- dure	Operation
1	Remove the present cover.
2	Attach the E39-L129 Terminal Protection Cover for side- pullout cable.
3	Remove the clamping nut, washer, and rubber bushing of the E3G. These are used for the side-pullout cable.
4	Attach the rubber bushing and cap provided with the E39-L129 to the E3G as replacements.

All E3G Models

Designing

Load Relay Contact

If E3G is connected to a load with contacts that spark when the load is turned OFF (e.g., a contactor or valve), the normally-closed side may be turned ON before the normally-open side is turned OFF or vice-versa. If both normally-open output and normally-closed output are used simultaneously, apply an surge suppressor to the load. Refer to *OMRON's PCB Relays Catalog* (X33) for typical examples of surge suppressors.

Wiring

Connecting and Wiring

The E3G has a built-in function to protect the E3G from load shortcircuiting. If load shortcircuiting results, the output will be turned OFF. In that case, check the wiring and turn ON the E3G again so that the short-circuit protection circuit will be reset. This function will operate if the output current flow is at least 2.0 times the rated load current. If a capacitive load is connected to the E3G, make sure that the inrush current does not exceed 1.2 times the rated load current.

Mounting

Mounting Conditions

- If Sensors are mounted face-to-face, make sure that no optical axes cross each other. Otherwise, mutual interference may result.
- Be sure to install the Sensor carefully so that the directional angle range of the Sensor will not be directly exposed to intensive light, such as sunlight, fluorescent light, or incandescent light.
- Do not strike the Photoelectric Sensor with a hammer or any other tool during the installation of the Sensor, or the Sensor will loose its water-resistive properties.
- Use M4 screws to mount the Sensor.
- When mounting the case, make sure that the tightening torque applied to each screw does not exceed 1.2 N·m.


Water Resistance

Tighten the operation cover screws and terminal block cover screws to a torque of 0.3 to 0.5 N·m in order to ensure water resistivity.

Dimensions


(Unit: mm) Tolerance class IT16 applies to dimensions in this datasheet unless otherwise specified.

Sensors Retro-reflective Models

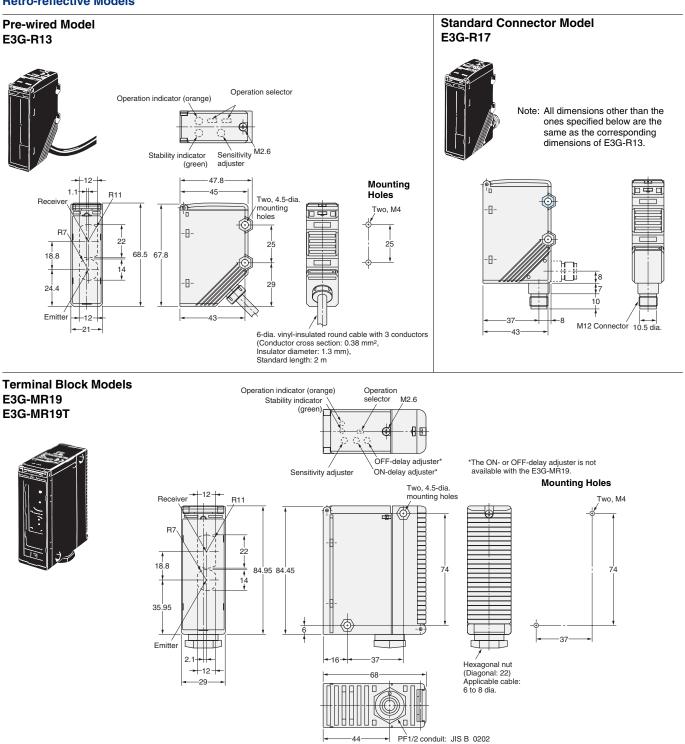


E3G


E3G

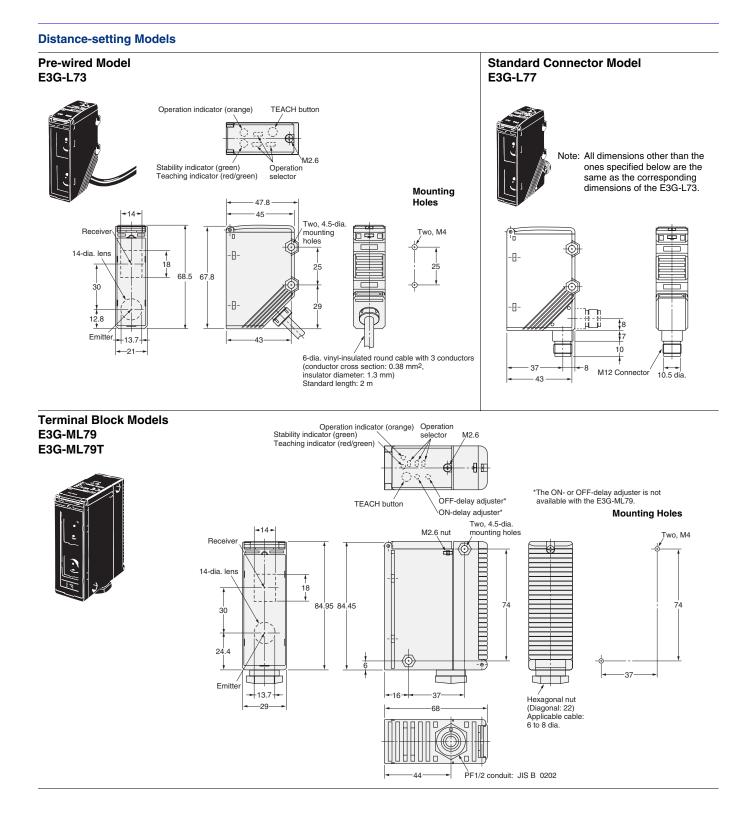

Accessories (Order Separately)

Terminal Protection Cover for Side-pullout Cable E39-L129

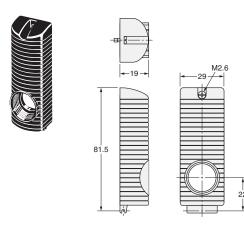

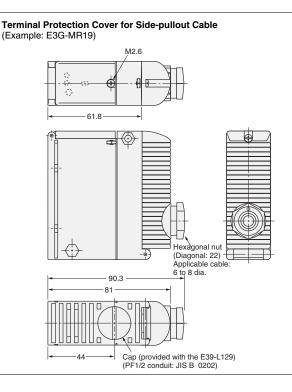

Note: 1. The cover is provided with a rubber bushing and cap to prevent the cable from being pulled out vertically.2. Refer to page 9 for the mounting method of the resolution.

product.

Reflectors

Refer to E39-L/F39-L/E39-S/E39-R for details.

Mounting Brackets

Refer to E39-L/F39-L/E39-S/E39-R for details.

Sensor I/O Connectors

Refer to Introduction to Sensor I/O Connectors for details.